# harman/kardon

# AVR340 7 X 55W 7.1 CHANNEL A/V RECEIVER

# SERVICE MANUAL



### **CONTENTS**

ESD WARNING2	TECH TIP HK2003-01	28
LEAKAGE TESTING3		
BASIC SPECIFICATIONS4	UNIT EXPLODED VIEW	32
PACKAGING5	EXPLODED VIEW PARTS LIST	33
FRONT PANEL CONTROLS6	AMP BIAS ADJUSTMENT	34
REAR PANEL CONNECTIONS9	BLOCK DIAGRAM	35
REMOTE CONTROL FUNCTIONS12	ELECTRICAL PARTS LIST	36
CONNECTIONS16	PCB DRAWINGS	80
OPERATION19		
TROUBLESHOOTING GUIDE26	SCHEMATICS	178
PROCESSOR RESET26	WIRING DIAGRAM	186
BULLETIN HK2006-0127		

harman/kardon, Inc.

250 Crossways Park Dr.

## **ELECTROSTATICALLY SENSITIVE (ES) DEVICES**

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field effect transistors and semiconductor "chip" components.

The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

- 1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
- 2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge build-up or exposure of the assembly.
- 3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
- 4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
- 5. Do not use freon-propelled chemicals. These can generate electrical change sufficient to damage ES devices.
- 6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material.)
- 7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together or your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES devices.

#### PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing.


Components identified with the IEC symbol in the parts list are special significance to safety. When replacing a component identified with in the parts list are special significance to safety. When replacing a component identified with in the replacement parts designated, or parts with the same ratings or resistance, wattage, or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

#### **SAFETY PRECAUTIONS**

The following check should be performed for the continued protection of the customer and service technician.

#### LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed o.5mA.

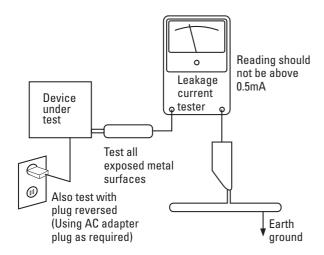

**AC Leakage Test** 

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

## AVR 340 TECHNICAL SPECIFICATIONS

**Audio Section** 

Stereo Mode

Continuous Average Power (FTC)

70 Watts per channel, 20Hz-20kHz,

@ <0.07% THD, both channels driven into 8 ohms

Seven-Channel Surround Modes Power per Individual Channel

Front L&R channels:

55 Watts per channel

@ <0.07% THD, 20Hz-20kHz into 8 ohms

Center channel:

55 Watts @ <0.07% THD, 20Hz-20kHz into 8 ohms

Surround (L & R Side, L & R Back) channels:

55 Watts per channel

@ <0.07% THD, 20Hz-20kHz into 8 ohms

Input Sensitivity/Impedance

200mV/47k ohms Linear (High-Level)

Signal-to-Noise Ratio (IHF-A) 100dB Surround System Adjacent Channel Separation

40dB Pro Logic 55dB Dolby Digital 55dB DTS

Frequency Response

@ 1W (+0dB, -3dB)10Hz - 130kHz

High Instantaneous

Current Capability (HCC) ±35 Amps

Transient Intermodulation

Distortion (TIM) Unmeasurable Slew Rate 40V/usec

**FM Tuner Section** 

Frequency Range 87.5-108.0MHz Usable Sensitivity IHF 1.3µV/13.2dBf Signal-to-Noise Ratio Mono/Stereo 70/68dB Distortion Mono/Stereo 0.2/0.3% Stereo Separation 40dB @ 1kHz ±400kHz, 70dB

Selectivity Image Rejection 80dB IF Rejection 90dB

AM Tuner Section

Frequency Range 520-1720kHz Signal-to-Noise Ratio 45dB Usable Sensitivity Loop 500 µV

1kHz, 50% Mod 0.8% Distortion Selectivity ±10kHz, 30dB

Video Section

Television Format NTSC

Input Level/Impedance 1Vp-p/75 ohms Output Level/Impedance 1Vp-p/75 ohms

Video Frequency Response (Composite and S-Video) 10Hz-8MHz (-3dB)

Video Frequency Response

(Component Video) 10Hz-50MHz (-3dB)

General

Power Requirement AC 120V/60Hz

118W idle, 890W maximum Power Consumption

(7 channels driven)

Dimensions (Product) (Shipping)

Width 17.3 inches (440mm) 21.5 inches (545mm) Height 6.6 inches (168mm) 9.9 inches (251mm) Depth 15 inches (382mm) 17.9 inches (455mm)

> (Product) (Shipping)

Weight 30.6 lb (13.9kg) 35.2 lb (16kg)

Depth measurement includes knobs, buttons and terminal connections.

Height measurement includes feet and chassis.

All features and specifications are subject to change without notice.

Harman Kardon, Harman International, Power for the Digital Revolution and Logic 7 are registered trademarks, and The Bridge and EzSet/EQ are trademarks, of Harman International Industries, Incorporated.

Dolby, Pro Logic and the double-D symbol are registered trademarks of Dolby Laboratories. Manufactured under license from Dolby Laboratories.

DTS, DTS Surround, DTS-ES, DTS 96/24 and DTS Neo:6 are registered trademarks of DTS, Inc.

VMAx is a registered trademark of Harman International Industries, Incorporated, and is an implementation of Cooper Bauck Transaural Stereo under patent license.

SACD is a trademark of Sony Electronics Inc.

iPod is a registered trademark, and Shuffle is a trademark, of Apple Computer, Inc.

**AVR340** 

BATTERY ASS'Y

REMOCON ASS'Y(ZONE2)

COVER ASS'Y

Q,ty

1

3 2 1

1

1

3

8

12

PARTS NO.

CQE1A172X

CSA1A027Z

CQX1A1027Z

CSA1A019Z RH18Z00


CQE1A260Z


CGR1A331M7H43

CGR1A332M7H43

CQE1A219Z

CPS1A676

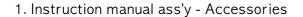

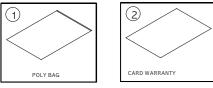



(5)

9

BATTERY ASS'Y

SHEET GUIDE

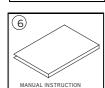

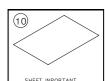






AM LOOP ANTENNA ASS'Y

3

(7)

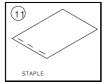

DESCRIPTION


3 SHEET, FRONT COVER

4 PAD, COVER

IMAGE BROCHURES


5 BAG, POLY

POLY BAG CARD WARRANTY

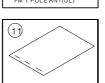


	3	Al	M LOOP ANTENNA ASS'Y	
	4	В	ATTERY	
IMAGE BROCHURES	5	В	ATTERY	
	 6	IN	STRUCTION MANUAL	
	7	FI	M 1 POL ANT(UL)	
A)	8	RI	EMOCON ASS'Y(ZONE2)	
	9	SI	HEET GUIDE	
	10	SI	HEET INPORTANT	
	11	S	TAPLE	
REMOCON TRANSMITTER ASS'Y	12	C	OVER ASS'Y	
		1	COVER A	
				_

Α	REMOCON ASS'Y	RB30L00	1

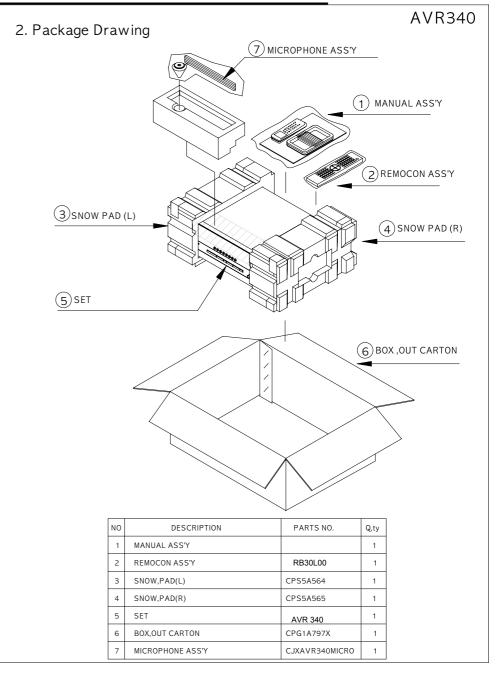

harman/kardon

## FRONT-PANEL CONTROLS

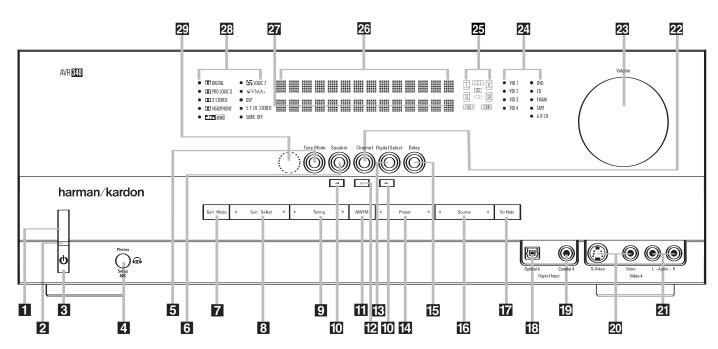

**NOTE:** To make it easier to follow the instructions that refer to this illustration, a larger copy may be downloaded from the Product Support section for this product at www.harmankardon.com.

- Main Power Switch
- 2 Power Indicator
- 3 Standby/On Switch
- 4 Headphone Jack
- **5** Tone Mode
- 6 Speaker Selector
- 7 Surround Mode Group Selector
- 8 Surround Mode Selector
- **9** Tuning Selector
- **10 ♦►** Buttons

■ Main Power Switch: Press this button to apply power to the AVR 340. When the switch is pressed in, the unit is in a Standby mode, as indicated by the amber Power Indicator 2. This button MUST be pressed in to operate the unit. To turn the unit off and prevent the use of the remote control, this switch should be pressed until it pops out from the front panel and the word "OFF" is seen at the top of the switch.

NOTE: This switch is normally left in the "ON" position.

- **2** Power Indicator: This LED lights amber when the unit is in the Standby mode to signal that the AVR is ready to be turned on. When the unit is in operation, the indicator is blue.
- 3 Standby/On Switch: When the Main Power Switch 1 is "ON," press this button to turn on the AVR 340; press it again to turn the unit off. The Power Indicator 2 turns blue when the unit is on.

- Tuner Band Selector
- 12 Set Button
- 13 Digital Input Selector
- 14 Preset Station Selector
- 15 Delay Adjust Selector
- 16 Input Source Selector
- 17 Tuner Mode Selector
- 18 Optical 4 Digital Audio Input
- 19 Coaxial 4 Digital Audio Input
- 20 Video 4 Video Input Jacks
- 4 Headphone Jack: This jack may be used to listen to the AVR 340's output through a pair of headphones. The speakers will automatically be turned off when the headphone jack is in use. When configuring your system using EzSet/EQ, the calibration microphone should be plugged into this jack using the supplied adaptor that converts the small mini-plug at the end of the microphone's cord to a 1/4" plug.
- 5 Tone Mode: This button controls the tone mode settings, enabling adjustment of the bass and treble boost/cut. You may also use it to take the tone controls out of the signal path completely for "flat" response. The first press of the button displays a TONE IN message in the Lower Display Line 27 and in the on-screen display. To take the controls out of the signal path, press either of the ◀/▶

To change the bass or treble settings, make sure that **TONE IN** appears in the **Lower Display Line 27** or press either of the **Moreover Display Line 27** or press either the **Moreover Display Lin** 

Buttons 10 until the display reads TONE OUT.

- 21 Video 4 Audio Input Jacks
- **22** Channel Adjust Selector
- 23 Volume Control
- 24 Input Indicators
- 25 Speaker/Channel Input Indicators
- **26** Upper Display Line
- **27** Lower Display Line
- 28 Surround Mode Indicators
- 29 Remote Sensor Window

Press the **Tone Mode Button 5** until the desired option of **TREBLE MODE** or **BASS MODE** appears in the **Lower Display Line 27** and in the on-screen display and then press either of the **4/> Buttons 10** to enter the desired boost or cut setting. Both treble and bass contours may be boosted or cut by up to + or -10dB in increments of 2dB. See pages 23 and 34 for more information on the tone controls.

NOTE: The AVR 340 is not equipped with a traditional Balance control. When listening to two-channel materials, if you wish to adjust the stereo image, you may use the **Channel Adjust Selector 22** to increase or decrease the level of the left front channel by up to + or −10dB, and then to decrease or increase the right front channel by the corresponding amount. However, when listening to surround materials and most two-channel materials, it is recommended that you leave these settings at the results obtained during the configuration process described on pages 19 through 33.

## FRONT-PANEL CONTROLS

- **6** Speaker Selector: Press this button to begin the process of configuring the unit to match the type of speakers used in your listening room. (See pages 28–30 for more information on speaker setup and configuration.)
- **7** Surround Mode Group Selector: Press this button to select the top-level group of surround modes. Each press of the button will select the current or last used mode in each of the surround mode groups (e.g., Dolby, DTS, DTS Neo:6, Logic 7, DSP, Stereo). When the button is pressed so that the name of the surround mode group appears in the on-screen display and in the **Lower Display Line 27**, press the **Surround Mode Selector 3** to cycle through the individual modes available. For example, press this button to select Dolby modes, and then press the **Surround Mode Selector 3** to choose from the various Dolby mode options.
- Surround Mode Selector: Press this button to select from among the available surround mode options for the mode group selected. The specific modes will vary based on the number of speakers available, the mode group and if the input source is digital or analog. For example, press the Surround Mode Group Selector to select a main mode grouping such as Dolby or Logic 7, and then press this button to see the specific mode choices available. Note that the digital surround modes, such as Dolby Digital and DTS, may not be accessed unless that type of source signal is present, such as when a DVD movie or television signal programmed in Dolby Digital or DTS surround sound is playing. For more information on surround mode selection, see pages 25 and 35–41.
- **9** Tuning Selector: Press the left side of the button to tune lower-frequency stations and the right side of the button to tune higher-frequency stations. When the tuner is in the Manual mode, each tap will increase or decrease the frequency by one increment. When the tuner receives a strong enough signal for adequate reception, MANUAL TUNED will appear in the on-screen display and the Lower Display Line 27. When the tuner is the Auto mode, press the button once, and the tuner will scan for a station with acceptable signal strength. When the next station with a strong signal is tuned the scan will stop and the on-screen display and Lower Display Line 27 will indicate AUTO TUNED. When an FM Stereo station is tuned, the display will read AUTO ST TUNED.

To switch back and forth between the Auto and Manual tuning modes, press the **Tuner Mode Selector 17**.

- **10 ◄/▶ Buttons**: When configuring the AVR 340's settings, use these buttons to select from the available choices.
- Tuner Band Selector: Press this button to turn the AVR on and to select the Tuner as the input. Press it again to switch between the AM and FM frequency bands. (See page 41 for more information on the tuner.)
- **2 Set Button:** When making choices during the setup and configuration process, press this button to enter the desired setting into the AVR 340's memory.
- Digital Input Selector: Press this button to select one of the digital audio inputs or the analog audio input for any source. (See pages 38–41 for more information on digital audio.)
- **14 Preset Stations Selector:** Press this button to scroll up or down through the list of stations that have been entered into the preset memory. (See page 41 for more information on tuner presets.)
- **Delay Adjust Selector:** Press this button to begin the steps required to enter delay settings. (See pages 30–31 for more information on delay times.)
- **16 Input Source Selector:** Press this button to change the input by scrolling up or down through the list of **Input Indicators 24**.
- 17 Tuner Mode Selector: Press this button to select Auto or Manual tuning. When the button is pressed so that the **AUTO** appears in the **Lower Display Line** 27, the tuner will search for the next station with an acceptable signal when the Tuning Selector 9 2 is pressed. When the button is pressed so that MANUAL appears in the Lower Display Line 27, each press of the Tuning Selector 9 2 will increase the frequency. This button may also be used to switch between Stereo and Mono modes for FM radio reception. When weak reception is encountered, press the button so that **MANUAL** appears in the **Lower** Display Line 27 and on the on-screen display to switch to Mono reception. Press it again to switch back to Stereo mode. (See page 41 for more information on using the tuner.)
- 13 Optical 4 Digital Audio Input: Connect the optical digital audio output of an audio or video product to this jack. When the input is not in use, the built-in shutter will close to avoid dust contamination that might degrade future performance.
- **[2]** Coaxial 4 Digital Audio Input: This jack is used for connection to the output of portable audio devices, video game consoles or other products that have a coax digital audio jack.

- **20** Video 4 Video Input Jacks: These jacks may be used for temporary connection to the composite or S-video output of video games, camcorders or other portable video products. You may make a connection to either jack at any time, but not to both simultaneously.
- **21** Video 4 Audio Input Jacks: These audio jacks may be used for temporary connection to video games or portable audio/video products such as camcorders and portable audio players.

**NOTE:** The AVR 340 is shipped with two covers that may be installed over the front-panel input jacks when they are not in use.

- **22 Channel Adjust Selector:** Press this button to begin the process of trimming the channel output levels using an external audio source. (For more information on output level trim adjustment, see page 31.)
- **23 Volume Control:** Turn this knob clockwise to increase the volume, counterclockwise to decrease the volume. If the AVR 340 is muted, adjusting the **Volume Control 23 3 6** will automatically release the unit from the silenced condition.
- **24 Input Indicators:** The current selected source will appear as one of these indicators. When the unit is turned on, the entire list of available modes will light briefly, and then revert to normal operation with only the active mode indicator illuminated.
- NOTE: When \*\*Bridge\*/DMP has been selected as the input source, no Input Indicator \*\*24 will light. DMP/THE BRIDGE IS CONNECTED will scroll across the Upper Display Line \*\*26\*, unless you have retitled the source name, in which case that name will appear. See page 22 for more information on input titling.
- 23 Speaker/Channel Input Indicators: These indicators are multipurpose, indicating both the speaker type selected for each channel and the incoming datasignal configuration. The left, center, right, right surround and left surround speaker indicators are composed of three boxes, while the subwoofer is a single box. The center box lights when a "small" speaker is selected, and the two outer boxes light when "large" speakers are selected. When none of the boxes are lit for the center, surround or subwoofer channels, no speaker has been assigned that position. (See pages 28–29 for more information on configuring speakers.)

NOTE: When you have reassigned the surround back speakers to the remote zone using the MULTI ROOM SETUP menu, the boxes that indicate the presence of the surround back speakers will automatically disappear, reflecting the fact that the main listening area is now configured for 5.1-channel operation.

## FRONT-PANEL CONTROLS

(See page 46 for more information on reassigning the surround back speakers for multiroom use.)

The letters inside each box display the active input channels. For standard analog sources, only the L and R will light, indicating a stereo input. For a digital source, the indicators will light to display the channels being received at the digital input. When the letters flash, the digital input has been interrupted. (See page 39 for more information on the Channel Indicators.)

26 Upper Display Line: Depending on the unit's status, a variety of messages will appear here. In normal operation, this line will show current input source and which analog or digital input is in use. When the tuner is the input, this line will identify the station as AM or FM and show the frequency and preset number, if any.


**27** Lower Display Line: Depending on the unit's status, a variety of messages will appear here. In normal operation, the current surround mode will show here.

23 Surround Mode Indicators: The current selected surround mode will appear as one of these indicators. Note that when the unit is turned on, the entire list of available modes will light briefly, and then revert to normal operation with only the active mode indicator illuminated.

NOTE: When the Dolby Virtual Speaker mode is in use, no Surround Mode Indicator 23 will light. However, the surround mode name will scroll in the Lower Display Line 27.

Remote Sensor Window: The sensor behind this window receives infrared signals from the remote control. Aim the remote at this area and do not block or cover it.

## REAR-PANEL CONNECTIONS

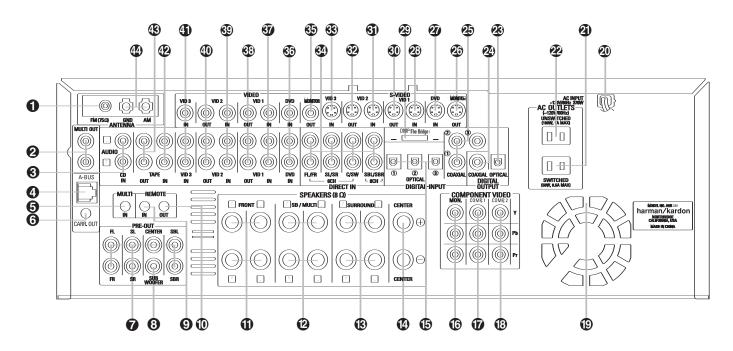

**NOTE:** To make it easier to follow the instructions that refer to this illustration, a larger copy may be downloaded from the Product Support section for this product at www.harmankardon.com.

- FM Antenna Jack
- Multiroom Audio Outputs
- CD Audio Inputs
- A-BUS® Connector
- 6 Multiroom IR Input
- 6 Remote IR Carrier Output
- **7** Preamp Outputs
- Subwoofer Output
- Remote IR Input
- Remote IR Output
- Front Speaker Outputs
- Surround Back/Multiroom Speaker Outputs
- Surround Speaker Outputs
- Center Speaker Outputs
- 15 Optical Digital Audio Inputs

- **16** Component Video Monitor Outputs
- Tomponent Video 1 Inputs
- (B) Component Video 2 Inputs
- Fan Vents
- 20 AC Power Cord
- 2 Switched AC Accessory Outlet
- 22 Unswitched AC Accessory Outlet
- 23 Optical Digital Audio Output
- 2 Coaxial Digital Audio Output
- 25 Coaxial Digital Audio Inputs
- **26** S-Video Monitor Output
- 2 DVD S-Video Input
- 23 Video 1 S-Video Input
- 29 ▶Bridge DMP Connector
- 30 Video 1 S-Video Output

Subwoofer:

Coaxial Digital Audio:

- 3 Video 2 S-Video Input
- 32 Video 2 S-Video Output
- 33 Video 3 S-Video Input
- 3 6/8-Channel Direct Inputs
- 35 Video Monitor Output
- 36 DVD Audio/Video Inputs
- 37 Video 1 Audio/Video Inputs
- 38 Video 1 Audio/Video Outputs
- 39 Video 2 Audio/Video Inputs
- Wideo 2 Audio/Video Outputs
- 4 Video 3 Audio/Video Inputs
- Tape Inputs
- Tape Outputs
- AM Antenna Terminals

NOTE: To assist in making the correct connections for multichannel input, output and speaker connections, all connection jacks and terminals are color-coded in conformance with the CEA standards as follows:

Front Left: White Front Right: Red

Center: Green
Surround Left: Blue
Surround Right: Gray
Surround Back Left: Brown
Surround Back Right: Tan

Composite Video: Yellow
Component Video "Y": Green
Component Video "Pr": Red
Component Video "Pb": Blue

- **1** FM Antenna Jack: Connect the supplied indoor (or an optional external) FM antenna to this terminal.
- **2** Multiroom Audio Outputs: Connect these jacks to the optional external audio power amplifier that is used for multizone distribution.
- 3 CD Audio Inputs: Connect these jacks to the analog audio outputs of a compact disc player or CD changer.

Purple

Orange

**4** A-BUS® Connector: Connect this jack to an optional A-BUS remote room product to extend the

multiroom capabilities of your AVR 340. See page 17 for more information on A-BUS.

**(5)** Multiroom IR Input: Connect the output of an IR sensor in a remote room to this jack to control the AVR 340's multiroom system and source devices from

## REAR-PANEL CONNECTIONS

the remote room. See page 46 for more information on multiroom operation.

- ⑤ Remote IR Carrier Output: The output of this jack is the full signal received at the Remote Sensor Window ②, or input through the Remote IR Input ③, including the carrier frequency that is stripped from these signals at the Remote IR Output ⑥. Use this output to extend IR remote signals to the inputs of compatible products that require the full IR signal by direct connection to the product's remote IR input, or through the use of optional, external IR "blasters". If you are in doubt as to which of the two IR Output jacks to use, we recommend that you consult with your dealer or installer, or check with the manufacturer of the external equipment you wish to control.
- **7 Preamp Outputs:** Connect these jacks to an optional, external power amplifier for applications where higher power is desired.
- **3** Subwoofer Output: Connect this jack to the line-level input of a powered subwoofer. If an external subwoofer amplifier is used, connect this jack to the subwoofer amplifier input.
- **9** Remote IR Input: If the AVR 340's front-panel IR sensor is blocked due to cabinet doors or other obstructions, an external IR sensor may be used. Connect the output of the sensor to this jack.
- **®** Remote IR Output: This connection permits the IR sensor in the receiver to serve other remote controlled devices. Connect this jack to the "IR IN" jack on Harman Kardon (or other compatible) equipment.
- **(f)** Front Speaker Outputs: Connect these outputs to the matching + or terminals on your left and right speakers. When making speaker connections always make certain to maintain correct polarity by connecting the color-coded (white for front left and red for front right) (+) terminals on the AVR 340 to the red (+) terminals on the speakers and the black (–) terminals on the Speakers. See page 16 for more information on speaker polarity.
- Surround Back/Multiroom Speaker Outputs: These speaker terminals are normally used to power the surround back speakers in a 7.1-channel system. However, they may also be used to power the speakers in a second zone, which will receive the output selected for a multiroom system. To change the output fed to these terminals from the default of the Surround Back speakers to the Multiroom Output, you must change a setting in the MULTIROOM
- **SETUP** menu of the OSD system. See page 46 for more information on configuring this speaker output. In normal surround system use, the brown and black terminals are the surround back left channel positive (+) and negative (-) connections and the tan

and black terminals are the surround back right positive (+) and negative (-) terminals. For multiroom use, connect the brown and black SBL terminals to the red and black connections on the left remote zone speaker and connect the tan and black SBR terminals to the red and black terminals on the right remote zone speaker.

- **3** Surround Speaker Outputs: Connect these outputs to the matching + and terminals on your surround channel speakers. In conformance with the CEA color-code specification, the blue terminal is the positive, or "+", terminal that should be connected to the red (+) terminal on the Surround Left speaker with older color-coding, while the gray terminal should be connected to the red (+) terminal on the Surround Right speaker with the older color-coding. Connect the black (-) terminal on the AVR to the matching black negative (-) terminals for each surround speaker. (See page 16 for more information on speaker polarity.)
- **Q** Center Speaker Outputs: Connect these outputs to the matching + and terminals on your center channel speaker. In conformance with the CEA color-code specification, the green terminal is the positive, or "+," terminal that should be connected to the red (+) terminal on speakers with the older color-coding. Connect the black (-) terminal on the AVR to the black (-) terminal on your speaker. (See page 16 for more information on speaker polarity.)
- **(5)** Optical Digital Audio Inputs: Connect the optical digital output from a DVD player, HDTV receiver, LD player or CD player to these jacks. The signal may be a Dolby Digital signal, a DTS signal or a standard PCM digital source.
- **(3)** Component Video Monitor Outputs: Connect these outputs to the component video inputs of a video projector or monitor. When a source connected to one of the Component Video Inputs **(7) (3)** is selected, the signal will be sent to these jacks.
- **(7)** Component Video 1 Inputs: Connect the Y/Pr/Pb component video outputs of a DVD player, HDTV set-top converter, satellite receiver or other video source device with component video outputs to these jacks.
- (3) Component Video 2 Inputs: Connect the Y/Pr/Pb component video outputs of a DVD player, HDTV set-top converter, satellite receiver or other video source device with component video outputs to these jacks.

See page 22 for information on assigning the **Component Video 1** and **2 Inputs 17 13** to the appropriate source inputs.

**⑤** Fan Vents: These ventilation holes are the output of the AVR 340's airflow system. To ensure proper

operation of the unit and to avoid possible damage to delicate surfaces behind the AVR, make certain that these holes are not blocked and that there is at least 3 inches of open space between the vent holes and any other surface. It is normal for the fan to remain off at most normal volume levels. An automatic temperature sensor turns the fan on only when it is needed.

- **②** AC Power Cord: Connect the AC power cord to a non-switched AC wall outlet.
- **3** Switched AC Accessory Outlet: These outlets may be used to power any device you wish to have turned on when the AVR 340 is turned on.
- **2** Unswitched AC Accessory Outlet: This outlet may be used to power any AC device. The power will remain on at this outlet regardless of whether the AVR 340 is on or off.

**NOTE:** The total power consumption of all devices connected to the accessory outlets should not exceed 100 watts.

- ② Optical Digital Audio Output: Connect this jack to the optical digital input connector on a CD-R/RW, MiniDisc or other digital recorder.
- Coaxial Digital Audio Output: Connect this jack to the coaxial digital input of a CD-R/RW, MiniDisc or other digital recorder.
- © Coaxial Digital Audio Inputs: Connect the coax digital output from a DVD player, HDTV receiver, LD player or CD player to these jacks. The signal may be a Dolby Digital signal, DTS signal or a standard PCM digital source. Do not connect the RF digital output of an LD player to these jacks.
- S-Video Monitor Output: If any of the input sources used in your system have S-video connections to the AVR, connect this jack to the S-video input on your television, projector or other video display.

NOTE: Thanks to the AVR 340's cross-conversion capability, if your video display device is equipped with component (Y/Pb/Pr) video inputs, you need only to connect the Component Video Monitor Outputs to your display device, and the AVR 340 will automatically convert all composite and S-video source signals to the component video format for display. You will also be able to view the AVR 340's on-screen displays using just the component video connection, unless the source device is a high-definition (720p, 1080i or 1080p) video device, in which case you would then need to either switch to a 480p source or connect the Video Monitor Output to your video display in order to view the on-screen displays.

**3DVD S-Video Input:** Connect the S-video output of a DVD player or other video source to this jack.

## REAR-PANEL CONNECTIONS

- ② Video 1 S-Video Input: If the product connected to
  the Video 1 Audio Inputs ③ has S-video capability,
  connect this jack to the PLAY/OUT S-video jack on
  that unit and then make certain that the S-Video
  Monitor Output ② is connected as described above.
- Pidge Digital Media Player (DMP) Connector: With the AVR 340 turned off, connect the optional Harman Kardon ▶Bridge to this connector. When the Digital Media Player source is selected, you may view iPod control and navigation messages on your video display (if one is connected to one of the Video Monitor Outputs ③⑤), and in the Upper and Lower Display Lines 2627. You may navigate the iPod and select tracks for playback using the ▲/▼/◄/▶ Buttons ② 15, the Set Button ③ and Transport Controls ② 7 on your AVR remote. See page 42 for more information.

- ② Video 2 S-Video Output: If the product connected to the Video 2 Audio Outputs ④ has S-video capability, connect this jack to the REC/IN S-video jack on that unit.
- 6/8-Channel Direct Inputs: These jacks are used for connection to source devices such as DVD-Audio or SACD™ players with discrete analog outputs. Depending on the source device in use, all eight jacks may be used, though in many cases only connections to the front left/right, center, surround left/right and LFE (subwoofer input) jacks will be used for standard 5.1 audio signals.
- **5** Video Monitor Output: Connect this jack to the composite video input of a TV monitor or video projector to view the on-screen menus and the output of a standard video source.

- NOTE: Thanks to the AVR 340's cross-conversion capability, if your video display device is equipped with component (Y/Pb/Pr) video inputs, you need only to connect the Component Video Monitor Outputs to your display device, and the AVR 340 will convert all composite and S-video source signals to component video. You will also be able to view the AVR 340's onscreen displays using the component video connection, unless the source device is high-definition (720p or 1080i) video, in which case you should either switch to a 480p source or connect the Video or the S-Video Monitor Output 2005 to your video display to view the on-screen displays.
- **⑤** DVD Audio/Video Inputs: Connect the composite video and L/R analog audio outputs of a DVD player or other video source to these jacks.
- **TVideo 1 Audio/Video Inputs:** Connect the composite video and L/R analog audio PLAY/OUT jacks of a VCR or other video source to these jacks.
- € Video 1 Audio/Video Outputs: Connect the composite video and L/R analog audio REC/IN jacks of a VCR or other video recording device such as a DVD recorder or PVR to these jacks.
- **3** Video 2 Audio/Video Inputs: Connect the composite video and L/R analog audio PLAY/OUT jacks of a cable television box or other video source to these jacks.
- **① Video 2 Audio/Video Outputs:** Connect the composite video and L/R analog audio REC/IN jacks of a VCR or other video recording device such as a DVD recorder or PVR to these jacks.
- (i) Video 3 Audio/Video Inputs: Connect the composite video and L/R analog audio PLAY/OUT jacks of an HDTV tuner or other video source to these jacks.
- $\ensuremath{ \mbox{\ensuremath{ \mbox{\sc PLAY/OUT}}}}$  Tape Inputs: Connect these jacks to the PLAY/OUT jacks of an audio recorder.
- **③** Tape Outputs: Connect these jacks to the RECORD/INPUT jacks of an audio recorder.
- **(A)** AM Antenna Terminals: Connect the AM loop antenna supplied with the receiver to these terminals. If an external AM antenna is used, make connections to the AM and GND terminals in accordance with the instructions supplied with the antenna.

**NOTE ON VIDEO CONNECTIONS:** When connecting a video source product such as a VCR, DVD player, satellite receiver, cable set-top box, personal video recorder or video game to the AVR 340, you may use either a composite or S-video connection, but not both, for each source device.


The AVR 340 features cross-conversion capability, enabling you to benefit from higher-quality viewing of your video sources, even those that use composite or S-video switching, when connected to your video display with component video inputs.

## MAIN REMOTE CONTROL FUNCTIONS

- Power Off Button
- 2 IR Transmitter Window
- 3 Program Indicator
- 4 Power On Button
- 1 OWER OF BUILD
- Input Selectors
- 6 AVR Selector
- AM/FM Tuner Select
- Dim Button
- Test Button
- Sleep Button
- DSP Surround Mode Selector
- Night Mode
- (13) Channel Select Button
- Buttons
- **1** Set Button
- Digital Select
- Numeric Keys
- Tuner Mode
- Direct Button
- Tuning Up/Down
- OSD Button
- 23 Dolby Mode Selector
- 24 DTS Digital Mode Selector
- 25 Logic 7 Mode Select Button
- 23 Skip Up/Down Buttons
- **27** Transport Controls
- 23 Stereo Mode Select Button
- 29 DTS Neo:6 Mode Select
- Macro Buttons
- 3 Disc Skip Button
- 32 Preset Up/Down
- Clear Button
- Memory Button
- 35 Delay/Prev. Ch.
- 36 Speaker Select
- Multiroom Button
  Volume Up/Down
- 39 TV/Video Selector
- 40 DMP ▶Bridge Selector
- 4 6-Channel/8-Channel Direct Input
- Mute

#### NOTES:

- The function names shown here are each button's feature when used with the AVR 340. Most buttons have additional functions when used with other devices. See pages 51–52 for a list of these functions.
- To make it easier to follow the instructions that refer to this illustration, a larger copy may be downloaded from the Product Support section for this product at www.harmankardon.com.

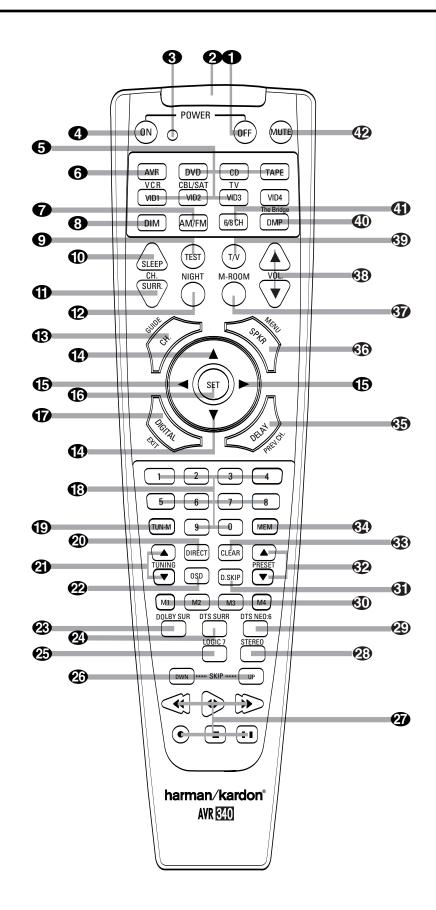

## MAIN REMOTE CONTROL FUNCTIONS

IMPORTANT NOTE: The AVR 340's remote may be programmed to control up to seven devices, including the AVR 340. Before using the remote, it is important to remember to press the Input Selector Button 

■ that corresponds to the unit you wish to operate. In addition, the AVR 340's remote is shipped from the factory to operate the AVR 340 and most Harman Kardon CD or DVD players and cassette decks. The remote is also capable of operating a wide variety of other products using the control codes that are part of the remote. Before using the remote with other products, follow the instructions on page 48 to program the proper codes for the products in your system.

It is also important to remember that many of the buttons on the remote take on different functions, depending on the product selected using the Device Control Selectors. The descriptions shown here primarily detail the functions of the remote when it is used to operate the AVR 340. (See pages 49–52 for information about alternate functions for the remote's buttons.)

- Power Off Button: Press this button to place the AVR 340 or a selected device in the Standby mode.
- (2) IR Transmitter Window: Point this window towards the AVR 340 when pressing buttons on the remote to make certain that infrared commands are properly received.
- **3 Program Indicator:** This three-color indicator is used to guide you through the process of programming the remote. (See page 48 for information on programming the remote.)
- **4** Power On Button: Press this button to turn on the power to a device selected by pressing one of the **Input Selectors 5**.
- Input Selectors: Pressing one of these buttons will perform three actions at the same time. First, if the AVR 340 is not turned on, this will power up the unit. Next, it will select the source shown on the button as the input to the AVR 340. Finally, it will change the remote control so that it controls the device selected. After pressing one of these buttons you must press the AVR Selector Button again to operate the AVR 340's functions with the remote.
- **6** AVR Selector: Pressing this button will switch the remote so that it will operate the AVR 340's functions. If the AVR 340 is in the Standby mode, it will also turn the AVR 340 on.
- **7** AM/FM Tuner Select: Press this button to select the AVR 340's tuner as the listening choice. Pressing this button when the tuner is already in use will select between the AM and FM bands.

- ② Dim Button: Press this button to activate the Dimmer function, which reduces the brightness of the front panel display, or turns it off entirely. The first press of the button shows the default state, which is full brightness by indicating VFD FULL in the Lower Display Line ②7. Press the button again within five seconds to reduce the brightness by 50%, as indicated by VFD HALF showing in the Lower Display Line ②7. Press the button again within five seconds and the main display will go completely dark. Note that this setting is temporary, in that regardless of any changes, the display will always return to full brightness when the AVR is turned on. In addition, the Power Indicator ②2 will always remain at full brightness regardless of the setting. This is to remind you that the AVR is still turned on.
- **9 Test Button:** Press this button to begin the sequence used to calibrate the AVR 340's output levels. (See pages 25, 31 and 42 for more information on calibrating the AVR 340.)
- **(1)** Sleep Button: Press this button to place the unit in the Sleep mode. After the time shown in the display, the AVR 340 will automatically go into the Standby mode. Each press of the button changes the time until turn-off in the following order:

See page 34 for more information on the Sleep Function. This button is also used to change channels on your TV when the TV is selected.

- **(1) DSP Surround Mode Selector:** Press this button to cycle through the DSP, VMAx and Stereo surround modes such as Hall, Theater, VMAx Near and Far, and Surround Off. This button is also used to tune channels when the TV is selected using the device **Input Selector (5)**.
- (2) Night Mode: Press this button to activate the Night mode. This mode is available in specially encoded digital sources, and it preserves dialogue (center channel) intelligibility at low volume levels.
- (3) Channel Select Button: This button is used to start the process of setting the AVR 340's output levels to an external source. Once this button is pressed, use the ▲/▼ Buttons (12) to select the channel being adjusted, then press the Set Button (6), followed by the ▲/▼ Buttons (12) again, to change the level setting. (See pages 31 and 42 for more information.) However, Harman Kardon recommends that you first perform the EzSet/EQ procedure, as described on pages 25 to 27.

- ⚠ ▲/▼ Buttons: These multipurpose buttons are used to change or scroll through items in the onscreen menus, make configuration settings such as digital inputs or delay timing, or to select surround modes. When changing a setting, first press the button for the function or setting to be changed (e.g., press the DSP Surround Mode Selector 1 to select a sound field mode or the Digital Select Button to change a digital input) and then press one of these buttons to scroll through the list of options or to increase or decrease a setting. The sections in this manual describing the individual features and functions contain specific information on using these buttons for each application.
- **⊕ Buttons:** These buttons are used to change the menu selection or setting during some of the setup procedures for the AVR 340.
- **(i)** Set Button: This button is used to enter settings into the AVR 340's memory. It is also used in the setup procedures for delay time, speaker configuration and channel output level adjustment.
- Digital Select: Press this button to assign one of the digital inputs 181962 to a source. (See pages 22 and 38 for more information on using digital inputs.)
- Numeric Keys: These buttons serve as a 10-button numeric keypad to enter tuner preset positions. They are also used to select channel numbers when TV, Cable or SAT has been selected on the remote, or to select track numbers on a CD, DVD or LD player, depending on how the remote has been programmed.
- **Direct Button:** Press this button when the tuner is in use to start the sequence for direct entry of a station's frequency. After pressing the button, simply press the proper **Numeric Keys 1** to select a station. (See page 41 for more information on the tuner.)

## MAIN REMOTE CONTROL FUNCTIONS

- Tuning Up/Down: When the tuner is in use, these buttons will tune up or down through the selected frequency band. If the Tuner Mode Button has been pressed so that AUTO appears in the orscreen display and Lower Display Line nesconds will cause the tuner to seek the next station with acceptable signal strength for quality reception. When MANUAL appears in the Lower Display Line nesconds will tune stations will tune stations in single-step increments. (See page 41 for more information.)
- **OSD Button:** Press this button to activate the On-Screen Display (OSD) system used to set up or adjust the AVR 340's parameters.
- **3 Dolby Mode Selector:** This button is used to select from among the available Dolby Surround processing modes. Each press of this button will select one of the Dolby Pro Logic II or IIx, or Dolby Virtual Speaker modes or Dolby 3 Stereo. When a Dolby Digital-encoded source is in use, the Dolby Digital mode may also be selected. When the headphones are in use, this button selects from among the Dolby Headphone modes. (See pages 36–37 and 40 for the available Dolby surround mode options.)
- QDTS Digital Mode Selector: When a DTS-encoded digital source is selected, each press of this button will scroll through the available DTS modes. The specific choice of modes will vary depending on whether the source material contains DTS-ES 6.1 Discrete encoding. When a DTS source is not in use, this button has no function. (See pages 36 and 40 for the available DTS digital options.)
- **25** Logic 7 Mode Select Button: Press this button to select from among the available Logic 7 surround modes. (See pages 36 and 40 for available Logic 7 options.)
- **26 Skip Up/Down Buttons:** These buttons do not have a direct function with the AVR 340, but when used with a compatibly programmed CD or DVD changer they will change to the previous disc in the changer or carousel.
- any functions for the AVR 340, but they may be programmed for the forward/reverse play operation of a wide variety of CD or DVD players, and audio or video cassette recorders. When the DMP ▶ Bridge source is in use, these buttons may be used to operate some functions on a compatible iPod if it is docked in The Bridge. See page 42 for more information on using ▶ Bridge.

- When the remote is used to control the AVR, or the VID2 or VID3 device, by default these buttons are programmed to operate the DVD player. However, you may use the Transport Control Punch-Through feature described on page 50 to program these buttons to operate another device's transport controls when the AVR, VID2 or VID3 has been selected.
- **23** Stereo Mode Select Button: When the button is pressed so that **SURROUND OFF** appears in the Lower Display Line 27, with only the Surr Off Surround Mode Indicator 28 lit, the AVR will operate in a bypass mode with true, fully analog, two-channel left/right stereo mode with no surround processing or bass management, unlike other modes where digital processing is used. When the button is pressed so that SURROUND OFF appears in the Lower Display Line 27, with both the DSP and Surr Off Surround Mode Indicators 28 lit, you may enjoy a two-channel presentation of the sound along with the benefits of bass management. Depending on whether your system is configured for 5.1 or 6.1/7.1 channels, the next press of the button will cause either 5 CH STEREO or 7 CH STEREO to appear, and the stereo signal will be routed to all five (or seven) speaker channels. (See pages 37 and 40 for more information on stereo playback modes.)
- DTS Neo:6 Mode Select: Press this button to select a DTS Neo:6 mode. These modes take a two-channel stereo- or matrix surround-encoded source and create a full five-, six- or seven-channel sound field. (See pages 36 and 40 for the DTS Neo:6 options.)
- Macro Buttons: Press these buttons to store or recall a "Macro", which is a preprogrammed sequence of commands stored in the remote. (See page 48 for more information on storing and recalling macros.)
- Disc Skip Button: This button has no direct function for the AVR 340 but is most often used to change to the next disc in a CD or DVD player when the remote is programmed for that type of device. (See page 49 for more information on using the remote with products other than the AVR 340.)
- Preset Up/Down: When the tuner is in use, press these buttons to scroll through the stations programmed into the AVR 340's memory. When some source devices, such as CD players, VCRs and cassette decks, are selected using the device Input Selectors 5, these buttons may function as Chapter Step or Track Advance.
- **33** Clear Button: Press this button to clear incorrect entries when using the remote to directly enter a radio station's frequency.
- Memory Button: Press this button to enter a radio station into the AVR 340's preset memory. First, tune

- the desired station, and then press this button. Two underline indicators will flash at the right side of the **Upper Display Line 26**, and within five seconds press the **Numeric Keys 18** for the preset number between 01 and 30 that you wish to assign to the station. (See page 41 for more information.)
- Delay/Prev Ch.: Press this button to begin the process for setting the delay times used by the AVR 340 when processing surround sound. After pressing this button, the delay times are entered by pressing the Set Button → and then using the A/▼ Buttons → to select A/V SYNC DELAY or the delay setting for any available channel. Press the Set Button → and then use the A/▼ Buttons → to change the setting. Press the Set Button → again to complete the process. (See page 30 for more information.) However, we recommend that you first perform the EzSet/EQ procedure, as described on pages 25–27.
- **36** Speaker Select: Press this button to begin the process of configuring the AVR 340's bass management system for use with the type of speakers used in your system. Once the button has been pressed, use the ▲/▼ Buttons 4 to select the channel you wish to set up. Press the Set Button **16** and then use the **△**/**▼ Buttons 10** to select the appropriate speaker size. Press the Set Button 16 to enter the new setting, and then use the ▲/▼ **Buttons** again to select another channel to configure. When all adjustments have been completed, press the **Set Button 16** twice to exit the settings and return to normal operation. (See page 28 for more information.) However, Harman Kardon recommends that you first perform the EzSet/EQ procedure, as described on pages 25-27.
- Multiroom Button: Press this button to begin the process of activating the multiroom system, or changing the source input or volume level for the remote zone. Press the ▲▼ Buttons ② to scroll to the on/off, source input or volume level setting, and then press the Set Button ③ to access the desired setting. Use the ▲▼ Buttons ② to scroll through the options, and the Set Button ⑤ to select. (See page 46 for information on the multiroom system.)
- ▼ Volume Up/Down: Press these buttons to raise or lower the system volume. By default, the Volume Up/Down Buttons are programmed at the factory to control the AVR 340's volume, no matter which source device has been selected (except TAPE). You may reprogram these buttons to control the volume of another device, such as your TV, using the Volume Control Punch-Through instructions found on page 50.
- **39 TV/Video Selector:** This button does not have a direct function on the AVR 340, but when used with a

## MAIN REMOTE CONTROL FUNCTIONS

compatible VCR, DVD or satellite receiver, pressing this button will switch between the output of the device and the external video input. Consult the owner's manual for your specific player or receiver for the details of how it implements this function.

When Harman Kardon's ™Bridge (optional) is connected to ™Bridge Digital Media Player (DMP)

Connector ② and a compatible iPod is docked in ™Bridge , pressing this selector will select the iPod as the audio source input device for the AVR 340. In addition, if a video display is connected to one of the Video Monitor Outputs ③⑤, the iPod's messages will appear on screen, and in the Upper and Lower Display Lines ②⑥. The ▲/▼/◄/▶ Buttons ⑥ and the Transport Controls ② may be used to navigate the iPod and to operate many functions. See page 42, and the manuals for The Bridge and your iPod for more information.

● 6-Channel/8-Channel Direct Input: Press this button to select the device connected to the 6/8-Channel Direct Inputs ④. (See page 34 for more information.) When the device connected to the 6/8-Channel Direct Input ④ is also a video source, such as a DVD or DVD-Audio player with an onboard audio decoder, you must first select that video source by pressing one of the Input Selectors ⑤, then press this button to choose the device connected to the 6/8-Channel Direct Input ④ as the audio source. Note that if you desire, you may select any video source to be used in conjunction with the 6/8-Channel Direct Input ④ as the audio source.

Mute: Press this button to momentarily silence the AVR 340 or TV set being controlled, depending on which device has been selected. When the AVR 340 remote is being programmed to operate another device, this button is pressed with the Input Selector Button to begin the programming process. (See page 48 for more information on programming the remote.)

## INSTALLATION AND CONNECTIONS

#### System Installation

After unpacking the unit, locating it in a place with adequate ventilation and placing it on a solid surface capable of supporting its weight, you will need to make the connections to your audio and video equipment.

**IMPORTANT NOTE:** For your personal safety and to avoid possible damage to your equipment and speakers, it is always a good practice to turn off and unplug the AVR and ALL source equipment from the AC output before making any audio or video system connections.

#### **Audio Equipment Connections**

We recommend that you use high-quality interconnect cables when making connections to source equipment and recorders to preserve the integrity of the signals.

1. Connect the analog outputs of a CD player to the CD Audio Inputs 3.

**NOTE:** When the CD player has both fixed and variable audio outputs, it is best to use the fixed output unless you find that the input to the receiver is so low that the sound is noisy, or so high that it is distorted.


- Connect the analog Play/Out jacks of a cassette deck, MD, CD-R or other audio recorder to the Tape Input Jacks ②. Connect the analog Record/In jacks on the recorder to the Tape Output Jacks ③ on the AVR 340.
- 3. Connect the output of any digital sources such as a CD or DVD changer or player, advanced video game, a digital satellite receiver, HDTV tuner or digital cable set-top box or the output of a compatible computer sound card to the Optical and Coaxial Digital Audio Inputs 13231819. We recommend connecting the coaxial digital audio output of your DVD player to the Coax 1 Digital Audio Input 25, since that digital input is assigned to the DVD source by default. The Video 2/Cable/Sat source defaults to the Optical 1 Digital Audio Input (5). If your cable television set-top box or satellite receiver is equipped with an optical digital audio output, we recommend that you connect it to this input to obtain the benefits of higher-quality digital audio (such as PCM, Dolby Digital 2.0 or Dolby Digital 5.1 signals when broadcast by your cable or satellite provider).

**NOTE:** If you wish for your digital source device to be available for use by the multiroom system, you will need to connect its analog audio outputs to the appropriate inputs on the AVR 340, as the multiroom system is not capable of distributing digital signals to the remote zone.

4. Connect the **Coaxial** or **Optical Digital Audio Outputs 23/29** on the rear panel of the AVR 340 to

the matching digital input connections on a CD-R or MiniDisc or other digital recorder.

Assemble the AM Loop Antenna supplied with the unit so that the tabs at the bottom of the antenna loop snap into the holes in the base. Connect it to the AM Antenna Terminals (2).

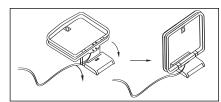

- 6. Connect the supplied FM antenna to the **FM** (75-ohm) **Connection 1**. The FM antenna may be an external roof antenna, an inside powered or wirelead antenna or a connection from a cable TV system. If the antenna or connection uses 300-ohm twin-lead cable, you must use an optional 300-ohm-to-75-ohm adaptor to make the connection.
- 7. With the AVR 340 turned off, connect the optional Harman Kardon ▶Bridge: to ▶Bridge: Digital Media Player (DMP) Connector ②. Your compatible iPod may be docked in ▶Bridge: when you wish to use it as an audio source device. Video materials stored on the iPod may not be viewed through The Bridge.
- Connect the front, center, surround and surround back speaker outputs (1) (1) (2) to the respective speakers.

To ensure that all the audio signals are carried to your speakers without loss of clarity or resolution, we suggest that you use high-quality speaker cable. Many brands of cable are available and the choice of cable may be influenced by the distance between your speakers and the receiver, the type of speakers you use, personal preferences and other factors. Your dealer or installer is a valuable resource to consult in selecting the proper cable.

Regardless of the brand of cable selected, we recommend that you use a cable constructed of multistrand copper with a gauge of 14 or smaller. Remember that in specifying cable, the lower the number, the thicker the cable.

Cable with a gauge of 16 may be used for short runs of less than 10 feet. We do not recommend that you use cables with an AWG equivalent of 18 or higher, due to the power loss and degradation in performance that will occur.

Cables that are run inside walls should have the appropriate markings to indicate listing with UL, CSA or other appropriate testing agency standards. Questions about running cables inside walls should be referred to your

installer or a licensed electrician who is familiar with the NEC and/or the applicable local building codes in your area.

When connecting wires to the speakers, observe proper polarity. Note that the positive (+) terminal of each speaker connection may carry a specific color code, as noted on page 8. However, many speakers still use a red terminal for the positive (+) connection. Connect the "negative" or "black" wire to the same terminal on both the receiver and the speaker.

**NOTE:** While most speaker manufacturers adhere to an industry convention of using black terminals for negative and red ones for positive, some may vary from this configuration. To ensure proper phase and optimal performance, consult the identification plate on your speaker or the speaker's manual to verify polarity. If you do not know the polarity of your speaker, ask your dealer for advice before proceeding, or consult the speaker's manufacturer.

We also recommend that the length of cable used to connect speaker pairs be identical. For example, use the same length piece of cable to connect the front-left and front-right or surround-left and surround-right speakers, even if the speakers are a different distance from the AVR 340.

- 9. Connections to a subwoofer are normally made via a line-level audio connection from the Subwoofer Output 3 to the line-level input of a subwoofer with a built-in amplifier. When a passive subwoofer is used, the connection first goes to a power amplifier, which will be connected to one or more subwoofers. If you are using a powered subwoofer that does not have line-level input connections, follow the instructions furnished with the speaker for connection information.
- 10. If an external multichannel audio source with 5.1, 6.1 or 7.1 outputs such as an external digital processor/decoder, DVD-Audio or SACD player is used, connect the outputs of that device to the 6/8-Channel Direct Inputs <a>(2)</a>.

#### Video Equipment Connections

Video equipment is connected in the same manner as audio components. The use of high-quality interconnect cables is recommended to preserve signal quality.

1. Connect a VCR's, DVD recorder's, personal video recorder's or other video source's audio and video Play/Out jacks to the Video 1 Audio/Video and/or S-Video Input Jacks (2) on the rear panel. The Audio and Video Record/In jacks on the recorder should be connected to the Video 1 Audio/Video and/or S-Video Output Jacks (3) on the AVR 340. Although any video device may be connected to these jacks, we recommend connecting your video

## INSTALLATION AND CONNECTIONS

- recorder to take advantage of the fact that the remote control is preprogrammed with video recorder product codes for the Video 1 device.
- 2. Connect the analog audio and video outputs of a satellite receiver, cable TV converter, television set or any other video source to the Video 2 Audio/Video and S-Video Input Jacks (1999). Although any video device may be connected to these jacks, we recommend connecting your cable TV converter or satellite receiver so that you may take advantage of the fact that the remote control is preprogrammed with the product codes of these device types for the Video 2 device.
- 3. Connect the analog audio and video outputs of a television or other video device to the Video 3 Audio/Video and S-Video Input Jacks (34) on the rear panel. Although any video or audio device may be connected to these jacks, we recommend connecting your television so that you may take advantage of the fact that the remote control is preprogrammed with TV product codes for the Video 3 device.

Important: If you are using the television only as a display device (i.e., if you receive your TV programs through a cable box or satellite receiver), do not connect the television's outputs to the Video 3 Audio/Video and S-Video Input Jacks (34), or to any other inputs on the AVR 340.

- Connect the analog audio and video outputs of a DVD or laser disc player to the DVD Audio/Video and S-Video Inputs (2)(3).

NOTE: When connecting a device such as a digital cable box or other set-top tuner product with a digital audio output, we recommend that you connect both the digital and analog outputs of the product to your AVR. The audio input polling feature of the AVR will then be able to make certain that you have a constant audio feed, since it will automatically switch the audio input to the analog jacks if the digital feed is interrupted or not available for a particular channel.

Connect the Video and/or S-Video Monitor
 Output 4345 jacks on the receiver to the composite or S-video input of your analog television monitor or video projector.

7. If both your video display monitor and at least one video source device (such as a DVD player or HDTV set-top box) are equipped with component video capability, then you may connect the component video outputs of the device to one of the two Component Video Inputs **1 1** In that case, you will not need to connect the Video Monitor Output 3 or the S-Video Monitor Output 3 to your video display, as the AVR 340 will convert composite and S-video signals to component video. This means you only have to connect one cable from the AVR to the video display. You will also be able to view the AVR 340's on-screen displays using just the component video connection, unless the source device is high-definition (720p or 1080i) video, in which case you should either switch to a 480p source or connect the Video Monitor Output 35 or the S-Video Monitor Output 26 to your video display to view the onscreen displays.

It is recommended that you connect a DVD player or a digital video recorder to the **Component Video 1 Inputs** , as this input is assigned to the DVD, CD, Tuner and Tape sources by default. Thus, whenever any of these sources is selected, you may view the component video output of the device connected to the **Component Video 1** Inputs , enabling you to view and listen to different sources.

Similarly, it is recommended that you connect any other audio/video device equipped with component video outputs, such as a DVD-Audio or SACD player, or HDTV set-top box, to the Video 1, Video 2 or Video 3 sources, or the 6-/8-channel direct inputs, as the Component Video 2 Inputs (3) are assigned to the Video 1, Video 2, Video 3 and 6-/8-channel source audio inputs by default.

However, you may connect any component video source to either set of component video inputs, as they are assignable to any source, following the instructions on page 22. You will still need to connect either the analog or digital audio outputs, or the 6-/8-channel audio outputs, of your component video device to the analog audio inputs corresponding to the source (such as DVD or Video 2 for a cable converter box), or to any of the Optical or Coaxial Digital Audio Inputs (323)[3].

- 8. If the component video inputs are used, connect the Component Video Monitor Outputs to to the component video inputs of your TV, projector or display device. You will also be able to view your composite and S-video sources through this connection, benefiting from the higher quality and superior appearance of component video.
- If you have a camcorder, video game or other audio/video device that is connected to the AVR on a temporary rather than permanent basis, connect

the audio, video and digital audio outputs of that device to the Video 4 Inputs [8][9]2021 on the front panel. A device connected here is selected as the Video 4 input, and the digital inputs must be assigned to the Video 4 input. (See page 22 for more information on input configuration.)

**NOTE:** The AVR 340 is shipped with two covers that may be installed over the front-panel input jacks when they are not in use.

- 10. When connecting the AVR 340 to a "digital-ready", "HDTV-compatible" or high-definition display (which is any device capable of accepting an input signal of 480P or higher), you are able to take advantage of the unit's advanced video processing circuitry which converts all video signals to a 480P output. Since the AVR 340 displays the on-screen menus with upconverted video, the connection from the AVR 340 to the display need only be one set of Y/Pr/Pb component video cables to the Component Video Monitor Output 16.
- 11. When connecting the AVR 340 to a standard, analog video display that has standard composite and S-video inputs only, component video inputs may not be used. In this case, connect the Video and S-Video Monitor Outputs to the matching composite and S-video inputs on your video display, depending on which types of video are used by your source devices. If both types of video are used by different source devices, than both Video Monitor Outputs to separately connected to your television.

#### **VIDEO CONNECTION NOTES:**

- When the component video jacks are used, the onscreen menus are not visible with high-definition video (720p or 1080i), and you must switch to the standard composite or S-video input on your TV, or to a 480p video source, to view them.
- When source devices such as a progressive scan DVD player or an HDTV set-top box are connected to the AVR 340 via component video connections, if you wish to take advantage of the record outputs or have video routed to a second room, it is also necessary to connect the standard, composite or Svideo outputs of the source device to the AVR 340. The record outputs and multiroom system cannot accept component inputs, nor are component inputs down-converted for use with these outputs.
- When connecting a video source to the AVR 340, you may use either composite, component or S-video, but only one type of video may be connected for each device.

## INSTALLATION AND CONNECTIONS

#### System and Power Connections

The AVR 340 is designed for flexible use with multiroom system and external control components.

## Remote Infrared (IR) Control of the AVR or Source Devices

If the receiver is placed behind a solid or smoked glass cabinet door, the obstruction may prevent the remote sensor from receiving commands. In this event, an optional remote sensor may be used. Connect the output of the remote sensor to the **Remote IR Input 9** jack.

If other components are also prevented from receiving remote commands, only one sensor is needed. Simply use this unit's sensor or a remote eye by running a connection from the **Remote IR Output**  pack to the Remote IR Input jack on Harman Kardon or other compatible equipment.

When controlling non-Harman Kardon source devices, the device may require the full carrier signal embedded within the IR command, rather than the "stripped" signal used by Harman Kardon and many other devices. In these cases you may need to connect the Remote IR Carrier Output 6 to the remote IR input of your device (or to an optional, external IR "blaster"), rather than using the standard Remote IR Output **Jack 10**. If you are in doubt as to which IR Output jack to use for the equipment in your system, contact your dealer or installer, or the manufacturer's support site and ask whether the unit to be controlled uses "full carrier" or "stripped carrier" IR commands. When "full carrier commands" are used, make the connection to the Remote IR Carrier Output 6. Otherwise, make the connection to the Remote IR Output Jack 1

**NOTE:** All remotely controlled components must be linked together in a "daisy chain." Connect the IR OUT jack of one unit to the IR IN of the next to establish this chain.

#### **Multiroom Connections**

The AVR 340 is equipped with multizone capabilities that allow it to send a separate audio source to the remote zone from the one selected for use in the main room.

Depending on your system's requirement, three options are available for audio connection:

**Option 1:** Use high-quality, shielded audio interconnect cable from the AVR 340's location to the remote room. In the remote room, connect the interconnect cable to a stereo power amplifier. The amplifier will be connected to the room's speakers. At the AVR 340, plug the audio interconnect cables into the **Multiroom Audio Outputs 2** on the AVR 340's rear panel.

#### Option 2: Connect the Multiroom Audio Outputs

② on the AVR 340 to the inputs of an optional stereo power amplifier. Run high-quality speaker wire from the amplifier to the speakers in the remote room.

Option 3: Taking advantage of the AVR 340's built-in seven-channel amplifier, it is possible to use two of the amplifier channels to power speakers in the remote room. When using this option, you will not be able to use the full 7.1-channel capabilities of the AVR 340 in the main listening room, but you will be able to add another listening room without external power amplifiers. To use the internal amplifiers to power a remote zone, connect the speakers for the remote room location to the Surround Back/Multiroom Speaker Outputs ①. Before using the remote room, you will need to configure the amplifiers for surround operation by changing a setting in the MULTIROOM SETUP menu, following the instructions shown on page 46.

**NOTE:** The AVR 340's multiroom system is only capable of distributing analog audio sources to the remote zone. Therefore, when connecting your digital audio equipment (e.g. CD or DVD players) as described on page 16, make sure to use both analog and digital audio connections to ensure that the devices will be available to the multiroom system.

#### IR Control From the Remote Room

For all options, you may connect an optional IR sensor in the remote room to the AVR 340 via an appropriate cable. Connect the sensor's cable to the **Multiroom IR Input** ③ on the AVR 340 and use the Zone II (or main) remote to control the room volume and any source devices connected to the **Remote IR Output Jack** ④ or to the **Remote IR Carrier Output Jack** ④ as described above. Alternatively, you may install an optional volume control between the output of the amplifiers and the speakers, which will only enable you to adjust the volume of playback in the remote room.

#### A-BUS® Installation Connections

The AVR 340 is among the few receivers available that offer built-in A-BUS/*READY* operation. When used with an optional A-BUS product, you have all the benefits of remote zone operation without the need for an external power amplifier.

To use the AVR 340 with an approved A-BUS product, simply connect it to the AVR 340 using Category 5 wiring that is properly rated for the specific in-wall installation. Terminate the wiring at the receiver end to a standard RJ-45 connector in compliance with the instructions furnished with the A-BUS product.

You may connect a single A-BUS module to the AVR 340 with no further equipment needed. If you wish to connect more than one A-BUS module, an optional, external A-BUS hub may be used to provide that capability.

Contact your dealer or visit www.harmankardon.com for more information on other A-BUS products available from Harman Kardon. No further installation or adjustment is needed, as the A-BUS jack on the AVR 340 routes the signals to their proper destination. The output fed to the A-BUS jack is determined by the AVR 340's multiroom system and menus.

If the A-BUS module is equipped with an IR sensor, you may use the Zone II or main remote to control the room volume and any source devices connected to the Remote IR Output Jack ① or to the Remote IR Carrier Output Jack ③ as described above.

#### **AC Power Connections**

This unit is equipped with two accessory AC outlets. They may be used to power accessory devices, but they should not be used with high-current-draw equipment such as power amplifiers. The total power draw to each outlet may not exceed 100 watts.

The **Switched AC Accessory Outlet 2** will receive power only when the unit is on. This is recommended for devices that have no power switch or a mechanical power switch that may be left in the "ON" position.

**NOTE:** Many audio and video products go into a Standby mode when they are used with switched outlets, and cannot be fully turned on using the outlet alone without a remote control command.

The **Unswitched AC Accessory Outlet**  will receive power as long as the unit is plugged into a powered AC outlet.

Once the **AC Power Cord** ② is connected, you are almost ready to enjoy the AVR 340's incredible power and fidelity!

## OPFRATION

#### **Basic Operation**

Once you have completed the initial setup and configuration of the AVR 340, it is simple to operate and enjoy. The following instructions will help you maximize the enjoyment of your new receiver:

#### Turning the AVR 340 On or Off

• When using the AVR 340 for the first time, you must first press the Main Power Switch 1 on the front panel to turn the unit on. This places the unit in a Standby mode, as indicated by the amber color of the Power Indicator 2. Once the unit is in Standby, you may begin a listening session by pressing the Standby/On Switch 3 on the front panel, or the Power On Button 4 or AVR Selector 5 on the remote. The Power Indicator 2 will turn blue. This will turn the unit on and return it to the input source that was last used. The unit may also be turned on from Standby by pressing any of the Input Selector Buttons 5 7 40 41 © 0 on the remote or the Input Source Selector Button 15 on the front panel.

Whenever the AVR is turned on, you will see all of the front-panel indicators light up for a few seconds. This is normal, and it is part of the unit's power-on self test procedure.

NOTE: After pressing one of the Input Selector

Buttons to T 4040 to turn the unit
on, press the AVR Selector to set the remote control to the AVR 340 functions.

To turn the unit off at the end of a listening session, simply press the Standby/On Switch 3 on the front panel or the Power Off Button 1 A on the remote. Power will be shut off to any equipment plugged into the rear-panel Switched AC Accessory Outlet 2 and the Power Indicator 2 will turn amber.

When the remote is used to turn the unit "off" it is actually placing the system in a Standby mode, as indicated by the amber color of the **Power Indicator 2**.

 To program the AVR 340 for automatic turn-off, press the Sleep Button on the remote. Each press of the button will decrease the time before shut-down in the following sequence:

The sleep time will be displayed in the **Lower Display Line 27**. The front-panel display will dim to one-half brightness when the Sleep function is programmed. To view the current sleep time when the sleep function has been activated, press the **Sleep Button** 10 once. The display will return to normal brightness, and the time until shutdown will

appear in the **Lower Display Line 27**. After a few seconds, the message will disappear and the display will return to half-brightness.

When the programmed sleep time has elapsed, the unit will automatically turn off. To cancel the Sleep function, press and hold the Sleep Button as the information display returns to normal brightness; continue to hold the button until the Sleep indicator numbers disappear and the words SLEEP OFF appear in the Lower Display Line 27.

When you will be away from home for an extended period of time it is always a good idea to completely turn the unit off with the front-panel **Main Power Switch** 11.

**NOTE:** All preset memories are lost if the unit is left turned off by using the **Main Power Switch** for more than four weeks.

#### Source Selection

- To select a source, press any of the Input
   Selector Buttons
   7 40 41 on
   on the remote.
- The input source may also be changed by pressing the front-panel Input Source Selector Button 15 Each press of the button will move the input selection through the list of available inputs.
- As the input is changed, the AVR 340 will automatically switch to the digital input (if selected), component video input, surround mode, output levels and night mode status as well as any speaker configuration settings established by using the INDEPENDENT Bass Management setting, that were entered during the configuration process for that source.
- When the input source is changed, the new input name and the digital (or analog) audio input will appear in the Upper Display Line 25, and the current surround mode will appear in the Lower Display Line 27. The same messages will also appear momentarily in the on-screen display in the lower third of the screen (semi-OSD).
- When an audio source is selected, the last video input used remains routed to the Video 1 Video and S-Video Outputs and Component Video, Composite Video and S-Video Monitor Outputs This permits you to simultaneously view and listen to different sources. This also allows you to choose a video source and then select the 6/8-Channel Direct Inputs as the audio source. Thanks to the AVR 340's cross-conversion capability, composite and S-video sources are upconverted and routed to the Component Video Monitor

**Outputs**  (6), and they may be viewed on a video display with component video inputs.

- The front-panel Video 4 Inputs 2021, Optical 3 Digital Input 3 or the Coaxial 3 Digital Input 3 may be used to connect a device such as a video game or camcorder to your home entertainment system on a temporary basis. When the front-panel jacks are not in use, you may prefer to install the covers supplied with your receiver for a neater appearance. Simply snap them in place. If you wish to use the jacks, press on the left side of each cover to pivot it and remove.
- When DMP ▶ Bridge is selected as the source and a compatible iPod is inserted in an optional Harman Kardon ▶ Bridge that is connected to ▶ Bridge DMP Connector ② on the rear panel, navigation messages will appear on any video display connected to the AVR's Video Monitor Outputs ②③. The remote control or front-panel controls may be used to navigate the iPod and access many of its functions. These messages will also appear in the front-panel display, and the iPod's battery may be charged. See the owner's guides for ▶ Bridge and your iPod for more information.

#### 6-Channel/8-Channel Direct Input

- There are two input choices available for use with sources such as a DVD-Audio or SACD player that are connected to the 6/8-Channel Direct Inputs
   Select the appropriate input according to the way your system and source equipment are configured:
- L CH DIRECT should be used when the SBR and SBL inputs are NOT in use. It is assumed that the input source device has its own internal bass management system. This input passes the input from the source directly through to the volume control without any analog to digital conversion and it mutes the unused input jacks to prevent unwanted noise from interfering with system performance.
- A CH DIRECT should be used when an input is connected to all eight 8-Channel Direct Inputs ②. It is assumed that the input source device has its own internal bass management system. This input passes the input from the source directly through to the volume control without any analog-to-digital conversion and it mutes the unused input jacks to prevent unwanted noise from interfering with system performance.

#### Volume and Tone Control

 Adjust the volume to a comfortable level using the front-panel Volume Control or remote Volume Up/Down Buttons or remote Volume

## OPERATION

- To temporarily silence all speaker outputs, press the Mute Button (2) . This will interrupt the output to all speakers and the headphone jack, but it will not affect any recording or dubbing that may be in progress. When the system is muted, the word MUTE will flash in the Upper Display Line 26. Press the Mute Button (2) again to return to normal operation.
- You may adjust the bass and treble tone controls at any point during a listening session by pressing the Tone Mode Button □ until TONE IN appears in the Lower Display Line □. Press the Tone Mode Button □ again until either TREBLE MODE or BASS MODE appears in the Lower Display Line □, and then use the □/ Buttons □ to boost or cut the low or high frequencies by up to ±10dB, in 2dB steps, until the desired setting is achieved.
- The tone controls may also be adjusted using the AUDIO SETUP submenu as described on page 23.
- For private listening, plug the 1/4" stereo phone plug from a pair of stereo headphones into the front-panel Headphone Jack 4. When the headphone plug is connected, all speakers will be muted and DOLBY H:BP will appear in the Lower Display Line 7, indicating that the headphone output is in the Bypass mode, and to confirm that no processing is being used. When the headphone plug is removed, the audio feed to the speakers will be restored.
- When the headphones are in use, you may take advantage of the Dolby Headphone modes to bring added spaciousness to headphone listening. Press the Dolby Mode Select Button ② or the Surround Mode Group Selector 7 to cycle through the three Dolby Headphone modes and select the one that you prefer.

#### Surround Mode Selection

One of the important features of the AVR 340 is its ability to reproduce a full multichannel surround sound field from digital sources, analog matrix surround-encoded programs and standard stereo programs.

Selection of a surround mode is based on personal taste, as well as the type of program source material being used. For example, motion pictures or TV programs bearing the logo of one of the major surround-

encoding processes, such as Dolby Surround or DTS Stereo, may be played in either the Dolby Digital, Dolby Pro Logic II or IIx Movie, DTS Neo:6 Cinema, or Logic 7 5.1 or 7.1 Cinema surround modes.

NOTE: Once a program has been encoded with matrix surround information, it retains the surround information as long as the program is broadcast in stereo. Thus, movies with surround sound may be decoded via any of the analog surround modes such as Dolby Pro Logic Ilx—Movie, Logic 7 Cinema or DTS Neo:6 Cinema, when they are broadcast via conventional TV stations, cable, pay-TV and satellite transmission. In addition, a growing number of made-for-television programs, sports broadcasts, radio dramas and music CDs are also recorded in surround sound.

Even when a program is not listed as carrying intentional surround information, you may find that the Dolby Pro Logic IIx, Logic 7 or DTS Neo:6, VMAx and the Hall or Theater modes often deliver enveloping surround presentations through the use of the natural information present in all stereo recordings.

Surround modes may be changed at any time by using either the front panel or remote control. Any changes made to the surround mode for that source will be retained in the AVR's menu, even after another source is selected, or if the AVR is placed in Standby mode. To select a new surround mode from the front panel, first press the Surround Mode Group Selector Button 7 until the desired major surround mode group, such as Dolby, DTS or Logic 7, is selected. Next, press the Surround Mode Selector Button 3 to choose the specific individual surround mode.

To select a surround mode using the remote, press the button for the major surround mode group that includes the mode you wish to choose from: **Dolby** 

(23), DTS Surround (24), DTS Neo:6 (25), Logic 7 (25), Stereo (23) or DSP Surround (11). The first press of the button will show the current mode from that group. To cycle through the available modes in that group, press the button again until the desired mode appears in the Lower Display Line (27), the on-screen display and in the Surround Mode Indicators (23). As the surround mode changes, the appropriate Surround Mode Indicator (23) will light to indicate the current mode.

At times, it is possible that more than one indicator will light. This can occur when the DSP Surround Off mode has been selected, or when post-processing is being used with an input signal, such as when the Dolby Digital 2.0 plus Dolby Pro Logic Ilx mode is used to create a 7-channel presentation of a two-channel signal.

The Dolby Digital, Dolby Digital EX and DTS 5.1, DTS-ES Matrix and DTS-ES Discrete modes may only

be selected when a digital input is in use and a digital signal in that format is present. In addition, when a digital source is present, the AVR 340 will automatically select and switch to the correct mode, regardless of the mode that has been previously selected. For more information on selecting digital sources, see the Digital Audio Playback section.

The Dolby Pro Logic IIx modes are available only when the AVR 340 has been configured for 6.1/7.1 operation by setting the Surround Back speakers as either **LARGE** or **SMALL** as described on page 28. These modes provide a matrixed 6.1-channel presentation of analog sources.

When the 6-channel/8-channel direct inputs are in use there is no surround processing, as these inputs take the analog output signals from an optional, external DVD-Audio or SACD player, or another source device and carry them straight through to the volume control without any further digital processing.

To listen to a program in traditional two-channel stereo, using the front left and front right speakers only (plus the subwoofer, if installed and configured), press the Stereo Button ③ until SURROUND OFF appears in the Lower Display Line ②7, or press the Surround Mode Group Selector ③ until the Stereo modes appear in the on-screen display and Lower Display Line ②7 and then press the Surround Mode Select Button ③ until SURROUND OFF appears in the on-screen display and Lower Display Line ②7.

When an analog audio source is in use, you may activate an analog bypass Surround Off mode, if you have removed the tone controls from the processing circuitry. This is done by pressing the Tone Mode Button 5 and using the 

Buttons 10 5 until the TONE OUT message appears in the Lower Display Line 27, or using the AUDIO SETUP menu.

If the tone controls are active (TONE IN), or if you have selected the digitized Surround Off mode, the DSP icon will appear in the Surround Mode Indicators 23, and the message SURROUND OFF will appear in the lower line of the semi-OSD display. The DSP icon indicates that the incoming signal is being digitized and any bass management settings are being applied. This mode is recommended when your front speakers are not capable of reproducing the lower frequencies and are thus used with a subwoofer.

When the DSP icon is not lit in Surround Off mode with an analog audio input in use, the AVR is in analog bypass mode. The signal is being routed directly to the volume control, without entering the digital domain and without any bass management settings being applied. This mode is desirable when your left and right speak-

## OPFRATION

ers are capable of reproducing low frequencies, and when you wish to hear the analog source material in its pure form.

#### Digital Audio Playback

Digital audio is a major advancement over older analog surround processing systems. It delivers five, six or seven discrete channels: left front, center, right front, left surround, right surround and optionally one or two surround back channels. Each channel reproduces full frequency range (20Hz to 20kHz) and offers dramatically improved dynamic range and significant improvements to signal-to-noise ratios. In addition, digital systems have the capability to deliver an additional channel that is specifically devoted to low-frequency information. This is the ".1" channel referred to when you see these systems described as "5.1," "6.1" or "7.1". The bass channel is separate from the other channels, but since it is intentionally bandwidth-limited, sound designers have given it that unique designation.

#### **Dolby Digital**

Dolby Digital is a standard part of DVD, and is available on specially encoded LD discs and satellite broadcasts and it is a part of the high-definition television (HDTV) system.

An optional, external RF demodulator is required to use the AVR 340 to listen to the Dolby Digital sound-tracks available on laser discs. Connect the RF output of the LD player to the demodulator and then connect the digital output of the demodulator to the **Optical** or **Coaxial Inputs** 131952 of the AVR 340. No demodulator is required for use with DVD players or DTS-encoded laser discs.

#### DTS

DTS is another digital audio system that is capable of delivering 5.1 or 6.1 discrete or matrix sound field reproduction. Although both DTS and Dolby Digital are digital, they use different methods of encoding the signals, and thus they require different decoding circuits to convert the digital signals back to analog.

DTS-encoded soundtracks are available on select DVD and LD discs, as well as on special audio-only DTS discs. You may use any LD or CD player equipped with a digital output to play DTS-encoded discs with the AVR 340. All that is required is to connect the player's output to either an **Optical** or **Coaxial Input** on the rear panel **1345** or front panel **1315**.

In order to listen to DVDs encoded with DTS sound-tracks, the DVD player must be compatible with the DTS signal as indicated by a DTS logo on the player's front panel. Early DVD players may not be able to play DTS-encoded DVDs. This does not indicate a problem with the AVR 340, as some players cannot pass the DTS signal through to the digital outputs. If you are in

doubt as to the capability of your DVD player to handle DTS discs, consult the player's owner's manual.

IMPORTANT NOTE: Many DVD players have a default setting that does not pass through the DTS data, even though the machine is capable of doing so. If your DVD player has the "DTS Digital Out" logo but does not trigger DTS playback in the AVR 340, change the player's settings in the "Audio" or "Bitstream" configuration menu so that DTS playback is enabled. The method for doing this will vary with each player. In some cases, the proper menu choice will be "Original," while in others it will be "DTS." Consult the owner's manual for your player to find the specific information to find the proper setting.

#### Selecting a Digital Source

To utilize either digital mode, you must have properly connected a digital source to the AVR 340. Connect the digital outputs from DVD players, HDTV receivers, satellite systems or CD players to the **Optical** or **Coaxial Inputs [13] [19]**. In order to provide a backup signal and a source for analog stereo recording, the analog outputs provided on digital source equipment should also be connected to their appropriate inputs on the AVR 340 rear panel (e.g., connect the analog stereo audio output from a DVD to the **DVD Audio Inputs (5)** on the rear panel when you connect the source's digital outputs).

The AVR 340's Auto Polling feature searches both the digital and analog audio inputs assigned to a source for an incoming signal. Although the digital input is the default, if the digital stream is not present or is interrupted, the unit will automatically switch over to the analog inputs. If you wish to disable the auto-polling feature for any source, follow the instructions shown in the Input Setup section of this manual on page 23.

#### **Digital Bitstream Indications**

When a digital source is playing, the AVR 340 senses the type of bitstream data that is present. Using this information, the correct surround mode will automatically be selected. For example, DTS bitstreams will cause the unit to switch to DTS decoding, and Dolby Digital bitstreams will enable Dolby Digital decoding.

When the unit senses PCM data from CDs or LDs, it will default to Logic 7 Music mode, although you may select any of the standard surround modes, such as Dolby Pro Logic II or Logic 7. Since the range of available surround modes is dependent on the type of digital data that is present, the AVR 340 uses a variety of indicators and messages to let you know what type of signal is present. These messages will appear shortly after an input or surround mode is changed, and they will remain in the **Lower Display Line 27** for about five seconds before that portion of the display returns to the normal surround mode indication.

#### **Surround Mode Channel Indications**

For Dolby Digital and DTS sources, a three-digit indication will appear, showing the number of channels present in the data. An example of this type of display is 3/2/-1.

The first number indicates how many discrete front channel signals are present.

- A "3" tells you that separate front left, center and front right signals are available. This will be displayed for Dolby Digital 5.1 and DTS 5.1 programs.
- A "2" tells you that separate front left and right signals are available, but there is no discrete center channel signal. This will be displayed for bitstreams that have stereo program material.
- A "1" tells you that there is only a mono channel available in the bitstream.

The middle number indicates how many discrete surround channel signals are present.

- A "2" tells you that separate surround left and right signals are available. This will be displayed for Dolby Digital 5.1 and DTS 5.1 programs.
- A "1" tells you that there is only a single, surroundencoded surround channel. This will appear for Dolby Digital bitstreams that have matrix encoding.
- A "0" indicates that there is no surround channel information. This will be displayed for 2-channel stereo programs.

The last number indicates whether there is a discrete low-frequency effects (LFE) channel. This is the ".1" in the common abbreviation of "5.1" sound and is a special channel that contains only bass frequencies.

- A "1" tells you that an LFE channel is present.
   This will be displayed for Dolby Digital and DTS programs, as available.
- A "O" indicates that there is no LFE channel information available. However, even when there is no dedicated LFE channel, low-frequency sound will be present at the subwoofer output when the speaker configuration is set to show the presence of a subwoofer.

## OPFRATION

The information in the right side of the display will tell you if the digital audio data contains a special flag signal that will automatically activate the appropriate 6.1 or 7.1 mode. This will be shown as  $\mathbf{EX} - \mathbf{0N}$  or  $\mathbf{EX} - \mathbf{0FF}$  for Dolby Digital bitstreams and  $\mathbf{EX} - \mathbf{0N}$  or  $\mathbf{EX} - \mathbf{0FF}$  for DTS bitstreams.

If the EX flag is off, and your receiver has been configured for 6.1/7.1 operation, you may manually turn on EX processing as appropriate by simply selecting the Dolby Digital EX surround mode as described on pages 23 and 35. When the ES flag is not present in a DTS bitstream, you may benefit from a 6.1-channel presentation by selecting the DTS+Neo:6 post-processing surround mode using the procedure described on pages 23 and 35. In that mode, the DTS Neo:6 algorithms will be used to derive the surround back channel from the DTS bitstream information.

#### Surround Mode Post Processing

Thanks to the power of the AVR 340's DSP processor, a variety of surround mode options are available for most digital signals to deliver either the native information or to produce an enhanced sound field to match the number of speakers in your system. The modes available and the number of channels available for each mode will vary depending on the incoming bitstream, and the configuration of your system, and are listed in the tables on page 40. The modes may be selected in the usual manner by selecting the major Surround Mode Group first, and then scrolling through the options (see pages 23 and 35).

The incoming bitstreams are indicated in the **Lower Display Line 27** as described above. After you have selected a surround mode, after about 5 seconds, the bitstream will be displayed briefly before the unit returns to normal operation. Therefore, you may ascertain the current bitstream by pressing the button for the major Surround Mode Group and waiting for a few moments for the bitstream to appear in the **Lower Display Line 27**. The bitstream information will also be displayed after the source input has been changed.

To use the tables on page 40, match the indication in the display to the Incoming Bitstream listed in the left column. The available surround modes are shown to the right.

See page 45 for information on setting the system to use a surround mode that you select by referring to these tables, rather than the default digital mode.

It is always a good idea to check the readout for the channel data to make certain that it matches the audio logo information shown on the back of a DVD package. In some cases you will see indication for "2/0/0" even when the disc contains a full 5.1, or 3/2/.1 signal. When this happens, check the audio output settings for your DVD player or the audio menu selections for the specific disc being played to make certain that the player is sending the correct signal to the AVR.

#### **PCM Audio Playback**

PCM is the abbreviation for Pulse Code Modulation, which is the type of digital signal used for standard CD playback and other non-Dolby Digital and non-DTS digital sources such as Mini-Disc. The digital circuits in the AVR 340 are capable of high-quality digital-to-analog decoding, and they may be connected directly to the digital audio output of your CD or LD player.

Connections may be made to either the rear-panel Optical or Coaxial Inputs (54) or the front-panel Digital Inputs [1].

To listen to a PCM digital source, first select the input for the desired source (e.g., CD). Next press the **Digital**Select Button (13) (17) and then use the △/▼

Buttons (12) on the remote, or the ◄/► Selector

Buttons (10) on the front panel, until the desired choice appears in the Upper Display Line (25).

During PCM playback, you may select any Surround mode except Dolby Digital or DTS, as shown in the table on page 40. Note that for convenience, we have included the modes available for analog sources (including the tuner) in this chart.

When a PCM signal is detected, the **Lower Display Line 27** will briefly show a message with the letters
PCM, in addition to a readout of the sampling frequency of the digital signal. In most cases, this will be **44.1** kHz or **48**kHz, though in the case of
specially mastered, high-resolution audio discs you will
see a **96**kHz indication.

#### Speaker/Channel Indicators

In addition to the bitstream indicators, the AVR 340 features a set of unique channel-input indicators that tell you how many channels of digital information are being received and/or whether the digital signal is interrupted (Figure 16).

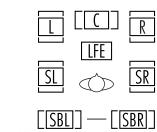


Figure 16

The letters inside the boxes tell you which channels are receiving an input signal. Since conventional analog audio is only two channels, the "L" and "R" letters will light with any analog source. When a digital source is in use you will see letters displayed that correspond to the number of channels in the incoming data stream, which may be just the L and R for two channel PCM or 2.0 Dolby Digital material. When a 5.1 signal is being received the L/C/R/SL/SR indicators will light, with the LFE indication also being shown when an LFE signal is present. All seven indicators, including the SBL/SBR letters will light for a 7.1 signal, and a horizontal line is shown to connect the SBL/SBR indicators when a 6.1 source is in use.

It is important to note that although Dolby Digital, for example, is referred to as a "5.1" system, not all Dolby Digital DVDs or programs are encoded for 5.1. Thus, it is sometimes normal for a DVD with a Dolby Digital soundtrack to trigger only the "L" and "R" indicators.

**NOTE:** Many DVD discs are recorded with both "5.1" and "2.0" versions of the same soundtrack. When playing a DVD, always be certain to check the type of material on the disc. Most discs show this information in the form of a listing or icon on the back of the disc jacket. When a disc does offer multiple soundtrack choices, you may have to make some adjustments to your DVD player (usually with the "Audio Select" button or in a menu screen on the disc) to send a full 5.1 feed to the AVR 340. It is also possible for the type of signal feed to change during the course of a DVD's playback. In some cases, the previews of special material will only be recorded in 2.0 audio, while the main feature is available in 5.1 audio. The AVR 340 will automatically sense changes to the bitstream and channel count and reflect them in these indicators.

The letters used by the Speaker/Channel Input Indicators 25 will flash to indicate when a bitstream has been interrupted. This will happen when a digital input source is selected before the playback starts, or when a digital source such as a DVD is paused. The flashing indicators remind you that the playback has stopped due to the absence of a digital signal and not through any fault of the AVR 340. This is normal, and the digital playback will resume once the playback is started again.

(Cont. on page 41)

## OPERATION

The boxes around the channel indication letters are used to show which speakers are configured in your system. A small box around the letter indicates that a "Small" speaker has been assigned to that position, while a larger, double box indicates a "Large" speaker assignment.

Note that in some cases, such as an analog stereo or 2.0 digital source you will see empty speaker position boxes, which indicates that the speaker is active and will receiver sound, but that there is no discrete signal for that channel. In other cases you may see letters with no speaker boxes. This indicates that there is a discrete signal for that channel, but due to the mode in use (e.g., Dolby VS with a 5.1 source) there is no signal being sent to the channel.

#### Night Mode

A special feature of Dolby Digital is the Night mode, which enables specially encoded Dolby Digital input sources to be played back with full digital intelligibility while reducing the minimum peak level by 1/4 to 1/3. This prevents abruptly loud transitions from disturbing others, without reducing the impact of the digital source. The Night mode is available only when Dolby Digital signals with special data are being played.

The Night mode may be engaged when a Dolby Digital DVD is playing by pressing the Night Mode Button 2 on the remote. Next, press the  $\blacktriangle/\blacktriangledown$  Buttons 4 to select either the middle-range or full-compression versions of the Night mode. To turn the Night mode off, press the  $\blacktriangle/\blacktriangledown$  Buttons 4 until the message in the lower third of the video display and in the Lower Display Line 27 reads D-RANGEOFF.

The Night mode may also be selected to always be on at either level of compression using the options in the **DOLBY** menu. See page 24 for information on using the menus to set this option.

#### IMPORTANT NOTES ON DIGITAL PLAYBACK:

- When the digital playback source is stopped, or in a pause, fast-forward or chapter-search mode, the digital audio data will momentarily stop, the channel position letters inside the Speaker/Channel Input Indicators 23 will flash. This is normal and does not indicate a problem with either the AVR 340 or the source machine. The AVR 340 will return to digital playback as soon as the data is available and when the machine is in a standard play mode.
- When playing DVDs or viewing television signals with digital audio, the number of channels and format of the incoming bitstream may vary depending on the portion of the DVD being viewed (e.g. trailers, director's commentary), or when commercials or local station identification is broadcast. The AVR 340 will automatically react to changes in the incoming signal.

- Some television system broadcasters are not capable of transmitting a 5.1 digital signal. Therefore, although the program material may be encoded in the Dolby Digital or DTS formats, the actual broadcast may only be a 2.0 signal. Check with your cable or satellite provider for more information.
- Although the AVR 340 will decode virtually all current DVD movies, CDs and HDTV sources, it is possible that some future digital sources may not be compatible with the AVR 340.
- Not all digitally encoded programs contain full 5.1or 6.1-channel audio. Consult the program guide that accompanies the DVD or laser disc to determine which type of audio has been recorded on the disc. The AVR 340 will automatically sense the type of digital surround encoding used and adjust to accommodate it.
- When some digital sources are playing, you may not be able to select some of the analog surround modes such as Dolby Pro Logic II or IIx, Dolby 3 Stereo, Hall, Theater or Logic 7. Refer to the tables on page 40 for more information.
- When a Dolby Digital or DTS source is playing, it is not possible to make an analog recording using the Tape Outputs (3) and Video 1 Audio Outputs
   However, the digital signals will be passed through to the Digital Audio Outputs (2)(2).

#### **Tuner Operation**

The AVR 340's tuner is capable of tuning AM, FM and FM Stereo broadcast stations. Stations may be tuned manually, or they may be stored as favorite station presets and recalled from a 30-position memory.

#### Station Selection

- Press the AM/FM Tuner Select Button To en the remote to select the tuner as an input. The tuner may be selected from the front panel either by pressing the Input Source Selector 6 until the tuner is active or by pressing the Tuner Band Selector 1.
- 2. Press the AM/FM Tuner Select Button or Tuner Band Selector again to switch between AM and FM so that the desired frequency band is selected.
- Press the Tuner Mode Button to select manual or automatic tuning.

When the button is pressed so that AUTO appears in the Lower Display Line 27 each press of the Tuning Selectors 20 will put the tuner in a scan mode that seeks the next higher- or lower-frequency station with acceptable signal strength. An AUTO ST TUNED indication will momentarily appear when the station stops at a stereo FM station, and an AUTO TUNED

indication will momentarily appear when an AM or monaural FM station is tuned. Press the Tuning buttons again to scan to the next receivable station.

When the button is pressed so that MANUAL appears in the Lower Display Line 27 each tap of the Selector will increase or decrease the frequency by one increment. When the tuner receives a strong-enough signal for adequate reception, MANUAL TUNED will appear in the Lower Display Line 27.

4. Stations may also be tuned directly in either the automatic or manual mode. To enter a station's frequency directly, first select the AM or FM band as desired be pressing the AM/FM Tuner Select Button Next, press the Direct Button Within five seconds of seeing the DIRECTIN scroll in the Upper Display Line 3, enter the station frequency by pressing the Numeric Keys 1. If you press an incorrect button while entering a direct frequency, press the Clear Button 3 to start over.

NOTE: When FM reception of a station is weak, audio quality will be increased by switching to Mono mode by pressing the Tuner Mode Button 79 so that MANUAL appears momentarily in the Lower Display Line 7 and goes out. This will also activate manual tuning mode.

#### **Preset Tuning**

Using the remote, up to 30 stations may be stored in the AVR 340's memory for easy recall using the front panel controls or the remote.

To enter a station into the memory, first tune the station using the steps outlined above. Then:

- Within 5 seconds, press the Numeric Keys (1) corresponding to the location where you wish to store this station's frequency. Once entered, the preset number will appear in the Upper Display Line [23].
- 3. Repeat the process after tuning any additional stations to be preset.

#### **Recalling Preset Stations**

- To manually select a station previously entered in the preset memory, press the Numeric Keys 13 that correspond to the desired station's memory location.
- To manually tune through the list of stored preset stations one by one, press the Preset Stations Selector Buttons 14 30 and the front panel or remote.

## OPFRATION

#### Recording

In normal operation, the audio or video source selected for listening through the AVR 340 is sent to the record outputs. This means that any program you are watching or listening to may be recorded simply by placing machines connected to the **Tape Outputs** or **Video 1** or **2 Audio/Video** and **S-Video**Outputs **Outputs** on the Record mode.

When a digital audio recorder is connected to the **Digital Audio Outputs 229**, you are able to record the digital signal using a CD-R, MiniDisc or other digital recording system.

#### NOTES:

- The digital outputs are active only when a digital signal is present, and they do not convert an analog input to a digital signal, or change the format of the digital signal. In addition, the digital recorder must be compatible with the output signal. For example, the PCM digital input from a CD player may be recorded on a CD-R or MiniDisc, but Dolby Digital or DTS signals may not.
- Please make certain that you are aware of any copyright restrictions on any material you copy.
   Unauthorized duplication of copyrighted materials is prohibited by federal law.

#### Using ™Bridge

When Harman Kardon's \*\*Bridge\* (optional) is connected and a compatible iPod is docked in The Bridge, press the DMP \*\*Bridge\* Selector Button ① to choose the iPod as the input source. Pressing the DMP \*\*Bridge\* Selector Button ① will also activate the AVR remote's control codes for the iPod, and you may also use the front-panel controls to operate the iPod. You may also select DMP \*\*Bridge\* as the source from the front panel by repeatedly pressing the Input Source Selector ① until DMP appears in the Upper Display Line ② although no Input Indicator ② will light.

The front-panel controls may be used to access a number of iPod functions. Press the Tuner Mode Button 17 to play or pause the current track. The Tuning Selector 19 may be used to search reverse (left side of button) or forward (right side of button) through the tracks. Press the Tuner Band Selector 11 to call up the iPod's menu. Press the Preset Station Selectors 12 to scroll, and the Set Button 12 to select. For complete information on using the AVR's remote or front-panel controls to operate an iPod, see the instructions packed with The Bridge.

#### **Output Level Trim Adjustment**

Normal output level adjustment for the AVR 340 is established using EzSet/EQ, or the internal test tone, as outlined on pages 31–32. In some cases, however, it may be desirable to adjust the output levels using program material such as a test disc, or a selection you are familiar with.

To adjust the output levels using program material, first set the reference volume for the front left and front right channels using the **Volume Control 23 33**.

If you are using a disc with test signals or an external signal generator as the source from which to trim the output levels, you may use a handheld SPL meter to guide you to the correct SPL levels. Set the meter to the C-Weighting Slow scale, and adjust the volume until the meter reads 75dB.

Once the reference level has been set, press the Channel Select Button ③ and FRONT L LEVEL will appear in the Lower Display Line ② and semi-OSD. To change the level, first press the Set Button ⑥, and then use the ▲/▼ Buttons ② to raise or lower the level. DO NOT use the volume control, as this will alter the reference setting.

Once the change has been made, press the Set Button ⑥ and then press the ▲/▼ Buttons ② to select the next output channel location you wish to adjust. To adjust the subwoofer level, press the ▲/▼ Buttons ② until WOOFER LEVEL appears in the Lower Display Line ☑ and on screen.

Repeat the procedure as needed until all channels requiring adjustment have been set. When all adjustments have been made and no further adjustments are made for five seconds, the AVR 340 will return to normal operation.

The channel output for any input may also be adjusted using the full-OSD on-screen menu system. First, set the volume to a comfortable listening level using the Volume Control ②③. Then, press the OSD Button ② to bring up the MASTER MENU (Figure 1). Press the ▼ Button ② until the onscreen ► cursor is next to MANUAL SETUP.

Then press the **Set Button (b** to display the **MANUAL SETUP** submenu, and use the **ADJUST** line. Press the **Set Button (b** again to display the **CHANNEL ADJUST** submenu.

Once the menu appears on your video screen, first use the ▲/▼ Buttons 1 to move the on-screen ► cursor so that it is next to the TEST TONE line. Press the **◄/▶** Buttons **⑤** so that **○ F** appears. This will turn off the test tone and allow you to use your external test disc or other source material as the reference. Then, use the  $\triangle/\nabla$  Buttons (1) until the ▶ cursor is next to the **TEST TONE SEQ** line so that you may select between automatic and manual movement of the test tone from one channel to the next. When AUTO appears, the test tone will automatically circulate from one channel to the next, pausing momentarily at each channel. If you adjust the level of any channel, the test tone will remain paused at that channel until several seconds after your last adjustment before continuing to the next channel. When MANUAL appears, the test tone will remain paused at the last channel until you use the ▲/▼ Buttons 1 to select another channel.

At each channel position, use the **◄/▶ Buttons (1)** to change the output level. Remember, the goal is to have the output level at each channel be equal when heard at the listening position.

If you wish to reset all the levels to their original factory default of OdB offset, press the ▲/▼ Buttons so that the on-screen cursor is next to the CHANNEL RESET line and press the ◄/▶ Buttons so that the word ON appears. After the levels are reset, resume the procedure outlined above to reset the levels to the desired settings. When all adjustments are done, press the ▲/▼ Buttons to move the on-screen ▶ cursor so that it is next to BACK TO MANUAL SETUP and then press the Set Button sit you wish to go back to the manual setup menu to make other adjustments. If you have no other adjustments to make, press the OSD Button to the manual system.

**NOTE:** The output levels may be separately trimmed for each digital and analog surround mode by selecting that mode and following the instructions shown above.

#### **Dim Function**

Since the AVR 340 will often be used when movies or other video programming is viewed under low-light conditions, you may wish to lower the brightness of the front-panel displays and indicators so that they do not distract from the video presentation. You may dim the displays using the remote.

AVR340

harman/kardon

## OPFRATION

Simply press the **Dim Button** ③ once to dim the front panel to half the normal brightness level; press it again to turn the displays off. Note that when the displays are dimmed or turned off, the blue **Power Indicator** ② will remain lit as a reminder that the AVR is still turned on. The accent lighting for the **Volume Control** ② will dim when the panel displays are at half brightness.

Note that all changes to the front-panel brightness level are temporary; the displays will return to full brightness after the AVR is turned off and then on again. To return the displays to full brightness without turning the unit off, press the **Dim Button** (3) as needed until the displays are on.

In addition to lowering the brightness of the displays or turning them off completely, you may wish to have them appear whenever a button on the remote or front panel is pushed, and then gradually fade out after a set time period. You may do this by making the appropriate settings in the VFD FADE TIME OUT line of the ADVANCED SELECT Menu, as shown on page 44.

#### Memory Backup

This product is equipped with a memory backup system that preserves the system configuration information and tuner presets if the unit is accidentally unplugged or subjected to a power outage. This memory will last for approximately four weeks, after which time all information must be reentered.

## TROUBLESHOOTING GUIDE

SYMPTOM	CAUSE	SOLUTION
Unit does not function when Main Power Switch is pushed	• No AC Power	<ul> <li>Make certain AC power cord is plugged into a live outlet</li> <li>Check to see whether outlet is switch-controlled</li> </ul>
Display lights, but no sound or picture	<ul><li>Intermittent input connections</li><li>Mute is on</li><li>Volume control is down</li></ul>	<ul> <li>Make certain that all input and speaker connections are secure</li> <li>Press Mute Button (2) (1)</li> <li>Turn up volume control</li> </ul>
No sound from any speaker; light around power switch is red	<ul> <li>Amplifier is in protection mode due to possible short</li> <li>Amplifier is in protection mode due to internal problems</li> </ul>	<ul> <li>Check speaker wire connections for shorts at receiver and speaker ends</li> <li>Contact your local Harman Kardon service center</li> </ul>
No sound from surround or center speakers	<ul> <li>Incorrect surround mode</li> <li>Input is monaural</li> <li>Incorrect configuration</li> <li>Stereo or Mono program material</li> </ul>	<ul> <li>Select a mode other than Stereo</li> <li>There is no surround information from mono sources</li> <li>Check speaker mode configuration</li> <li>The surround decoder may not create center- or rear-channel information from nonencoded programs</li> </ul>
Unit does not respond to remote commands	<ul><li>Weak batteries in remote</li><li>Wrong device selected</li><li>Remote sensor is obscured</li></ul>	<ul> <li>Change remote batteries</li> <li>Press the AVR selector</li> <li>Make certain front panel sensor is visible to remote or connect remote sensor</li> </ul>
Intermittent buzzing in tuner	Local interference	Move unit or antenna away from computers, fluorescent lights, motors or other electrical appliances
Letters flash in the channel indicator display and digital audio stops	Digital audio feed paused	<ul><li>Resume play for DVD</li><li>Check that Digital Input is selected</li></ul>

In addition to the items shown above, additional information on troubleshooting possible problems with your AVR 340, or installation-related issues, may be found in the list of "Frequently Asked Questions" which is located in the Product Support section of our Web site at www.harmankardon.com.

#### **Processor Reset**

In the rare case in which the unit's operation or the displays seem abnormal, the cause may involve the erratic operation of the system's memory or microprocessor.

To correct this problem, first unplug the unit from the AC wall outlet and wait at least three minutes. After the pause, reconnect the AC power cord and check the unit's operation. If the system still malfunctions, a system reset may clear the problem.

To clear the AVR 340's entire system memory including tuner presets, output level settings, delay times and speaker configuration data, first place the AVR in Standby Mode, and then press and hold the **Tone Mode Button** 5 button for three seconds. The unit will turn on automatically.

**NOTE:** Resetting the processor will erase any configuration settings you have made for speakers, output levels, surround modes, digital input assignments as well as the tuner presets. Before performing a processor reset, we suggest that you record your current system settings on the worksheet found on page XX. The unit will be returned to the factory presets, and all settings for these items must be reentered.

If the system is still operating incorrectly, there may have been an electronic discharge or severe AC line interference that has corrupted the memory or microprocessor.

If these steps do not solve the problem, consult an authorized Harman Kardon service center.

## harman/kardon

## **Service Bulletin**

Service bulletin # HK2006-01 January 2006

Warranty labor rate: MINOR repair

To: All harman/kardon Service Centers

Models: AVR135, AVR140, AVR240, AVR340,

AVR135/230v, AVR235/230v, AVR335/230v, AVR140/230v, AVR240/230v, AVR340/230v

Subject: Defective Wafer

In the event you receive an AVR135, AVR140, AVR240, AVR340, AVR135/230v, AVR235/230v, AVR335/230v, AVR140/230v, AVR240/230v, or AVR340/230v receiver with the complaint "there is no On Screen Display (OSD) output through the Composite, S-video, or Component Video\* connections, or no video pass-through from S-Video or Composite connections", perform the following procedure:

Synopsis: Flat flex cable assembly possibly not making a good contact with defective wafer connector CN72, located on the Input PCB.

Check to see if the affected unit falls into the serial number range(s) below, which may need modification.

- 1) Remove the top cover
- 2) Remove the Tuner PCB and Video PCB's.
- 3) Remove the Input PCB; replace 16 pin wafer connector CN72 with h/k part# KJP32GA117ZG.
- 4) Replace all PCB's in reverse order, and the top cover.
- 5) Test the unit.

MODEL	SERIAL NUMBER (120V)	SERIAL NUMBER (230V)	STATUS	ACTION
AVR135	AN0020-28676 to AN0020-33475		May Need Modification	Replace Wafer
AVR140	AN0031-04201 to AN0031-16800		May Need Modification	Replace Wafer
AVR240	AN0032-01001 to AN0032-13000		May Need Modification	Replace Wafer
AVR340	AN0033-01001 to AN0033-09000		May Need Modification	Replace Wafer
AVR135 in CP15 system	AN0023-08026 to AN0023-09825		May Need Modification	Replace Wafer
AVR235 in CP25 system	AN0024-03001 to AN0024-04000		May Need Modification	Replace Wafer
AVR335 in CP35 system	AN0025-04101 to AN0025-05100		May Need Modification	Replace Wafer
AVR135/230		AN0027-14356 to AN0027-17965	May Need Modification	Replace Wafer
AVR235/230		AN0028-11601 to AN0028-20300	May Need Modification	Replace Wafer
AVR335/230		AN0029-07401 to AN0029-09830	May Need Modification	Replace Wafer
AVR140/230		AN0034-01001 to AN0034-04600	May Need Modification	Replace Wafer
AVR240/230		AN0035-01001 to AN0035-03400	May Need Modification	Replace Wafer
AVR340/230		AN0036-01001 to AN0036-02200	May Need Modification	Replace Wafer

<sup>\*</sup> Note: For the models above, excluding the AVR340, the full On Screen Display (OSD) normally will not be visible with Component video connections alone. For model AVR340, when the component video jacks are used, the onscreen menus are not visible with high-definition video (720p or 1080i), and you must switch to the standard composite or S-video input on your TV, or to a 480p video source, to view them.

# harman/kardon

# TECH TIPS

## Troubleshooting tips and solutions to common service problems

For models: TIP# HKTT2003-01 Rev7

AVR7000/7200/7300/8000 AVR10 AVR100/200/300/500 DPR1001 AVR110/210/310/510 DPR1005 AVR120/220/320/520 DPR2005

AVR125/225/325/525 HK3370/3470/3375/3475

AVR130/230/330/430/630 HK3250

AVR135/235/335/435/635

AVR140/240/340

Subject: Backup Memory on AVR/DPR/HK series receivers

In the event of the complaint: "the receiver is losing its memory (any programmed system settings) when the unit is turned off, or after the unit is unplugged (briefly\*)":

Check and replace:


Model	Designator	Location	Description	Part number
AVR10	C712 D709	Front PCB	0.047 Farad 5.5v capacitor and 1N4148 diode	#3439247315 #2058322101
AVR7000	C730	Front PCB	0.047 Farad 5.5v capacitor	# P10790-ND or # J3432147324X
AVR7200	C106	Front PCB	0.047 Farad 5.5v capacitor	# P10790-ND
AVR7300	C657	DSP PCB	0.047 Farad 5.5v capacitor	# H01-CEZXA0479MN-5
AVR8000	C726	Front PCB	0.047 Farad 5.5v capacitor	# 55230310NR or # P10790-ND
AVR100/200	C412	Front PCB	0.047 Farad 5.5v capacitor	# CEGT-B473J-0J0
AVR300	C906	Front PCB	0.1Farad 5.5v capacitor	# J4433210421X or # P10791-ND
AVR500	C906	Front PCB	0.1Farad 5.5v capacitor	# J4433210421X or # P10791-ND
AVR110/210/310/510 AVR120/220/320/520	C216	Front PCB	0.047 Farad 5.5v capacitor	# P10790-ND
AVR125/225	C734,C885	Front PCB	two 0.1F capacitors in parallel	# BCESOHD104
AVR325/525	C106	Front PCB	0.047 Farad 5.5v capacitor	# P10790-ND
AVR130/230/330	BAT1	Front PCB	3.6v Battery	# HABGP40BVH3A3H
AVR135/235/335	BAT1	Front PCB	3.6v Battery	# HGP15BNH3A3H
AVR140/240/340	BAT1	Front PCB	3.6v Battery	# HABGP40BVH3A3H
AVR430/630	C657	DSP PCB	0.047 Farad 5.5v capacitor	# CEZXA0479MN-5
AVR435/635	C557	DSP PCB	0.047 Farad 5.5v capacitor	# H03-CEZXA0479MN-0
DPR1001	BC601	Main PCB	0.1Farad 5.5v capacitor	# CEGT-B104J-0J0
DPR1005/2005	C437	Processor PCB	0.047 Farad 5.5v capacitor	# CEZXA0479MN-5
HK3370/3470	C301	Front PCB	0.1Farad 5.5v capacitor	# CEGT-B104J-0J0
HK3375/3475	C301	Front PCB	0.1Farad 5.5v capacitor	# CEGT-B104J-0J0
HK3250	C712 D709	Front PCB	0.047 Farad 5.5v capacitor and 1N4148 diode	#3439247315 #2058322101


<sup>\*</sup> After approximately two weeks of being disconnected from AC supply, even a normally functioning receiver may lose any programmed settings and switch to default settings. (Four weeks for the DPR1005 & 2005)

AVR340

harman/kardon

AVR340

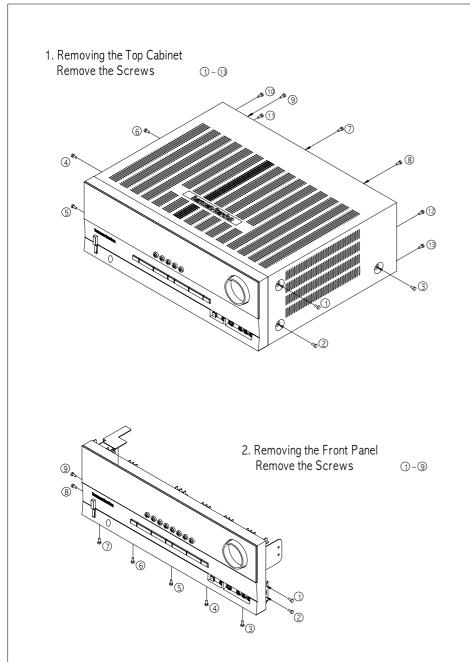

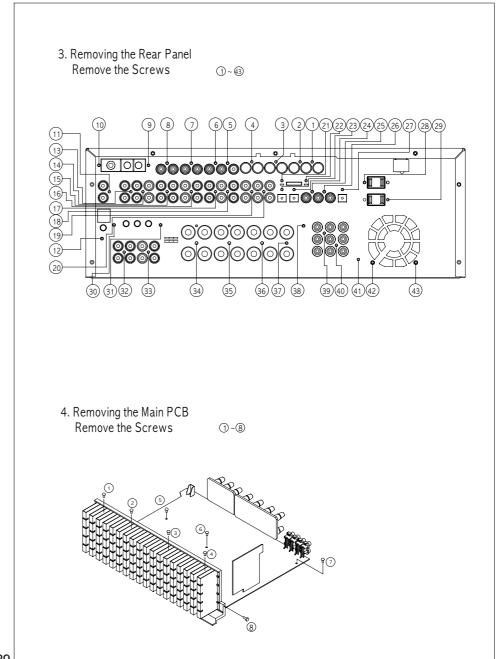

## DISASSEMBLY PROCEDURES(AVR340)

#### <1> TOP-CABINET(21) REMOVAL

1. Remove 13 screws(S1,S7) and then remove the Top-cabinet.

#### <2> FRONT PANEL ASS'Y REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- 2. Disconnect the lead wire (BN72-32p)) on the Fip PCB(37-1) from connector(CN72) on the Input PCB(39-1)
- 3. Disconnect the lead wire(BN80-11P) on the Fip PCB(37-1) from connector(CN80) on the Main PCB(38-1).
- 4.Disconnect the lead wire(BN16-6P) on the Tone PCB(37-3) from connector(CN16) on the Connect PCB(37-7).
- 5. Disconnect the lead wire(BN41-6P) on the Tone PCB(37-3) from connector(CN41) on the Video PCB(40-1).
- 6. Disconnect the lead wire(BN18-5P) on the Digital input PCB(37-8) from connector(CN18) on the Input PCB(39-1).
- 7. Disconnect the lead wire(BN81-8P) on the Fip PCB(37-1) from connector(CN81) on the Trans PCB(40-5).
- 8. Disconnect the lead wire(BN15-8P) on the Fip PCB(37-1) from connector(CN15) on the Download PCB(37-9).
- 9. Remove 1 screw(S10) and then lead wire(JW82-2P) on the Phone PCB(37-4).
- 10.Remove 1screw(S10) and then lead wire(JW84-1P) on the Tone PCB(37-3)
- 10. Remove 10 screws(S1) and then remove the Front Panel ASS'Y.

#### <3> TONE PCB(37-3) REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- 2. Remove the Front Panel ASS'Y, referring to the previous step<2>.
- 3. Pull out the Volume Knob ASS'Y & 3 Rotary Knobs(5).
- 4. Remove 10 screws(S2,S14), and then remove the Tone PCB(37-3).
- 5. Disconnect the lead wire(BN84-5P) One the Tone PCB(37-3) from connector(CN84) on the Fip PCB(37-1)

#### <4>PHONE PCB(37-4) REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- 2. Remove the Front Panel ASS'Y, referring to the previous step<2>.
- 3. Disconnect the lead wire (BN85-2P) on the Fip PCB(37-1) from connector(CN85) on the Phone PCB(37-4)
- 4. Remove 2 screws(S2,S3) and then remove the Phone PCB(37-4)

#### <5>POWER LED PCB(37-6) REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- 2. Remove the Front Panel ASS'Y, referring to the previous step<2>.
- 3. Remove 2 screws(S2) and then remove the Power led PCB(37-6).
- 4. Disconnect the lead wire(CN88) from connector(BN88-4P) on the Fip PCB(37-1).

#### <6>FIP PCB(37-1) REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- 2. Remove the Front Panel ASS'Y, referring to the previous step<2>.
- 3. Remove the Tone PCB(37-3), referring to the previous step<3>.
- 4. Remove the Phone PCB(37-4), referring to the previous step<4>.
- 5. Remove the Power led PCB(37-6), referring to the previous step<5>.
- 6. Remove 6 screws(S2) and then remove the Fip PCB(37-1)

#### <7>TUNER MODULE(42) REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- 2. Disconnect the connector(CON1-Card cable) from connector(CN13) on the Input PCB ASS'Y(39-1).
- 3. Remove 2 screws(S8) and then remove the Tuner Module(42).

#### <8>VIDEO PCB(40-1) REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- 2. Disconnect the lead wire(BN41-6P) on the Tone PCB(37-3) from connector(CN41) on the Video PCB(40-1
- 3. Disconnect the connector (CN15-Card cable) on the Input PCB(39-1) from connector(CN43) on the Video PCB(40-1).
- Remove 6 screws(S8) and then remove the Video PCB(40-1).

#### <9>I-POD PCB(41) REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- Disconnect the lead wire(BN42-5P) on the INPUT PCB(39-1) from connector(CN42) on the I-POD PCB(41).
- 3. Disconnect the lead wire(BN45-4P) on the INPUT PCB(39-1) from connector(CN45) on the I-POD PCB(41).
- 4. Disconnect the lead wire(BN44-4P) on the Download PCB(37-9) from connector(CN42) on the I-POD PCB(41).
- 5. Remove 2 screws(S13) and then remove the I-POD PCB(41).

#### <10>INPUT PCB(39-1) REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- 2. Remove the Connect PCB(37-7).
- 3. Disconnect the lead wire(BN18-5P) on the Digital input PCB(37-8) from connector(CN18) on the Input PCB(39-1).
- 4. Disconnect the connect (BN72-Card canle)) on the Fip PCB(37-1) from connector(CN72) on the Input PCB(39-1)
- 5. Remove 11 screws(S8,S11) and then remove the Input PCB(39-1).

#### <11>Download PCB(37-9) REMOVAL


- 1.Remove the Top-cabinet, referring to the previous step<1>.
- 2.Disconnect the connector(CN15) from lead wire(BN15-8P) on the Fip PCB(37-2)
- 3. Remove 2 screws(S4) and then remove the Download PCB(37-9).

#### <12>POWER TRANS(36) REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- 2. Disconnect the connector (BN20,BN96) on the Trans PCB(40-4) from lead wire(CN20-3P,CN96-6P) on the Main PCB(38-1).
- 3. Remove 4 Trans screws(S9) and then remove the Power Trans(36).

#### <13>MAIN PCB ASS'Y(38-1) REMOVAL

- 1. Remove the Top-cabinet, referring to the previous step<1>.
- 2. Remove the Tuner module, referring to the previous step<7>.
- 3. Remove the Video PCB, referring to the previous step<8>.
- 4. Remove the Input PCB, referring to the previous step<9>.
- 5. Disconnect the connector(CN80) from lead wire(BN80-11P) on the Fip PCB(37-1).
- 6. Disconnect the connector(CN91) from lead wire(BN91-3P) on the Moms PCB(37-5).
- 7. Disconnect the connector (CN20,BN96) from lead wire(CN20-3P,BN96-8P) on the Trans PCB(40-4,40-5)
- 8. Remove 11screws(S1-1EA, S4-2EA, S6-2EA, S8-6EA) and then remove the Main PCB ASS'Y(38-1).

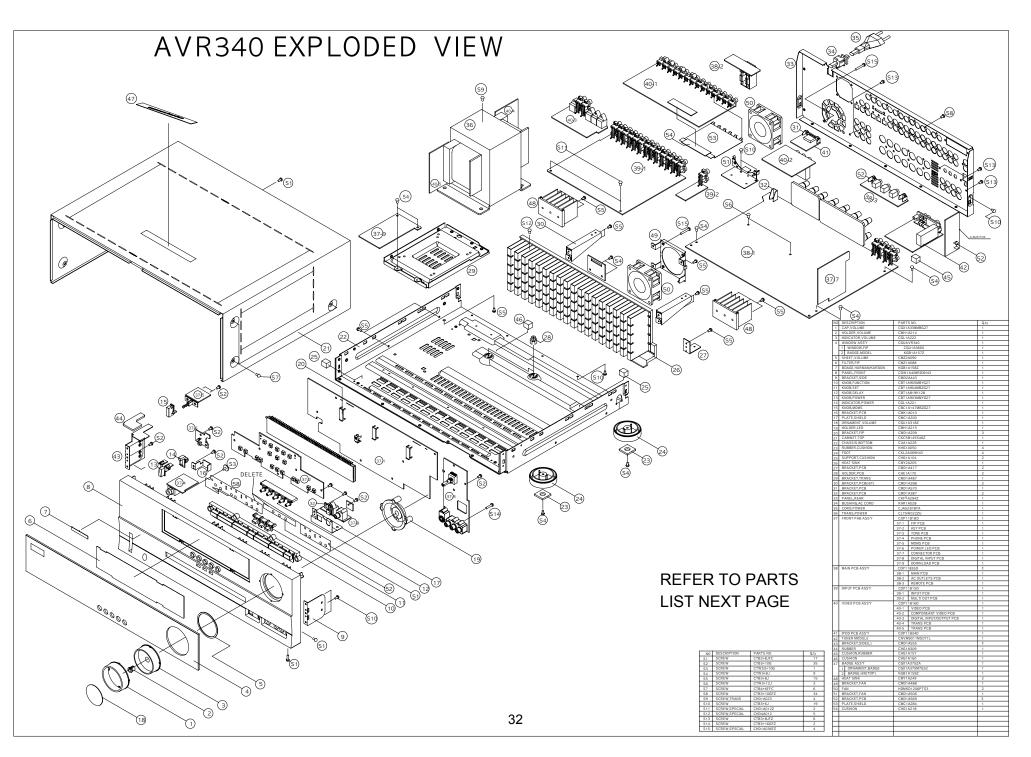

NO	DESCRIPTION	PART	S NO.	Qty	
		_			
1	CAP,VOLUME	_	A338MBG27	1	
2	HOLDER, VOLUME	CMH1	A214	1	
3	INDICATOR, VOLUME	CGL1	A222	1	
4	WINDOW ASS'Y	CGUA	VR340	1	
"		_			
	1 WINDOW,FIP		GU1A366X	1	
	2 BADGE,MODEL	K	KGB1A157Z		
5	SHEET, VOLUME	CM72	CMZ2A090		
-	· · · · · · · · · · · · · · · · · · ·	_		1	
6	FILTER,FIP	_	A088	_	
7	BADGE ,HARMAN/KARDON	KGB1	A158Z	1	
8	PANEL,FRONT	CGW1	1A408RDXH43	1	
9	BRACKET,SIDE	CMD2	2A443	1	
	,			_	
10	KNOB, FUNCTION	CBII	A905MBYG27	1	
11	KNOB,SET	CBT1	A904MBZG27	1	
12	KNOB,DELAY	CBT1	A819K128	1	
13	KNOB,POWER	_	A903MMYG27	1	
-	<u> </u>			-	
14	INDICATOR,POWER	CGL1	A221	1	
15	KNOB, MOMS	CBC1	A147MBZG27	1	
16	BRACKET,PCB	CMK1	A010	1	
-			A200		
17	PLATE,SHIELD			1	
18	ORNAMENT, VOLUME	CGU1	A318Z	1	
19	HOLDER,LED	CMH1	A215	1	
20	BRACKET,FIP		A209	3	
		_			
21	CABINET,TOP	_	B145S46Z	1	
22	CHASSIS,BOTTOM	CUA1	A229	1	
23	RUBBER.CUSHION	_	A050	4	
-	, , , , , , ,				
24	FOOT		A069H43	4	
25	SUPPORT, CUSHION	CHG1	A104	2	
26	HEAT SINK	CMY2	A205	1	
27	BRACKET,PCB	-	A417	2	
		_			
28	HOLDER,PCB	CHE1	A170	2	
29	BRACKET,TRANS	CMD1	A487	1	
30	BRACKET,PCB(H/T)	CMD1	A398	2	
-	. , , ,	_			
31	BRACKET,PCB	CMD1	A570	1	
32	BRACKET,PCB	CMD1	A387	2	
33	PANEL,REAR	CKF5	A294Z	1	
34	BUSHING,AC CORD	KHR1		1	
-	<u>'</u>				
35	CORD,POWER	CJA5	23FBYA	1	
36	TRANS,POWER	CLT5	W022ZU	1	
37	FRONT PCB ASS'Y			1	
'	11101111 6571001	27.4	FID DCD	_	
		37-1	FIP PCB	1	
		37-2	KEY PCB	1	
		37-3	TONE PCB	1	
		37-4	PHONE PCB	1	
		37-5	MOMS PCB	1	
		37-6	POWER LED PCB	1	
		37-7	CONNECTOR PCB	1	
		37-8	DIGITAL INPUT PCB	1	
		_			
		37-9	DOWNLOAD PCB	1	
38	MAIN PCB ASS'Y			1	
		38-1	MAIN PCB	1	
				1	
		38-2	AC OUTLETS PCB	-	
		38-3	REMOTE PCB	1	
39	INPUT PCB ASS'Y			1	
		39-1	INPUT PCB	1	
		_			
$\vdash$		39-2	MULTI OUT PCB	1	
40	VIDEO PCB ASS'Y			1	
		40-1	VIDEO PCB	1	
		40-2	COMPONEANT VIDEO PCB	1	
				_	
		40-3	DIGITAL INPUT/OUTPUT PCB	1	
		40-4	TRANS PCB	1	
		40-5	TRANS PCB	1	
41	IPOD PCB ASS'Y	1.55		1	
$\vdash$			100441400741	_	
42	TUNER MODULE	CNAN	M9011MS071L	1	
43	BRACKET,SIDE(L)	CMD1	A555	1	
44	RUBBER	CHG1	A309	1	
-		_		1	
45	CUSHION,RUBBER	_	A157	-	
46	CUSHION	CHG1	A160	1	
47	BADGE ASS'Y	CGX1	A375ZA	1	
	1 ORNAMENT,BADGE	_	A375M7G32	1	
				_	
$\square$	2 BADGE,H/K(TOP)	KGB1	A159Z	1	
48	HEAT SINK	CMY1	A249	2	
49	BRACKET,FAN	CMD1	A488	1	
-		_		2	
50	FAN	_	(D1206PTS3	_	
51	BRACKET,FAN	CMD1	A506	1	
52	BRACKET,PCB	CMD1	A569	3	
53	PLATE, SHIELD	_	A284	1	
-	· · · · · · · · · · · · · · · · · · ·				
54	CUSHION	CHG1	A218	1	


#### **AMPLIFIER SECTION BIAS ADJUSTMENT**

#### Measurement condition

. No input signal or volume position is minimum.


#### Standard value.

- . Ideal current =  $48mA (\pm 5\%)$
- . Ideal DC Voltage = 25.92mV (  $\pm 5$ %)

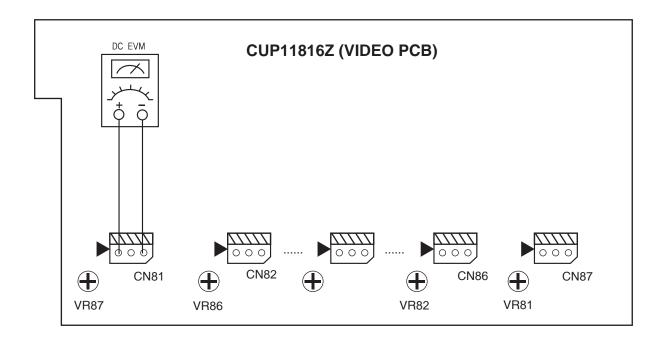

DC VOLTMETER.....Connect to CN81,CN82,CN83,CN84,CN85,CN86,CN87

NO.	Channel	Adjust for	Adjustment
1	Front Left	25.92mV (±5%)	VR83
2	Front Right	25.92mV (±5%)	VR84
3	Center	25.92mV (±5%)	VR85
4	Surround Left	25.92mV (±5%)	VR86
5	Surround Right	25.92mV (±5%)	VR87
6	Surround Back Left	25.92mV (±5%)	VR82
7	Surround Back Right	25.92mV (±5%)	VR81(ONLY AVR240/340)

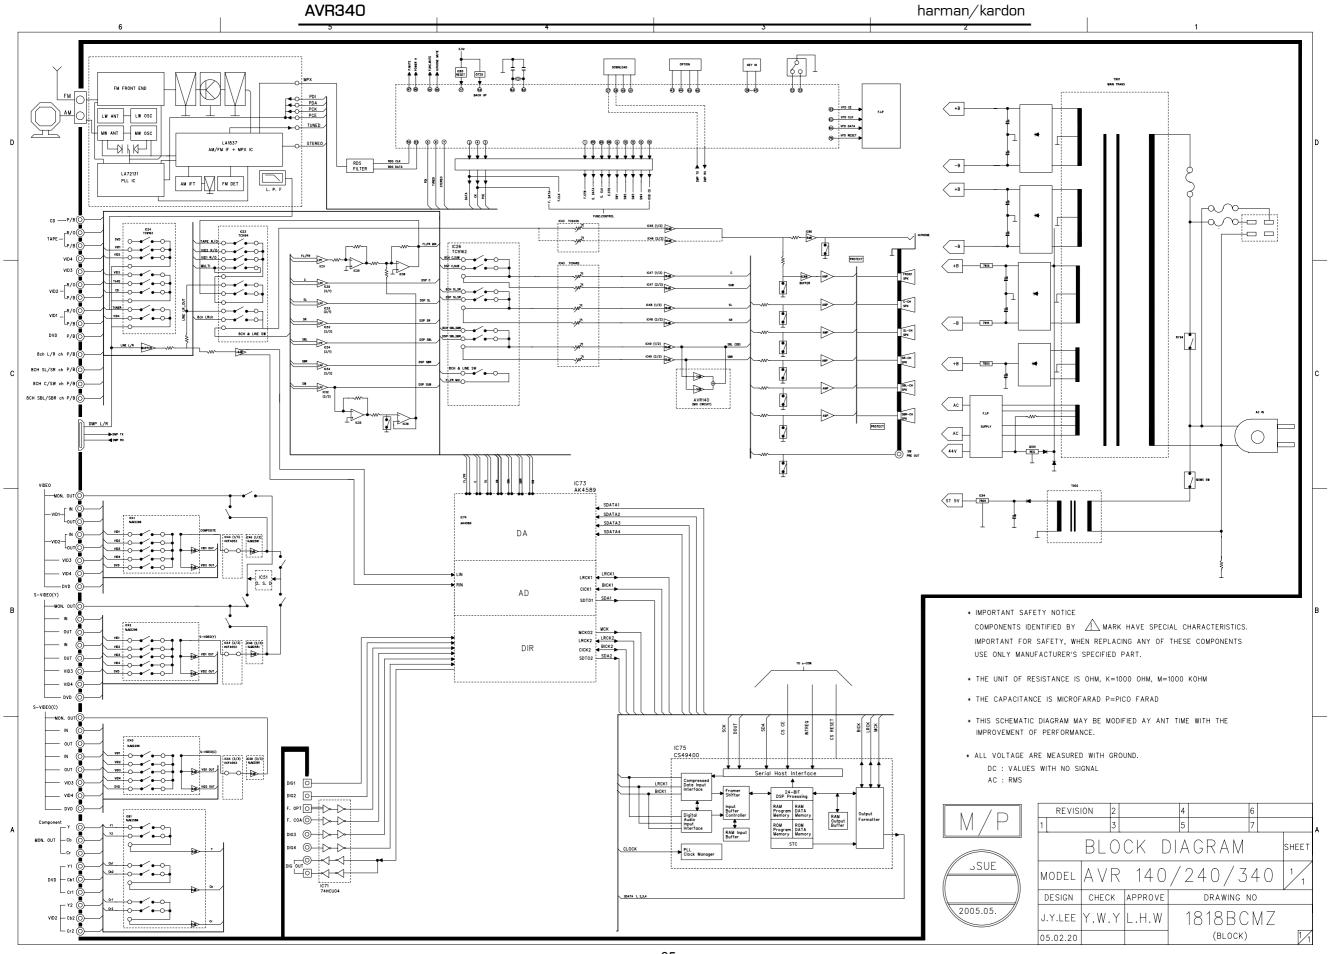

AVR340 Ele	ectrical Parts List				
Ref. Designator	Part Number	Description		Qty	
EDONT DOD A	SSY (CUP11818Y)				
FRONT FCB A	(COF118181)				
Capacitors					
C703	HCBS1H821KBT	CAP , CERAMIC	820PF 50V K	1	ΕA
C704	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C712	CCEA1HH1R0T	CAP, ELECT	1UF 50V	1	EA
C713	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C714	HCBS1H151KBT	CAP, CERAMIC	150PF 50V K	1	EA
C715	CCEA1HH4R7T	CAP, ELECT	4.7UF 50V	1	EA
C716	CCEA1CH331T	CAP , ELECT	330UF 16V	1	EΑ
C723 C725	HCBS1H104ZFT	CAP , CERAMIC CAP , CERAMIC	0.1UF 50V Z 0.047UF 50V Z	1 1	EΑ
C725 C726	HCBS1H473ZFT CCEA1CH101T	CAP, CERAMIC CAP, ELECT	100UF 16V	1	EA EA
C728	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
C728	CCKT1H473ZF	CAP, CERAMIC	0.047UF 50V ZF	1	EA
C729 C731	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EA
C735	CCEA1CH101T	CAP, ELECT	100F 16V	1	EA
C736	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C737	HCBS1H180JCT	CAP , CERAMIC	18PF 50V J	1	EA
C738	HCBS1H180JCT	CAP, CERAMIC	18PF 50V J	1	EΑ
C739	CCEA1AH221T	CAP, ELECT	220UF/10V	1	EΑ
C740	CCEA1VH100T	CAP , ELECT	10UF 35V	1	EΑ
C793	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
C794	HCBS1H102KBT	CAP, CERAMIC	1000PF 50V B	1	EA
C795	HCBS1H221KBT	CAP, CERAMIC	220PF 50V K	1	EA
C796	HCBS1H101KBT	CAP , CERAMIC	100PF 50V K	1	EA
C798	HCBS1H223ZFT	CAP , CERAMIC	0.022UF 50V Z	1	EA
C799	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C859	HCBS1H223ZFT	CAP , CERAMIC	0.022UF 50V Z	1	EA
C860	HCBS1H223ZFT	CAP , CERAMIC	0.022UF 50V Z	1	EΑ
C861	HCBS1H223ZFT	CAP , CERAMIC	0.022UF 50V Z	1	EΑ
C875	HCBS1H101KBT	CAP , CERAMIC	100PF 50V K 100PF 50V K	1 1	EΑ
C876 C877	HCBS1H101KBT HCBS1H473ZFT	CAP , CERAMIC CAP , CERAMIC	0.047UF 50V Z	1	EA EA
C878	HCBS1H473ZFT	CAP, CERAMIC	0.047UF 50V Z	1	EA
C882	HCBS1H104ZFT	CAP , CERAMIC	0.1UF 50V Z	1	EA
C886	CCEA0JH102T	CAP, ELECT	1000UF 6.3V	1	EA
C891	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C892	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C893	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EΑ
C896	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EΑ
C897	CCEA1AH471T	CAP, ELECT	470UF 10V	1	EA
C901	HCBS1H390JT	CAP, CERAMIC	39PF 50V J	1	EA
C903	CCEA1HKS2R2T	CAP , ELECT	2.2UF 50V KS	1	EA
C905	CCEA1HKS2R2T	CAP , ELECT	2.2UF 50V KS	1	EA
C894	CCEA1CH101T	CAP , ELECT	100UF 16V	1	EA
Semiconductors					
D724	LIV/D4 CC4 22MT	DIODE	100122	4	E ^
D724 D728	HVD1SS133MT	DIODE	1SS133	1 1	EA EA
D728 D729	HVD1SS133MT HVD1SS133MT	DIODE	1SS133 1SS133	1	EA
D730	HVD1SS133MT	DIODE	1SS133	1	EA
D730	KVD1N4003ST	DIODE	1N4003	1	EA
D779	HVD1SS133MT	DIODE	1SS133	1	EA
D780	HVD1SS133MT	DIODE	1SS133	1	EA
D781	HVD1SS133MT	DIODE	1SS133	1	EA
D782	KVD1N4003ST	DIODE	1N4003	1	EA
D783	HVD1SS133MT	DIODE	1SS133	1	EA
IC87	HVIRE5VL28CATZ	IC , RESET (RE5VL28CATZ)	RICOH	1	EΑ

Ref. Designator	Part Number	Description		Qty	
FRONT PCB AS	SSY (CUP11818Y)				
1110111110271					
Q701	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q702	HVTKRA107MT	TRANSISTOR	KRA107M	1	EA
Q705	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q722	HVTKRA107MT	TRANSISTOR	KRA107M	1	EA
Q724 Q725	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA EA
Q726	HVTKRC107MT HVTKRC107MT	TRANSISTOR TRANSISTOR	KRC107M KRC107M	1	EA
Q727	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q728	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q729	HVTKRC107MT	TRANSISTOR	KRC107M	1	EΑ
Q731	HVTKSA1175YT	TRANSISTOR	SA1175YT	2	EA
Q733	HVTKSC2785YT	TRANSISTOR	SC2785YT	3	EA
Q738	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q739	HVTKTA1271YT	TRANSISTOR	KTA1271Y	1	EA
Q740	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q741	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q743	HVTKRA107MT	TRANSISTOR	KRA107M	1	EA
Q799	HVTKSC2785YT	TRANSISTOR	SC2785YT	1	EΑ
IC72 IC73		IC , FLASH U-COM (MB90F482APFG) SENSOR , REMOTE (NJL34H380A)	FUJITSU	1	EA EA
IC73 IC75	HRVNJL34H380A HVI74ACT04MTR	I.C , HEX (74ACT04)	SENSOR FAIRCHILD	1	EA
IC83	HVI74ACT04MTR	I.C , HEX (74ACT04)	FAIRCHILD	1	EA
IC84	HVI74ACT04MTR	I.C , HEX (74ACT04)	FAIRCHILD	1	EA
IC85	HVIRH5VT18C	I.C , RESET (RH5VT18C)	RICOH	1	EA
.000		(1.1.101.100)			1 - 7
Resistors					
R700	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EA
R701	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R704	CRD20TJ100T	RES , CARBON	10 OHM 1/5W J	1	EA
R709 R710	CRD20TJ470T CRD20TJ470T	RES , CARBON	47 OHM 1/5W J 47 OHM 1/5W J	1	EA EA
R711	CRD20TJ470T	RES , CARBON RES , CARBON	47 OHM 1/5W J	1 1	EA
R712	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R713	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R714	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R716	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EΑ
R718	CRD20TJ222T	RES, CARBON	2.2K OHM 1/5W J	1	EA
R729	CRD20TJ103T	RES, CARBON	10K OHM 1/5W J	1	EA
R730	CRD20TJ112T	RES, CARBON	1.1K OHM 1/5W J	1	EA
R731	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EA
R732	CRD20TJ222T	RES, CARBON	2.2K OHM 1/5W J	1	EA
R733	CRD20TJ272T	RES , CARBON	2.7K OHM 1/5W J	1	EA
R734	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EΑ
R735 R736	CRD20TJ103T CRD20TJ272T	RES , CARBON	10K OHM 1/5W J 2.7K OHM 1/5W J	1	EA EA
R737	CRD201J2721 CRD20TJ100T	RES , CARBON RES , CARBON	10 OHM 1/5W J	1	EA
R738	CRD20TJ100T	RES , CARBON	10K OHM 1/5W J	1	EA
R739	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R740	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R742	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R743	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R747	CRD20TJ103T	RES, CARBON	10K OHM 1/5W J	1	EA
R748	CRD20TJ223T	RES, CARBON	22K OHM 1/5W J	1	EA
R749	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EA
R750	CRD20TJ223T	RES, CARBON	22K OHM 1/5W J	1	EA
R771	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R772	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R773	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R780	CRD20TJ100T	RES, CARBON	10 OHM 1/5W J	1	EΑ
R781	CRD20TJ123T	RES, CARBON	12K OHM 1/5W J	1	EA

Ref. Designator	Part Number	Description		Qty	
EDON'T DOD A	200V (OUB44040V)				
FRONT PCB A	ASSY (CUP11818Y)				
R782	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R786	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EA
R787	CRD20TJ101T	RES , CARBON	100 OHM 1/5W J	1	EA
R789	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EΑ
R790	CRD20TJ105T	RES , CARBON	1M OHM 1/5W J	1	EΑ
R791	CRD20TJ822T	RES , CARBON	8.2K OHM 1/5W J	1	EA
R792	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R794	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R795	CRD20TJ101T	RES , CARBON	1K OHM 1/5W J	1	EA
R796	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R797	CRD20TJ1R0T	RES , CARBON	1 OHM 1/5W J	1 1	EA
R798 R820	CRD20TJ1R0T CRD20TJ103T	RES , CARBON RES , CARBON	1 OHM 1/5W J 10K OHM 1/5W J	1	EA
R821	CRD20TJ103T	RES, CARBON	10K OHM 1/5W J	1	EA
R824	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	1	EA
R825	CRD20TJ681T	RES , CARBON	680 OHM 1/5W J	1	EA
R881	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R882	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R883	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EΑ
R884	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R885	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R886	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R887	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R888	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R889	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R890	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R891	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EΑ
R892 R893	CRD20TJ222T CRD20TJ333T	RES , CARBON RES , CARBON	2.2K OHM 1/5W J 33K OHM 1/5W J	1 1	EA EA
R913	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R915	CRD20TJ473T	RES , CARBON	47K OHM 1/5W J	1	EA
		,			
Miscellaneous					
L702	HLQ02C100KT	COIL, AXAIL	10UH	1	EA
BAT1	HABGP40BVH3A3H	BATTERY, RECHARGEABLE	BATTERY	1	EA
BK71	CMD1A209	BRACKET, FLT	BRACKET	1	EA
BK72	CMD1A209	BRACKET, FLT	BRACKET	1	EA
BK73	CMD1A387	BRACKET, PCB	BRACKET	1	EA
BK74	CMD1A209	BRACKET, FLT	BRACKET	1	EΑ
BN12	CWB2B903450EN	WIRE ASS'Y	WIRE	1	EA
BN15	CWB2B910150EN	WIRE ASS'Y	WIRE	1	EA
BN62	CWB2B904370EN	WIRE ASS'Y	WIRE	1	EA
BN72	HJP32GA179ZJ	CONN,FFC 1M/M 32P STR,SMD_JST	CONNECTOR	1	EA
BN80	CWB2B911420EW	WIRE ASS'Y	WIRE	1	EA
BN81	CWB2B908250BM	WIRE , ASS'Y	WIRE	1	EA
BN84	CWB2B905080EN	WIRE ASS'Y	WIRE	1	EΑ
BN85 BN88	CWB2B903090EN CWB2B904070EN	WIRE ASS'Y	WIRE WIRE	1	EA EA
CN89	CJP05GA19ZY	WIRE ASS'Y WAFER, STRAIGHT, 5PIN	WIRE	1 1	EA
FIP1	HFLHCA18ML03	F.I.P	FIP	1	EA
JW85	CWE8202070AA	WIRE ASS'Y	WIRE	1	EA
X701	HOX05000E160C	CRYSTAL	5Mhz	1	EA
PCB, MOMS	(CUP11818-5)				
SW1	CSH1A008ZV	SW , PUSH (MOMS)	MOMS SWITCH	1	EA
CN86	KJP02GA89ZM	WAFER	WIRE	1	EA

Ref. Designato	r Part Number	Description		Qty	
DCD DOWE	D KEY (CUD44949 C)				
PCB, POWE	R KEY (CUP11818-6)				
CN88	CJP04GA19ZY	WAFER, STRAIGHT, 4PIN	WIRE	1	EA
D723	CVD50BOBBWGA	L.E.D , 2 COLOR (ORG , BLUE)	L.E.D	1	EA
S701	HST1A020ZT	SW , TACT	1A020	1	EΑ
PCB , DIGITA	AL INPUT (FRONT) (CU	P11818-8)			
DNIAO	014/741/1040504140	MIDE ACCIV (CHIELD)	M/IDE		- ^
BN18 IC76	CWZAVR125BN18 HVI74HCU04AFNG	WIRE ASS'Y (SHIELD) I.C , INVERTER (74HCU04)	WIRE TOSHIBA	1	EA EA
JK81	CJJ4M041Y	JACK, BOARD (COAX)	BOARD	1 1	EA
JK82	HJSTORX177L	MODULE, OPTICAL(RX)	OPTICAL JACK	1	EA
JW83	CWE8202150RV	WIRE ASS'Y	WIRE	1	EA
C807	CCFT1H104ZF	CAP , SEMICONDUCTOR	0.1UF 50V ZF	1	EΑ
C808	CCKT1H181KB	CAP , CERAMIC	180PF 50V KB	1	EA
C809	CCEA1AH471T	CAP , ELECT	470UF 10V	1	EA
C812	HCBS1H104ZFT	CAP , CERAMIC	0.1UF 50V Z	1	EA
C817	HCBS1H100JCT	CAP , CERAMIC	10PF 50V J	1	EA
R805	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R806	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R869 R875	CRD20TJ750T CRD20TJ103T	RES , CARBON	75 OHM 1/5W J 10K OHM 1/5W J	1	EA EA
K8/5	CRD20131031	RES , CARBON	TUK OHIVI 1/5VV J	I	EA
DCB HEADE	PHONE (CUP11818-4)				
FCB , HEADI	THORE (COFTIBIO-4)				
BN92	CWB2B905080EN	WIRE ASS'Y	WIRE		
JK83	CJJ2E026Z	JACK, HEADPHONE(SILVER PLATE)	HEADPHONE JACK	1	EA
C783	HCBS1H104ZFT	CAP , CERAMIC	0.1UF 50V Z	1	EA
D786	HVD1SS133MT	DIODE	1SS133	1	EΑ
D787	HVD1SS133MT	DIODE	1SS133	1	EA
PCB, FRONT	FPANEL KEY (CUP118	318-2)			
Consoitors					
Capacitors					
C720	HCBS1H181KBT	CAP, CERAMIC	180PF 50V K	1	EA
C721	HCBS1H181KBT	CAP , CERAMIC	180PF 50V K	1	EA
C730	CCFT1H104ZF	CAP , SEMICONDUCTOR	0.1UF 50V ZF	1	EΑ
C719	HCBS1H181KBT	CAP , CERAMIC	180PF 50V K	1	EΑ
Resistors					
D744	000000000000000000000000000000000000000	DEC. CARROLL	4014 5 4/514/		
R744	CRD20TF1002T	RES , CARBON	10K F 1/5W	1	EA
R745 R746	CRD20TF1002T CRD20TF1002T	RES , CARBON RES , CARBON	10K F 1/5W 10K F 1/5W	1 1	EA
R753	CRD201F10021 CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1 1	EA
R754	CRD20TJ152T	RES, CARBON	1.5K OHM 1/5W J	1 1	EA
R755	CRD20TJ182T	RES , CARBON	1.8K OHM 1/5W J	1	EA
R756	CRD20TJ272T	RES , CARBON	2.7K OHM 1/5W J	1	EA
R757	CRD20TJ332T	RES , CARBON	3.3K OHM 1/5W J	1	EA
R758	CRD20TJ562T	RES , CARBON	5.6K OHM 1/5W J	1	EA
R759	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EA
R760	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EA
R761	CRD20TJ182T	RES , CARBON	1.8K OHM 1/5W J	1	EA
R762	CRD20TJ272T	RES , CARBON	2.7K OHM 1/5W J	1	EA
R763	CRD20TJ332T	RES , CARBON	3.3K OHM 1/5W J	1	EA
R764	CRD20TJ562T	RES , CARBON	5.6K OHM 1/5W J	1	EA
R765	CRD20TJ752T	RES , CARBON	7.5K OHM 1/5W J	1	EΑ
R766 R767	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J 1.5K OHM 1/5W J	1	EA EA
R768	CRD20TJ152T CRD20TJ182T	RES , CARBON RES , CARBON	1.8K OHM 1/5W J	1 1	EA
R769	CRD20131621 CRD20TJ272T	RES, CARBON	2.7K OHM 1/5W J	1	EA
	011020102121	inco , or incom	Z.773 OF HVI 1/OVV U		-/\
	1	I .		_1	

Ref. Designator	Part Number	Description		Qty	
PCB , FRONT	PANEL KEY (CUP118				
Miscellaneous					
DNIGO	OWEDODOOSOOSTA	MIDE 4.00V	WIDE		
BN89 S702	CWB2B905080EN HST1A020ZT	WIRE ASS'Y SW , TACT	WIRE 1A020	1	EA EA
S702 S703	HST1A020ZT	SW, TACT	1A020	1	EA
S703	HST1A020ZT	SW , TACT	1A020	1	EA
S705	HST1A020ZT	SW , TACT	1A020	1	EA
S706	HST1A020ZT	SW , TACT	1A020	1	EA
S707	HST1A020ZT	SW , TACT	1A020	1	EA
S708	HST1A020ZT	SW , TACT	1A020	1	EA
S709	HST1A020ZT	SW , TACT	1A020	1	EA
S710	HST1A020ZT	SW , TACT	1A020	1	EA
S711	HST1A020ZT	SW, TACT	1A020	1	EA
S712	HST1A020ZT	SW , TACT	1A020	1	EA
S713	HST1A020ZT	SW , TACT	1A020	1	EA
S714	HST1A020ZT	SW , TACT	1A020	1	EA
S715	HST1A020ZT	SW , TACT	1A020	1	EA
S716 S717	HST1A020ZT HST1A020ZT	SW , TACT SW , TACT	1A020 1A020	1 1	EA EA
S717 S718	HST1A020ZT	SW, TACT	1A020	1	EA
S719	HST1A020ZT	SW, TACT	1A020	1	EA
S720	HST1A020ZT	SW, TACT	1A020	1	EA
0120	HOTTAUZUZT	SW, TACT	17020	'	LA
PCB, VOLUM	ME ENCODER (CUP118	318-3)			
Camaaitam					
Capacitors					-
C805	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C806	HCBS1H223ZFT	CAP , CERAMIC	0.022UF 50V Z	1	EA
C841	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C842	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C843	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EΑ
C855	HCBS1H101KBT	CAP , CERAMIC	100PF 50V K	1	EA
C856	HCBS1H101KBT	CAP , CERAMIC	100PF 50V K	1	EA
C857	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
C862	HCBS1H101KBT	CAP , CERAMIC	100PF 50V K	1	EA
C863	HCBS1H101KBT	CAP , CERAMIC	100PF 50V K	1	EA
C874	HCBS1H101KBT	CAP , CERAMIC	100PF 50V K	1	EA
Semiconductors	S				
D701	CVD52CSBBCEAB2	BLUE L.E.D	L.E.D	1	EA
D703	CVD52CSBBCEAB2	BLUE L.E.D	L.E.D	1	EA
D705	CVD52CSBBCEAB2	BLUE L.E.D	L.E.D	1	EΑ
D774	HVD1SS133MT	DIODE	1SS133	1	EA
Resistors				<u> </u>	
VR74	CSR2A037Z	ENCODER	ENCODER	1	EA
R705	CRD20TJ820T	RES , CARBON	82 OHM 1/5W J	1	EA
R706 R708	CRD20TJ820T	RES , CARBON	82 OHM 1/5W J	1	EΑ
R864	CRD20TJ820T CRD20TJ272T	RES , CARBON RES , CARBON	82 OHM 1/5W J 2.7K OHM 1/5W J	1	EA EA
R865	CRD20TJ272T	RES , CARBON	100 OHM 1/5W J	1	EA
R866	CRD20TJ10TT	RES , CARBON	2.7K OHM 1/5W J	1	EA
R871	CRD20TJ272T	RES , CARBON	100K OHM 1/5W J	1 1	EA
R872	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R873	CRD20TJ471T	RES , CARBON	470 OHM 1/5W J	1	EA
R874	CRD20TJ471T	RES , CARBON	470 OHM 1/5W J	1	EA
R876	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R877	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA

Ref. Designator	Part Number	Description		Qty	
PCB . VOLUM	  ME ENCODER (CUP118				
1 02 , 102011	LICODER (GGI III				
R878	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
Miscellaneous				+	_
Wildemaniedae					
BN10	CWZAVR230BN10	WIRE ASS'Y (SHIELD)	WIRE	1	EA
BN41	CWZAVR130BN41	WIRE ASS'Y (SHIELD)	WIRE	1	EA
CN84	KJP05GB46ZM	WAFER	WIRE	1	EA EA
JK85 JK86	CJJ9M003Z CJJ4S023Y	JACK , S-VIDEO JACK , BOARD	S-VIDEO JACK BOARD	1	EA
JW84	CWE8202110RV	WIRE, ASS'Y	WIRE	1	EA
					1
PCB, INTER	FACE (CUP11818-7)				
DNI0.4	14 10 40 0 0 0 0 7 14	LOONING TOP			
BN94 BN95	KJP13GB99ZM KJP08GB99ZM	CONNECTOR , HOUSING	CONNECTOR CONNECTOR	1	EA EA
CN11	KJP08GA98ZM	WAFER	WIRE	1	EA
CN12	KJP15GA98ZM	WAFER	WIRE	1	EA
CN13	CJP05GA19ZY	WAFER	WIRE	1	EA
CN16	CJP06GA19ZY	WAFER, STRAIGHT, 6PIN	WIRE	1	EA
CN79	CJP05GA19ZY	WAFER, STRAIGHT, 6PIN	WIRE	1	EA
IC88	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)	JRC	1	EA
IC89	HVIHCF4053M013T	I.C , SWITCH (HCF4053)	JRC	1	EΑ
C810 C811	CCEA1CH101T CCEA1CH101T	CAP , ELECT CAP , ELECT	100UF 16V 100UF 16V	1	EA EA
C813	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C814	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C815	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C816	HCBS1H223ZFT	CAP , CERAMIC	0.022UF 50V Z	1	EA
D788	HVDMTZJ5.6BT	DIODE ZENER	5.6V	1	EA
D789	HVDMTZJ5.6BT	DIODE ZENER	5.6V	1	EA
R808 R809	CRD20TJ102T CRD20TJ102T	RES , CARBON RES , CARBON	1K OHM 1/5W J 1K OHM 1/5W J	1	EA EA
R810	CRD20TJ102T	RES , CARBON	100 OHM 1/5W J	1	EA
R811	CRD20TJ101T	RES , CARBON	100 OHM 1/5W J	1	EA
R813	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R814	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
INPUT PCB (	 			+	
01100(					_
Capacitors					
C105	HCUS1H223KC	CAP , CHIP	2200PF	1	EA
C105	HCUS1H223KC	CAP, CHIP	2200PF 2200PF	1	EA
C201	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C202	HCUS1H221JA	CAP , CHIP	220PF	1	EA
C203	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C204	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C205	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C206 C207	HCUS1H221JA	CAP , CHIP CAP , CHIP	220PF 220PF	1	EA EA
C207 C208	HCUS1H221JA HCUS1H221JA	CAP, CHIP	220PF 220PF	1	EA
C208	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C210	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C211	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C212	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C213	HCUS1H221JA	CAP , CHIP	220PF	1	EA
C214 C215	HCUS1H221JA	CAP, CHIP	220PF 220PF	1	EΑ
C215 C216	HCUS1H221JA HCUS1H221JA	CAP , CHIP CAP , CHIP	220PF 220PF	1	EA EA
C210	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C218	HCUS1H221JA	CAP, CHIP	220PF	1	EA
<u></u>	1100011122107	5/11 , OI III	LEVI 1		ᆣᄾ

Ref. Designator	Part Number	Description		Qty	
INPUT PCB (C					
C219	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C220	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C221	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C222	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C223	HCUS1H221JA	CAP , CHIP	220PF	1	EA
C224	HCUS1H221JA	CAP , CHIP	220PF	1	EA
C225	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C226	HCUS1H221JA	CAP, CHIP	220PF	1	EA
C233	HCUS1H181JA	CAP, CHIP	180PF	1	EA
C234	HCUS1H471JA	CAP, CHIP	470PF	1	EA
C235	HCUS1H223KC	CAP, CHIP	2200PF	1	EA
C236	HCUS1H223KC	CAP, CHIP	2200PF	1	EA
C241	HCUS1H181JA	CAP, CHIP	180PF	1	EA
C242	HCUS1H471JA	CAP, CHIP	470PF	1	EA
C253	HCUS1H181JA	CAP, CHIP	180PF	1	EA
C254	HCUS1H471JA	CAP, CHIP	470PF	1	EΑ
C255 C256	HCUS1H223KC HCUS1H223KC	CAP , CHIP	2200PF	1	EΑ
C256 C270	HCUS1H223KC HCUS1H181JA	CAP, CHIP	2200PF 180PF	1	EA
C270	HCUS1H471JA	CAP, CHIP	470PF	1	EA
C271		CAP, CHIP		1	EA
C291	HCUS1H104ZF HCUS1H104ZF	CAP, CHIP	0.1UF 0.1UF	1	EA
C292 C293	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C293	HCUS1H104ZF	CAP, CHIP	0.1UF	1 1	EA
C295	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C296	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C290	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C298	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C309	HCUS1H332KC	CAP, CHIP	3300PF	1	EA
C310	HCUS1H332KC	CAP, CHIP	3300PF	1	EA
C311	HCUS1H332KC	CAP, CHIP	3300PF	1	EA
C312	HCUS1H332KC	CAP, CHIP	3300PF	1	EA
C313	HCUS1H332KC	CAP, CHIP	3300PF	1	EA
C314	HCUS1H332KC	CAP, CHIP	3300PF	1	EA
C315	HCUS1H332KC	CAP, CHIP	3300PF	1	EA
C316	HCUS1H332KC	CAP, CHIP	3300PF	1	EA
C317	HCUS1H223KC	CAP, CHIP	2200PF	1	EΑ
C318	HCUS1H223KC	CAP, CHIP	2200PF	1	EΑ
C319	HCUS1H223KC	CAP, CHIP	2200PF	1	EΑ
C320	HCUS1H223KC	CAP, CHIP	2200PF	1	EA
C321	HCUS1H561JA	CAP, CHIP	560PF	1	EΑ
C322	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C323	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C324	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C325	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C326	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C327	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C328	HCUS1H561JA	CAP , CHIP	560PF	1	EA
C329	HCUS1H561JA	CAP , CHIP	560PF	1	EA
C330	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C331	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C332	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C333	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C334	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C335	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C336	HCUS1H561JA	CAP, CHIP	560PF	1	EA
C337	HCUS1H223KC	CAP, CHIP	2200PF	1	EΑ
C338	HCUS1H223KC	CAP, CHIP	2200PF	1	EΑ
C339	HCUS1H223KC	CAP, CHIP	2200PF	1	EΑ
C340	HCUS1H223KC	CAP, CHIP	2200PF	1	EΑ
C350	HCUS1H332KC	CAP , CHIP	3300PF	1	EA

Ref. Designa	ator Part Number	Description		Qty	
INDLIT DOE	 3 (CUP11815-1)				
INPUT PCE	5 (CUP11015-1)				
C351	HCUS1H332KC	CAP, CHIP	3300PF	1 E/	A
C352	HCUS1H332KC	CAP, CHIP	3300PF	1 E/	
C353	HCUS1H332KC	CAP , CHIP	3300PF	1 E/	Α
C354	HCUS1H332KC	CAP, CHIP	3300PF	1 E <i>l</i>	A
C355	HCUS1H332KC	CAP, CHIP	3300PF	1 E/	Α
C356	HCUS1H332KC	CAP, CHIP	3300PF	1 E/	Α
C357	HCUS1H332KC	CAP, CHIP	3300PF	1 E/	
C371	HCUS1H221JA	CAP , CHIP	220PF	1 E/	
C372	HCUS1H221JA	CAP, CHIP	220PF	1 E <i>l</i>	
C373	HCUS1H221JA	CAP, CHIP	220PF	1 E/	
C374	HCUS1H221JA	CAP, CHIP	220PF	1 E/	
C375	HCUS1H223KC	CAP, CHIP	2200PF	1 E/	
C376	HCUS1H223KC	CAP, CHIP	2200PF	1 E/	
C378	HCUS1H223KC	CAP, CHIP	2200PF	1 E/	
C379	HCUS1H223KC	CAP , CHIP	2200PF	1 E/	
C381	HCUS1H561JA	CAP, CHIP	560PF	1 E/	
C382 C383	HCUS1H223KC HCUS1H223KC	CAP, CHIP CAP, CHIP	2200PF 2200PF	1 EA	
C390	HCUS1H471JA	CAP, CHIP	470PF	1 E/	
C390 C391	HCUS1H471JA	CAP, CHIP	470PF	1 E/	
C392	HCUS1H471JA	CAP, CHIP	470PF	1 E/	
C393	HCUS1H471JA	CAP, CHIP	470PF	1 E/	
C394	HCUS1H471JA	CAP, CHIP	470PF	1 E/	
C395	HCUS1H471JA	CAP, CHIP	470PF	1 E/	
C396	HCUS1H471JA	CAP, CHIP	470PF	1 E/	
C397	HCUS1H471JA	CAP, CHIP	470PF	1 E/	
C413	HCUS1H223KC	CAP , CHIP	2200PF	1 E/	
C414	HCUS1H223KC	CAP , CHIP	2200PF	1 E/	
C415	HCUS1H223KC	CAP , CHIP	2200PF	1 EA	
C416	HCUS1H223KC	CAP, CHIP	2200PF	1 E/	
C417	HCUS1H223KC	CAP, CHIP	2200PF	1 E/	Α
C418	HCUS1H223KC	CAP, CHIP	2200PF	1 E/	Α
C419	HCUS1H223KC	CAP, CHIP	2200PF	1 E/	Α
C420	HCUS1H223KC	CAP, CHIP	2200PF	1 E/	Α
C421	HCUS1H151JA	CAP, CHIP, 150PFJA	150PF	1 E/	Α
C422	HCUS1H151JA	CAP, CHIP, 150PFJA	150PF	1 E <i>l</i>	
C425	HCUS1H151JA	CAP, CHIP, 150PFJA	150PF	1 E/	
C426	HCUS1H102KC	CAP , CHIP	1000PF	1 E <i>l</i>	Α
C427	HCUS1H151JA	CAP, CHIP, 150PFJA	150PF	1 E/	
C428	HCUS1H151JA	CAP, CHIP, 150PFJA	150PF	1 E/	
C429	HCUS1H151JA	CAP , CHIP , 150PFJA	150PF	1 E/	
C430	HCUS1H151JA	CAP , CHIP , 150PFJA	150PF	1 E/	
C471	HCUS1H181JA	CAP, CHIP	180PF	1 E/	
C472 C473	HCUS1H181JA	CAP , CHIP CAP , CHIP	180PF 180PF	1 EA	
C473 C474	HCUS1H181JA HCUS1H181JA	CAP, CHIP	180PF	1 E/	
C474 C521	HCUS1H103KC	CAP, CHIP	0.01UF	1 E/	
C523	HCUS1H103KC	CAP, CHIP	0.01UF	1 E/	
C530	HCUS1H390JA	CAP, CHIP	39PF	1 E/	
C530	HCUS1H390JA	CAP, CHIP	39PF	1 E/	
C538	HCUS1H100JA	CAP, CHIP	10PF	1 E/	
C539	HCUS1H224ZF	CAP, CHIP	0.22UF	1 E/	
C540	HCUS1H222KC	CAP , CHIP	2200PF	1 E/	
C541	HCUS1H103KC	CAP, CHIP	0.01UF	1 E/	
C543	HCUS1H104ZF	CAP, CHIP	0.1UF	1 E/	
C544	HCUS1H223KC	CAP, CHIP	2200PF	1 E/	
C546	HCUS1H104ZF	CAP , CHIP	0.1UF	1 E/	
C547	HCUS1H104ZF	CAP , CHIP	0.1UF	1 E/	
C548	HCUS1H104ZF	CAP, CHIP	0.1UF	1 E/	Α
C549	HCUS1H104ZF	CAP, CHIP	0.1UF	1 E/	Α
C550	HCUS1H104ZF	CAP, CHIP	0.1UF	1 E/	

Ref. Designato	or Part Number	Description		Qty	
INDUIT DCD /	 (CUP11815-1)				
INPUT PCB (	(CUP11015-1)				
C551	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C552	HCUS1H104ZF	CAP , CHIP	0.1UF	1	EΑ
C553	HCUS1H103KC	CAP, CHIP	0.01UF	1	EΑ
C556	HCUS1H220JA	CAP, CHIP	22PF	1	EA
C557	HCUS1H220JA	CAP, CHIP	22PF	1	EA
C558	CCUS1H9R0JA	CAP, CHIP	9PF	1	EA
C560	HCUS1H103KC	CAP, CHIP	0.01UF	1	EA
C564	HCUS1H103KC	CAP, CHIP	0.01UF	1	EA
C565	HCUS1H103KC	CAP, CHIP	0.01UF	1	EA
C566	HCUS1H103KC	CAP, CHIP	0.01UF	1	EA
C567	HCUS1H103KC	CAP, CHIP	0.01UF	1	EA
C568	HCUS1H103KC	CAP, CHIP	0.01UF	1	EΑ
C569 C570	HCUS1H103KC	CAP , CHIP CAP , CHIP	0.01UF 0.01UF	1	EA EA
C570	HCUS1H103KC HCUS1H103KC	CAP, CHIP	0.01UF	1	EA
C571	HCUS1H104ZF	CAP, CHIP	0.010F 0.1UF	1	EA
C573	HCUS1H100JA	CAP, CHIP	10PF	1	EA
C574	HCUS1H102KC	CAP, CHIP	1000PF	1	EA
C575	HCUS1H103KC	CAP, CHIP	0.01UF	1	EA
C576	HCUS1H103KC	CAP, CHIP	0.01UF	1 1	EA
C577	HCUS1H181JA	CAP, CHIP	180PF	1	EA
C579	HCUS1H390JA	CAP, CHIP	39PF	1	EΑ
C580	HCUS1H390JA	CAP, CHIP	39PF	1	EA
C581	HCUS1H104ZF	CAP , CHIP	0.1UF	1	EΑ
C582	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EΑ
C584	HCUS1H510JA	CAP , CHIP , 51PF JA	51PF	1	EΑ
C587	HCUS1H220JA	CAP, CHIP	22PF	1	EΑ
C590	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EΑ
C591	HCUS1H151JA	CAP, CHIP, 150PFJA	150PF	1	EΑ
C599	HCUS1H390JA	CAP, CHIP	39PF	1	EA
C600	HCUS1H390JA	CAP, CHIP	39PF	1	EA
C701	HCUS1H330JA	CAP, CHIP	33PF	1	EA
C702	HCUS1H330JA	CAP , CHIP	33PF	1	EA
C704	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C705	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C707	HCUS1H102KC	CAP, CHIP	1000PF	1	EA
C708	HCUS1H104ZF	CAP, CHIP	0.1UF		EA
C718	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EΑ
C719 C722	HCUS1H104ZF HCUS1H104ZF	CAP, CHIP CAP, CHIP	0.1UF 0.1UF	1 1	EA EA
C723	HCUS1H473ZF	CAP, CHIP	0.047UF	1	EA
C725	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C727	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C729	HCUS1H104ZF	CAP, CHIP	0.1UF	1 1	EA
C731	HCUS1H104ZF	CAP, CHIP	0.1UF	1 1	EA
C733	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C734	HCUS1H122KC	CAP, CHIP	1200PF	1	EΑ
C735	HCUS1H680JA	CAP, CHIP	68PF	1	EA
C738	HCUS1C105ZF	CAP , CHIP	1UF	1	EA
C739	HCUS1H103KC	CAP , CHIP	0.01UF	1	EΑ
C740	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EΑ
C742	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C743	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EΑ
C744	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C745	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C747	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C748	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EΑ
C750	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C751	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C752	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C754	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA

Ref. Designat	or Part Number	Description		Qty	
INPUT PCB	(CUP11815-1)				
C756	HCUS1H104ZF	CAP , CHIP	0.1UF	1	EA
C757	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C758	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C759	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C760	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C761	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EΑ
C762	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EΑ
C763 C765	HCUS1H104ZF HCUS1H104ZF	CAP , CHIP CAP , CHIP	0.1UF 0.1UF	1	EA EA
C765	HCUS1H104ZF	CAP, CHIP	0.1UF	1 1	EA
C768	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C769	HCUS1H104ZF	CAP, CHIP	0.1UF	1 1	EA
C709 C770	HCUS1H104ZF	CAP, CHIP	0.1UF	1 1	EA
C770	HCUS1H104ZF	CAP, CHIP	0.1UF	1 1	EA
C772	HCUS1H104ZF	CAP, CHIP	0.1UF	1 1	EA
C773	HCUS1H104ZF	CAP, CHIP	0.1UF	1 1	EA
C103	CCEA1VH100T	CAP, ELECT	10UF 35V	1 1	EA
C104	CCEA1VH100T	CAP, ELECT	10UF 35V	1 1	EA
C231	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EA
C232	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EΑ
C251	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EA
C252	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EA
C261	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EA
C262	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EA
C263	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C264	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C265	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C267	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EΑ
C268	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EΑ
C269	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EΑ
C341	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C342	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EΑ
C343	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EΑ
C344	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C345	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C346	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C347	CCEA1VH100T	CAP , ELECT	10UF 35V	1	EA
C348	CCEA1VH100T	CAP , ELECT	10UF 35V	1	EA
C403	CCEA1VH100T	CAP , ELECT	10UF 35V	1	EA
C404	CCEA1VH100T	CAP , ELECT	10UF 35V	1	EA
C405	CCEA1VH100T	CAP , ELECT	10UF 35V	1	EA
C406	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C407	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C408	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C409	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C410	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C433	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EΑ
C434	CCEA1EH470T CCEA1EH470T	CAP, ELECT	47UF 25V	1	EΑ
C435		CAP, ELECT	47UF 25V	1	EΑ
C436	CCEA1EH470T	CAP ELECT	47UF 25V	1	EΑ
C437 C438	CCEA1EH470T	CAP FLECT	47UF 25V 47UF 25V	1	EA EA
C438 C439	CCEA1EH470T CCEA1EH470T	CAP, ELECT CAP, ELECT	47UF 25V 47UF 25V	1	EA
C439 C440	CCEA1EH470T	CAP, ELECT	47UF 25V 47UF 25V	1	EA
	CCEA1VH100T		10UF 35V		EA
C453 C454	CCEATVH100T	CAP, ELECT CAP, ELECT	10UF 35V	1	EA
C454 C455	CCEATVH100T	CAP, ELECT	10UF 35V	1 1	EA
C455 C456	CCEATVH100T	CAP, ELECT	10UF 35V	1 1	EA
C456 C457	CCEATVH100T	CAP, ELECT	10UF 35V	1	EA
C457 C458	CCEATVH100T	CAP, ELECT	10UF 35V	1	EA
C459	CCEA1VH100T	CAP, ELECT	10UF 35V	1 1	EA

Ref. Designator	Part Number	Description		Qty	
INPUT PCB (C	<u> </u> UP11815-1)				
51 : 52 (5					
C460	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EΑ
C522	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C524	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C542	CCEA1HH2R2T	CAP, ELECT	2.2UF 50V	1	EΑ
C545	CCEA1HH2R2T	CAP , ELECT	2.2UF 50V	1	EA
C554	CCEA1CH101T	CAP , ELECT	100UF 16V	1	EA
C555	CCEA1VH100T	CAP , ELECT	10UF 35V	1	EΑ
C559	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C561	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C562	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C563	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C578	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C583 C585	CCEA1CH101T	CAP, ELECT	100UF 16V 1UF 50V	1 1	EA EA
C586	CCEA1HH1R0T CCEA1HH1R0T	CAP, ELECT	1UF 50V	1	EA
C588	CCEATHHTRUT	CAP, ELECT	100UF 16V	1	EA
C589	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C592	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C592	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C594	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C595	CCEA1CH101T	CAP, ELECT	100UF 16V	1	ΕA
C596	CCEA1EH220T	CAP, ELECT	22UF/25V	1	ΕA
C597	CCEA1EH220T	CAP, ELECT	22UF/25V	1	ΕA
C703	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C706	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C717	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C720	CCEA1AH471T	CAP, ELECT	470UF 10V	1	EΑ
C721	CCEA1AH471T	CAP, ELECT	470UF 10V	1	EΑ
C724	CCEA1AH471T	CAP , ELECT	470UF 10V	1	EΑ
C726	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C728	CCEA1AH471T	CAP, ELECT	470UF 10V	1	EA
C730	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C732	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C736	CCEA1HH2R2T	CAP, ELECT	2.2UF 50V	1	EA
C737	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C741 C746	CCEA1CH101T CCEA1CH101T	CAP, ELECT CAP, ELECT	100UF 16V 100UF 16V	1 1	EA EA
C746 C749	CCEATCH1011	CAP, ELECT	100UF 16V	1	EA
C753	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C755	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C764	CCEA1AH471T	CAP, ELECT	470UF 10V	1	EA
C766	CCEA0JH102T	CAP, ELECT	1000UF 6.3V	1	EA
C237	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EA
C238	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EA
C239	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C240	CCEA1VH100T	CAP, ELECT	10UF 35V	1	ΕA
C349	CCEA1HH1R0T	CAP, ELECT	1UF 50V	1	EA
Semiconductors					
1040	L IV //A L IA 400000 15 77 7	LLO OR MAR (MINIOSOS)	IDO	<u> </u>	F ^
IC13	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)	JRC	1	EΑ
IC21	HVITC9163CFG	I.C , FUNCTION SW (TC9163CFG)	TOSHIBA	1	EΑ
IC22	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)	JRC	1	EΑ
IC23	HVITC9164CFG	I.C , FUNCTION SW (TC9164CFG)	TOSHIBA	1	EΑ
IC24	HVITC9163CFG	I.C , FUNCTION SW (TC9163CFG)	TOSHIBA	1	EΑ
IC25 IC26	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)  I.C , FUNCTION SW (TC9162CFG)	JRC TOSHIBA	1	EA EA
IC26 IC31	HVITC9162CFG HVINJM2068MDTE1		JRC	1	EA
IC31	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)  I.C , OP AMP (NJM2068)	JRC	1	EA
IIVUZ	I I V II NOIVIZUUOIVID I E I				_
IC33	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)	JRC	1 1	EA

Ref. Designato	Part Number	Description		Qty	
INDUT DCD /	(CUD4404E 4)				
INPUT PCB (	(CUP11815-1)				
IC35	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)	JRC	1	EA
IC36	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)	JRC	1	EA
IC37	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)	JRC	1	EΑ
IC42	HVITC9459BFG	I.C , 2CH VOLUME (TC9459BFG)	TOSHIBA	1	EA
IC43	HVITC9482BFG	I.C , 6CH VOLUME (TC9482BFG)	TOSHIBA	1	EΑ
IC46	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)	JRC	1	EA
IC47	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)	JRC	1	EA
IC48 IC49	HVINJM2068MDTE1 HVINJM2068MDTE1	I.C , OP AMP (NJM2068) I.C , OP AMP (NJM2068)	JRC JRC	<u>1</u> 1	EA EA
IC56	HVITA1270BF	I.C, CRHROMA (TA1270BF)	TOSHIBA	1	EA
IC57	HVITC90A49F	I.C, Y/C SEPERATED (TC90A49F)	TOSHIBA	1	EA
IC58	BVIBH7862FS	IC , 6CH VIDEO DRIVER (BH7862FS)	ROHM	<del></del>	EA
IC72	HVI74HCU04AFNG	I.C , INVERTER (74HCU04)	TOSHIBA	1	EA
IC73	HVIAK4589VQ-T	I.C , CODEC + DIR (AK4589)	ASAHI KASEI	1	EA
IC74	HVI74LCX32TTR	I.C , OR-GATE (74LCX32)	FAIRCHILD	1	EΑ
IC75	HVICS49400-CQ	I.C , DECODER (CS49400)	CIRRUS LOGIC	1	EA
IC76		I.C, 4M FLASH MEMORY (M29W800DT)	ST	1	EA
IC78	HVINJM2391DL133	I.C , CHIP REGULATOR (+3.3V) (NJM2391DL133)		1	EA
IC79	HVINJM2391DL125	I.C , CHIP REGULATOR (+2.5V) (NJM2391DL125)		1	EA
Q551	HVTKRC102S	TRANSISTOR, CHIP	KRC102S	1	EA
Q552	HVTKRC102S	TRANSISTOR, CHIP	KRC102S	1	EA
Q553	HVTKTA2014GR	TRANSISTOR, SMD	KTA2014GR	1	EA
Q554	HVTKTC4075GR	TRANSISTOR, SMD	KTC4075GR	1	EΑ
Q555	HVTKTA2014GR	TRANSISTOR, SMD TRANSISTOR, SMD	KTA2014GR	<u>1</u> 1	EΑ
Q556 D201	HVTKTA2014GR HVD1SS133MT	DIODE	KTA2014GR 1SS133T	1	EA EA
D201	HVD1SS133MT	DIODE	1SS133T	1	EA
D202	HVD1SS133MT	DIODE	1SS133T	1	EA
D204	HVD1SS133MT	DIODE	1SS133T	1	EA
D205	HVD1SS133MT	DIODE	1SS133T	1	EA
D206	HVD1SS133MT	DIODE	1SS133T	1	EA
D207	HVD1SS133MT	DIODE	1SS133T	1	EΑ
D208	HVD1SS133MT	DIODE	1SS133T	1	EΑ
D209	HVD1SS133MT	DIODE	1SS133T	1	EA
D210	HVD1SS133MT	DIODE	1SS133T	1	EA
D211	HVD1SS133MT	DIODE	1SS133T	1	EA
D212	HVD1SS133MT	DIODE	1SS133T	1	EA
D213	HVD1SS133MT	DIODE	1SS133T	1	EA
D214	HVD1SS133MT	DIODE	1SS133T	1	EA
D215	HVD1SS133MT	DIODE	1SS133T	1	EΑ
D216	HVD1SS133MT	DIODE	1SS133T	1	EA EA
D701 Q201	KVD1N4003ST HVTKTC2874BT	TRANSISTOR , MUTE	1N4003 KTC2874B	<u>1</u> 1	EA
Q201 Q202	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EA
Q202 Q203	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EA
Q204	HVTKRA107MT	TRANSISTOR	KRA107M	1	EA
D443	HVDMTZJ6.8BT	DIODE , ZENER	6.8V 1/2W	1	EA
D444	HVDMTZJ6.8BT	DIODE , ZENER	6.8V 1/2W	1	EA
IC55	HVIMC7809C	I.C , REGULATOR (MC7809)	FAIRCHILD	1	EA
IC77	HVI57V161610ET7	SDRAM 16M 7NS (57V161610ET7)	HYNIX	1	EA
Resistors					
	00.1/0/0.1/0/0				<u> </u>
RN71	CRJ104DJ101T	RES, ARRAY, 100R (1608)	100 OHM/1608*4	1	EA
RN72	CRJ104DJ101T	RES, ARRAY, 100R (1608)	100 OHM/1608*4	1	EA
RN73	CRJ104DJ101T	RES, ARRAY, 100R (1608)	100 OHM/1608*4	1	EΑ
RN74 RN75	CRJ104DJ101T CRJ104DJ101T	RES, ARRAY, 100R (1608)	100 OHM/1608*4 100 OHM/1608*4	1	EA
RN75 RN76		RES, ARRAY, 100R (1608)		1	EA
RN77	CRJ104DJ101T CRJ104DJ101T	RES, ARRAY, 100R (1608) RES, ARRAY, 100R (1608)	100 OHM/1608*4 100 OHM/1608*4	<u>1</u> 1	EA
RN78	CRJ104DJ101T	RES, ARRAY, 100R (1608)	100 OHM/1608*4	1	EA
ININO	OI/010#D01011	11LO, ANNA 1, 1001 (1000)	100 01 110/ 1000 4	ı	L∧

Ref. Designator	Part Number	Description		Qty	
INPUT PCB (CU	<u> </u> JP11815-1)				
RN79	CRJ104DJ101T	RES, ARRAY, 100R (1608)	100 OHM/1608*4	1	EA
RN80	CRJ104DJ330T	RES , 4ARRAY (1608*4)	33 OHM/1608*4	1	EA
RN81	CRJ104DJ330T	RES , 4ARRAY (1608*4)	33 OHM/1608*4	1	EA
RN82	CRJ104DJ330T	RES , 4ARRAY (1608*4)	33 OHM/1608*4	1	EA
RN83	CRJ104DJ330T	RES , 4ARRAY (1608*4)	33 OHM/1608*4	<u>1</u> 1	EA EA
RN84 RN86	CRJ104DJ332T CRJ104DJ103T	RES, ARRAY, 3.3K*4 (1608) RES, ARRAY, 10K (1608)	3.3 OHM/1608*4 10K OHM/1608*4	<u> </u>	EA
RN87	CRJ104DJ103T	RES, ARRAY, 10K (1608)	10K OHM/1608*4	1	EA
RN88	CRJ104DJ103T	RES, ARRAY, 10K (1608)	10K OHM/1608*4	1	EA
RN89	CRJ104DJ103T	RES, ARRAY, 10K (1608)	10K OHM/1608*4	<del>:</del>	EA
RN90	CRJ104DJ103T	RES, ARRAY, 10K (1608)	10K OHM/1608*4	1	EA
R101	CRJ10DJ562T	RES , CHIP	5.6K OHM	1	EA
R102	CRJ10DJ562T	RES , CHIP	5.6K OHM	1	ΕA
R103	CRJ10DJ682T	RES , CHIP	6.8K OHM	1	EΑ
R104	CRJ10DJ682T	RES, CHIP	6.8K OHM	1	EΑ
R105	CRJ10DJ151T	RES, CHIP	150 OHM	1	EA
R106	CRJ10DJ151T	RES, CHIP	150 OHM	1	EA
R107	CRJ10DJ101T	RES, CHIP	100 OHM	1	EA
R108	CRJ10DJ101T	RES, CHIP	100 OHM	1	EA
R201	CRJ10DJ471T	RES, CHIP	470 OHM	1	EA
R202	CRJ10DJ471T	RES, CHIP	470 OHM	1	EA
R203	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R204	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R205	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R206	CRJ10DJ471T	RES , CHIP	470 OHM	11	EΑ
R207	CRJ10DJ471T	RES , CHIP	470 OHM	<u>1</u> 1	EA EA
R208 R209	CRJ10DJ471T CRJ10DJ471T	RES, CHIP	470 OHM 470 OHM	<u> </u>	EA
R210	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R210	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R212	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R213	CRJ10DJ471T	RES , CHIP	470 OHM	<del>:</del>	EA
R214	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R215	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R216	CRJ10DJ471T	RES , CHIP	470 OHM	1	ΕA
R217	CRJ10DJ471T	RES , CHIP	470 OHM	1	EΑ
R218	CRJ10DJ471T	RES, CHIP	470 OHM	1	EΑ
R219	CRJ10DJ471T	RES, CHIP	470 OHM	1	EA
R220	CRJ10DJ471T	RES, CHIP	470 OHM	1	EA
R221	CRJ10DJ471T	RES, CHIP	470 OHM	1	EA
R222	CRJ10DJ471T	RES, CHIP	470 OHM	1	EA
R223	CRJ10DJ471T	RES , CHIP	470 OHM	11	EA
R224	CRJ10DJ272T	RES , CHIP	2.7K OHM	1	EA
R225	CRJ10DJ471T	RES , CHIP	470 OHM	11	EΑ
R226	CRJ10DJ471T	RES , CHIP	470 OHM	1	EΑ
R227	CRJ10DJ474T	RES, CHIP	470K OHM	<u>1</u> 1	EΑ
R228 R229	CRJ10DJ474T CRJ10DJ474T	RES, CHIP RES, CHIP	470K OHM 470K OHM	1	EA EA
R230	CRJ10DJ474T	RES, CHIP	470K OHM	<u> </u>	EA
R231	CRJ10DJ474T	RES, CHIP	470K OHM	<u> </u> 	EA
R232	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R233	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R234	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R235	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R236	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R237	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R238	CRJ10DJ474T	RES, CHIP	470K OHM	1	EΑ
R239	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R240	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R241	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R242	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA

Ref. Designa	ator Part Number	Description		Qty	
INPUT PCE	 B (CUP11815-1)				
R243	CRJ10DJ474T	RES, CHIP	470K OHM	1	EΑ
R244	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R245	CRJ10DJ474T	RES, CHIP	470K OHM	1	EΑ
R246	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R247	CRJ10DJ474T	RES, CHIP	470K OHM	1	EΑ
R248	CRJ10DJ474T	RES, CHIP	470K OHM	1	EΑ
R249	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R250	CRJ10DJ103T	RES, CHIP	10K OHM	1	EA
R251	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R252	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R255	CRJ10DJ471T	RES, CHIP	470 OHM	1	EA
R256	CRJ10DJ471T	RES, CHIP	470 OHM	1	EA
R257	CRJ10DJ472T	RES, CHIP	4.7K OHM	1	EA
R258	CRJ10DJ472T	RES, CHIP	4.7K OHM	1	EA
R259	CRJ10DJ472T	RES, CHIP	4.7K OHM	1	EA
R261	CRJ10DJ104T	RES , CHIP	100K OHM	1	EA
R262	CRJ10DJ104T	RES , CHIP	100K OHM	1	EA
R263	CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R264	CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R265	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R267	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R268	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R269	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R270	CRJ10DJ472T	RES , CHIP	4.7K OHM	1	EA
R271	CRJ10DJ472T	RES , CHIP	4.7K OHM	1	EA
R272	CRJ10DJ472T	RES , CHIP	4.7K OHM	1	EA
R273	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R274	CRJ10DJ471T	RES , CHIP	470 OHM	1	EA
R275	CRJ10DJ472T	RES , CHIP	4.7K OHM	1	EA
R276	CRJ10DJ472T	RES , CHIP	4.7K OHM	1	EΑ
R277	CRJ10DJ472T	RES , CHIP	4.7K OHM	1 1	EΑ
R278 R279	CRJ10DJ104T	RES , CHIP RES , CHIP	100K OHM	1	EΑ
R283	CRJ10DJ104T CRJ10DJ331T	RES, CHIP	100K OHM	1	EA EA
R284	CRJ10DJ331T	RES, CHIP	330 OHM 330 OHM	1	EA
R285	CRJ10DJ3371	RES , CHIP	180K OHM	1	EA
R286	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R287	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R288	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R289	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R290	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R291	CRJ10DJ472T	RES , CHIP	4.7K OHM	1	EA
R292	CRJ10DJ472T	RES , CHIP	4.7K OHM	1	EA
R293	CRJ10DJ472T	RES , CHIP	4.7K OHM	1	EA
R301	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EA
R302	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EA
R303	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EA
R304	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EΑ
R305	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EA
R306	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EΑ
R307	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EΑ
R308	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EA
R309	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EA
R310	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	ΕA
R311	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EΑ
R312	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EΑ
R313	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EΑ
R314	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EΑ
R315	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EΑ
R316	CRJ10DJ332T	RES, CHIP	3.3K OHM	1	EΑ
R317	CRJ10DJ101T	RES, CHIP	100 OHM	1	EΑ

Ref. Designa	tor Part Number	Description		Qty	
INDUT DCD	(CUD44045 4)				
INPUT PCB	(CUP11815-1)				
R318	CRJ10DJ101T	RES , CHIP	100 OHM	1	ΕA
R319	CRJ10DJ101T	RES , CHIP	100 OHM	1	EΑ
R320	CRJ10DJ101T	RES, CHIP	100 OHM	1	EΑ
R321	CRJ10DJ512T	RES , CHIP	5.1K OHM	1	EA
R322	CRJ10DJ122T	RES, CHIP	1.2K OHM	1	EA
R323	CRJ10DJ122T	RES , CHIP	1.2K OHM	1	EA
R324	CRJ10DJ512T	RES , CHIP RES , CHIP	5.1K OHM		EΑ
R325 R326	CRJ10DJ512T CRJ10DJ122T	RES, CHIP	5.1K OHM 1.2K OHM	1	EA EA
R327	CRJ10DJ122T	RES , CHIP	1.2K OHM	1	EA
R328	CRJ10DJ123T	RES , CHIP	12K OHM	1	EA
R329	CRJ10DJ512T	RES , CHIP	5.1K OHM		EA
R330	CRJ10DJ122T	RES , CHIP	1.2K OHM	1	EΑ
R331	CRJ10DJ122T	RES, CHIP	1.2K OHM	1	EΑ
R332	CRJ10DJ512T	RES, CHIP	5.1K OHM	1	EA
R333	CRJ10DJ512T	RES, CHIP	5.1K OHM	1	EA
R334	CRJ10DJ122T	RES, CHIP	1.2K OHM		EA
R335	CRJ10DJ122T	RES, CHIP	1.2K OHM	1	EA
R336	CRJ10DJ512T	RES , CHIP	5.1K OHM	1	EA
R337	CRJ10DJ101T	RES , CHIP	100 OHM	1	EΑ
R338	CRJ10DJ101T CRJ10DJ101T	RES , CHIP RES , CHIP	100 OHM	1	EΑ
R339 R340	CRJ10DJ1011 CRJ10DJ101T	RES, CHIP	100 OHM 100 OHM	1	EA EA
R341	CRJ10DJ1011	RES , CHIP	1.2K OHM	1	EA
R344	CRJ10DJ122T	RES , CHIP	1.2K OHM	1	EA
R345	CRJ10DJ122T	RES , CHIP	1.2K OHM	1	EA
R348	CRJ10DJ122T	RES , CHIP	1.2K OHM		EΑ
R349	CRJ10DJ122T	RES, CHIP	1.2K OHM	1	EΑ
R352	CRJ10DJ122T	RES, CHIP	1.2K OHM	1	EΑ
R353	CRJ10DJ122T	RES, CHIP	1.2K OHM	1	EA
R356	CRJ10DJ122T	RES, CHIP	1.2K OHM	1	EA
R361	CRJ10DJ104T	RES , CHIP	100K OHM		EA
R362	CRJ10DJ104T	RES , CHIP	100K OHM	1	EA
R363	CRJ10DJ104T CRJ10DJ104T	RES , CHIP RES , CHIP	100K OHM	1	EΑ
R364 R365	CRJ10DJ104T	RES , CHIP	100K OHM 100K OHM	1	EA EA
R366	CRJ10DJ104T	RES , CHIP	100K OHM		EA
R367	CRJ10DJ104T	RES , CHIP	100K OHM		EA
R368	CRJ10DJ104T	RES , CHIP	100K OHM	1	EA
R371	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EΑ
R372	CRJ10DJ332T	RES, CHIP	3.3K OHM	1	EΑ
R373	CRJ10DJ332T	RES, CHIP	3.3K OHM	1	EA
R374	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EA
R375	CRJ10DJ332T	RES , CHIP	3.3K OHM		EA
R376	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EA
R377	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EA
R378	CRJ10DJ332T	RES , CHIP	3.3K OHM		EΑ
R379 R380	CRJ10DJ332T CRJ10DJ332T	RES , CHIP RES , CHIP	3.3K OHM 3.3K OHM	1	EA EA
R381	CRJ10DJ3321 CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R382	CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R383	CRJ10DJ101T	RES , CHIP	100 OHM		EA
R384	CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R385	CRJ10DJ101T	RES, CHIP	100 OHM	1	EΑ
R386	CRJ10DJ101T	RES, CHIP	100 OHM	1	EΑ
R389	CRJ10DJ332T	RES, CHIP	3.3K OHM	1	EA
R390	CRJ10DJ332T	RES, CHIP	3.3K OHM		EA
R391	CRJ10DJ105T	RES , CHIP	1M OHM		EA
R392	CRJ10DJ105T	RES , CHIP	1M OHM		EA
R393	CRJ10DJ332T	RES, CHIP	3.3K OHM	1	EΑ
R394	CRJ10DJ153T	RES , CHIP	15K OHM	1	EA

Ref. Designa	ator Part Number	Description		Qty	
INDIT DOE	CUP11815-1)				
INFUT FCE	(COP11013-1)				
R395	CRJ10DJ153T	RES , CHIP	15K OHM	1	EA
R396	CRJ10DJ332T	RES, CHIP	3.3K OHM	1	EΑ
R397	CRJ10DJ101T	RES, CHIP	100 OHM	1	EA
R398	CRJ10DJ101T	RES, CHIP	100 OHM	1	EA
R403	CRJ10DJ184T	RES, CHIP	180K OHM	1	EA
R404	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R405 R406	CRJ10DJ184T	RES , CHIP	180K OHM 180K OHM	1	EA EA
R406	CRJ10DJ184T CRJ10DJ184T	RES, CHIP	180K OHM	1	EA
R408	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R409	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R410	CRJ10DJ184T	RES , CHIP	180K OHM	1	EΑ
R413	CRJ10DJ512T	RES, CHIP	5.1K OHM	1	EA
R414	CRJ10DJ512T	RES, CHIP	5.1K OHM	1	EA
R415	CRJ10DJ512T	RES, CHIP	5.1K OHM	1	EA
R416	CRJ10DJ912T	RES,CHIP(1/10W) 9.1K OHM J	9.1K OHM	1	EA
R417	CRJ10DJ512T	RES , CHIP	5.1K OHM	1	EA
R418	CRJ10DJ512T	RES , CHIP	5.1K OHM	1	EΑ
R419 R420	CRJ10DJ512T CRJ10DJ512T	RES , CHIP	5.1K OHM 5.1K OHM	1	EA EA
R420 R423	CRJ10DJ512T	RES, CHIP	1K OHM	1	EA
R424	CRJ10DJ102T	RES , CHIP	1K OHM	1	EA
R425	CRJ10DJ102T	RES , CHIP	1K OHM	1	EA
R426	CRJ10DJ102T	RES , CHIP	1K OHM	1	EA
R427	CRJ10DJ102T	RES , CHIP	1K OHM	1	EΑ
R428	CRJ10DJ102T	RES, CHIP	1K OHM	1	EΑ
R429	CRJ10DJ102T	RES, CHIP	1K OHM	1	EA
R430	CRJ10DJ102T	RES, CHIP	1K OHM	1	EA
R433	CRJ10DJ101T	RES, CHIP	100 OHM	1	EA
R434	CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R435	CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R436 R437	CRJ10DJ101T CRJ10DJ101T	RES , CHIP	100 OHM 100 OHM	1	EA
R438	CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R439	CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R440	CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R453	CRJ10DJ184T	RES, CHIP	180K OHM	1	EΑ
R454	CRJ10DJ184T	RES, CHIP	180K OHM	1	EA
R455	CRJ10DJ184T	RES, CHIP	180K OHM	1	EA
R456	CRJ10DJ184T	RES, CHIP	180K OHM	1	EA
R457	CRJ10DJ184T	RES, CHIP	180K OHM	1	EA
R458	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R459	CRJ10DJ184T	RES , CHIP	180K OHM	1	EΑ
R460 R471	CRJ10DJ184T CRJ10DJ272T	RES, CHIP	180K OHM 2.7K OHM	1	EA
R471	CRJ10DJ272T	RES , CHIP	2.7K OHM	1	EA
R473	CRJ10DJ272T	RES , CHIP	2.7K OHM	1	EA
R474	CRJ10DJ272T	RES , CHIP	2.7K OHM	1	EA
R481	CRJ10DJ512T	RES, CHIP	5.1K OHM	1	EA
R482	CRJ10DJ512T	RES, CHIP	5.1K OHM	1	EA
R483	CRJ10DJ512T	RES, CHIP	5.1K OHM	1	EA
R484	CRJ10DJ123T	RES, CHIP	12K OHM	1	EA
R485	CRJ10DJ512T	RES , CHIP	5.1K OHM	1	EA
R486	CRJ10DJ512T	RES , CHIP	5.1K OHM	1	EA
R487 R488	CRJ10DJ512T CRJ10DJ512T	RES , CHIP	5.1K OHM	1	EA
R488 R491	CRJ10DJ5121 CRJ10DJ4R7T	RES , CHIP RES , CHIP	5.1K OHM 4.7 OHM	1 1	EA
R491 R492	CRJ10DJ4R7T	RES, CHIP	4.7 OHM	1	EA
R493	CRJ10DJ4R7T	RES , CHIP	4.7 OHM	1	EA
	J				<i>- :</i>
R494	CRJ10DJ4R7T	RES, CHIP	4.7 OHM	1	EA

Ref. Designa	tor Part Number	Description		Qty	
INDUT DOD	) (CUD4404E 4)				
INPUT PCE	3 (CUP11815-1)				
R496	CRJ10DJ4R7T	RES, CHIP	4.7 OHM	1	EA
R497	CRJ10DJ4R7T	RES , CHIP	4.7 OHM	1	EΑ
R498	CRJ10DJ4R7T	RES, CHIP	4.7 OHM	1	EΑ
R551	CRJ10DJ102T	RES , CHIP	1K OHM	1	EΑ
R552	CRJ10DJ102T	RES , CHIP	1K OHM	1	EA
R553	CRJ10DJ102T	RES , CHIP	1K OHM	1	EA
R554	CRJ10DJ102T	RES , CHIP	1K OHM	1	EΑ
R556 R557	CRJ10DJ153T CRJ10DJ182T	RES , CHIP RES , CHIP	15K OHM 1.8K OHM	1	EA EA
R558	CRJ10DJ1021	RES , CHIP	240 OHM	1	EA
R561	CRJ10DJ333T	RES , CHIP	33K OHM	1	EA
R562	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EΑ
R563	CRJ10DJ331T	RES , CHIP	330 OHM	1	EΑ
R564	CRJ10DJ101T	RES , CHIP	100 OHM	1	EΑ
R565	CRJ10DJ101T	RES, CHIP	100 OHM	1	EΑ
R567	CRJ10DJ101T	RES , CHIP	100 OHM	1	EA
R568	CRJ10DJ101T	RES, CHIP	100 OHM	1	EA
R569	CRJ10DJ821T	RES, CHIP	820 OHM	1	EA
R571	CRJ10DJ433T	RES , CHIP	43K OHM	1	EA
R572	CRJ10DJ222T	RES , CHIP	2.2K OHM	1	EA
R573	CRJ10DJ561T	RES , CHIP	560 OHM	1	EΑ
R574	CRJ10DJ102T	RES , CHIP RES , CHIP	1K OHM 2.2K OHM	1	EΑ
R575 R581	CRJ10DJ222T CRJ10DJ100T	RES, CHIP	10 OHM	1	EA EA
R582	CRJ10DJ1001	RES , CHIP	82 OHM	1	EA
R583	CRJ10DJ620T	RES , CHIP	62 OHM	1	EA
R584	CRJ10DJ680T	RES , CHIP	68 OHM	1	EA
R585	CRJ10DJ750T	RES , CHIP	75 OHM	1	EA
R586	CRJ10DJ820T	RES , CHIP	82 OHM	1	EΑ
R587	CRJ10DJ910T	RES, CHIP	91 OHM	1	EΑ
R588	CRJ10DJ750T	RES, CHIP	75 OHM	1	EA
R590	CRJ10DJ222T	RES, CHIP	2.2K OHM	1	EA
R591	CRJ10DJ222T	RES , CHIP	2.2K OHM	1	EA
R701	CRJ10DJ0R0T	RES , CHIP	0 OHM	1	EA
R702	CRJ10DJ101T	RES , CHIP	100 OHM	1	EΑ
R703	CRJ10DJ101T CRJ10DJ101T	RES , CHIP	100 OHM	1	EA EA
R704 R705	CRJ10DJ1011	RES , CHIP RES , CHIP	100 OHM 1K OHM	1	EA
R707	CRJ10DJ1021	RES, CHIP	100 OHM	1	EA
R714	CRJ10DJ104T	RES , CHIP	100 OHM	1	EA
R715	CRJ10DJ104T	RES , CHIP	100K OHM	1	EA
R716	CRJ10DJ472T	RES , CHIP	4.7K OHM	1	EΑ
R717	CRJ10DJ3R3T	CHIP RES	3.3 OHM	1	EΑ
R718	CRJ10DJ123T	RES, CHIP	12K OHM	1	EΑ
R719	CRJ10DJ473T	RES , CHIP	47K OHM	1	EA
R720	CRJ10DJ473T	RES, CHIP	47K OHM	1	EA
R721	CRJ10DJ330T	RES , CHIP	33 OHM	1	EA
R723	CRJ10DJ2R7T	RES , CHIP	2.7 OHM	1	EA
R724	CRJ10DJ101T	RES , CHIP	100 OHM	1	EΑ
R725	CRJ10DJ473T	RES , CHIP	47K OHM	1	EΑ
R726 R727	CRJ10DJ473T	RES , CHIP RES , CHIP	47K OHM 47K OHM	1	EA EA
R728	CRJ10DJ473T CRJ10DJ330T	RES, CHIP	33 OHM	1	EA
R759	CRJ10DJ3301	RES, CHIP	180 OHM	1	EA
R760	CRJ10DJ105T	RES , CHIP	1M OHM	1	EA
R765	CRJ10DJ103T	RES , CHIP	10K OHM	1	EA
R766	CRJ10DJ103T	RES , CHIP	10K OHM	1	EA
R767	CRJ10DJ152T	RES , CHIP	1.5K OHM	1	EA
R768	CRJ10DJ152T	RES, CHIP	1.5K OHM	1	EΑ
R769	CRJ10DJ103T	RES, CHIP	10K OHM	1	EA
R770	CRJ10DJ103T	RES, CHIP	10K OHM	1	EΑ

Ref. Designator	Part Number	Description		Qty	
INPUT PCB (CI					
,	<u> </u>				
R771	CRJ10DJ330T	RES, CHIP	33 OHM	1	EA
R772	CRJ10DJ330T	RES , CHIP	33 OHM	1	EA
R773	CRJ10DJ103T	RES , CHIP	10K OHM	1	EA
R774	CRJ10DJ330T	RES , CHIP	33 OHM	1	EΑ
R775 R776	CRJ10DJ103T	RES , CHIP	10K OHM	1	EA EA
R777	CRJ10DJ332T CRJ10DJ102T	RES , CHIP RES , CHIP	3.3K OHM 1K OHM	1	EA
R778	CRJ10DJ1021 CRJ10DJ103T	RES, CHIP	10K OHM	1	EA
R779	CRJ10DJ103T	RES, CHIP	10K OHM	1 1	EA
R786	CRJ10DJ103T	RES , CHIP	10K OHM	1	EA
R787	CRJ10DJ332T	RES, CHIP	3.3K OHM	1	EA
R788	CRJ10DJ332T	RES , CHIP	3.3K OHM	1	EA
R801	CRJ10DJ103T	RES , CHIP	10K OHM	1	EA
R802	CRJ10DJ103T	RES , CHIP	10K OHM	1	EΑ
R803	CRJ10DJ330T	RES, CHIP	33 OHM	1	EΑ
R804	CRJ10DJ103T	RES, CHIP	10K OHM	1	EA
R809	CRJ10DJ330T	RES, CHIP	33 OHM	1	EA
R810	CRJ10DJ330T	RES, CHIP	33 OHM	1	EA
R814	CRJ10DJ101T	RES, CHIP	100 OHM	1	EA
R815	CRJ10DJ103T	RES, CHIP	10K OHM	1	EA
R817	CRJ10DJ103T	RES, CHIP	10K OHM	1	EA
R822	CRJ10DJ220T	RES, CHIP	22 OHM	1	EA
R823	CRJ10DJ101T	RES, CHIP	100 OHM	1	EA
R824	CRJ10DJ330T	RES, CHIP	33 OHM	1	EA
R589	CRQ2AJ6R8H	RES, FUSE	6.8 OHM 2W J	1	EA
R780	CRG2ANJ330H	RES , METAL OXIDE FILM	33 OHM 2W J	1	EA
R781	CRG2ANJ330H	RES , METAL OXIDE FILM	33 OHM 2W J	1	EA
R782	CRG2ANJ330H	RES , METAL OXIDE FILM	33 OHM 2W J	1	EA
Miscellaneous					
1.704	LU 7070447	OURD DEAD	LUL 4114540 000 IT		- ^
L701	HLZ9Z014Z	CHIP, BEAD	HU-1H4516-600JT	1	EA
L702	HLZ9Z014Z	CHIP, BEAD	HU-1H4516-600JT	1 1	EA EA
L703 L704	HLZ9Z014Z HLZ9Z014Z	CHIP , BEAD CHIP , BEAD	HU-1H4516-600JT HU-1H4516-600JT	1	EA
L550	HLQ02C220KT	COIL , AXAIL	22UH	1	EA
L551	HLQ02C100KT	COIL, AXAIL	10UH	1	EA
L552	HLQ02C100KT	COIL , AXAIL	10UH	1	EA
L553	HLQ02C100KT	COIL , AXAIL	10UH	1	EA
L554	HLQ02C100KT	COIL, AXAIL	10UH	1	EA
L562	HLQ02CR68KT	COIL , AXAIL	0.68UH	1	EA
BN11	KJP08GB99ZM	CONNECTOR , HOUSING	CONNECTOR	1	EA
BN12	KJP15GB99ZM	WAFER	WAFER	1	EA
BN14	CWB2B006100EN	WIRE ASS'Y	WIRE	1	EA
BN42	CWZAVR140BN42	WIRE ASS'Y	WIRE	1	EA
BN43	CWZAVR340BN43	WIRE ASS'Y	WIRE	1	EA
BN52	CWB2B905150EN	WIRE , ASS'Y	WIRE	1	EA
CN10	CJP04GB46ZY	WAFER	WAFER	1	EA
CN13	CJP13GA115ZY	WAFER , CARD CABLE	WAFER	1	EA
CN15	CJP13GA115ZY	WAFER, CARD CABLE	WAFER	1	EA
CN16	CJP10GA115ZY	WAFER, CARD CABLE	WAFER	1	EA
CN17	KJP12GB142ZP	PIN HEADER	PIN HEADER	1	EA
CN18	CJP05GA19ZY	WAFER, STRAIGHT, 5PIN	WAFER	1	EA
CN19	CJP03GA19ZY	WAFER, STRAIGHT, 3PIN	WAFER	1	EA
CN61	CJP10GA19ZY	WAFER, STRAIGHT, 10PIN	WAFER	1	EA
CN72	KJP32GA117ZG	WAFER, CARD CABLE	WAFER	1	EA
CN97	CJP02GA19ZY	WAFER, 2PIN	WAFER	1	EΑ
ET02	CMD1A569	BRACKET, PCB	BRACKET	1	EA
JK11 JK12	CJJ4R019W CJJ4P014W	JACK , IN/OUT	TERMINAL JACK JACK	1 1	EA EA
JK12 JK13	CJJ4P014W	JACK , IN/OUT	JACK JACK	1	EA
JNIJ	CJJ4PU14W	JACK, IN/OUT	JACK	1	ĽΑ

Ref. Designator	Part Number	Description		Qty	
INIDIUT DOD (O	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\				
INPUT PCB (C	(UP11815-1)				
JK14	CJJ4R019W	TERMINAL , IN/OUT	TERMINAL JACK	1	EA
JK14 JK15	CJJ4R037W	JACK, BOARD	JACK	1	EA
JW21	CWE7202090AA	WIRE ASS'Y	WIRE	1	EA
L561	HLQ02CR68KT	COIL , AXAIL	0.68UH	1	EΑ
L563	HLQ02CR39KT	COIL, AXAIL	0.39UH	1	EΑ
X561	H2OX03579D140TF	CRYSTAL	3.579MHZ	1	EA
X563	HVFCSBLA503KECZ	CERAMINC, RESONATOR	RESONATOR	1	EΑ
X701	HOX12288E220CS	CRYSTAL	12.288MHZ 22PF	1	EA
MUTI-ROOM 8	L & A-BUS PCB (CUP118	15-2)			
Capacitors					
C401	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C401	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C411	HCUS1H223KC	CAP , CHIP	2200PF	1	EA
C412	HCUS1H223KC	CAP, CHIP	2200PF	1	EA
C423	HCUS1H151JA	CAP , CHIP , 150PFJA	150PF	1	EA
C424	HCUS1H151JA	CAP, CHIP, 150PFJA	150PF	1	EA
C431	CCEA1CH101T	CAP , ELECT	100UF 16V	1	EA
C432	CCEA1CH101T	CAP , ELECT	100UF 16V	1	EA
C443	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C444	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C445	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C446	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C447	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C448	HCUS1H331JA	CAP, CHIP	330PF	1	EA
C450	CCEA1VH331T	CAP, ELECT	330UF 35V	1	EΑ
C451	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C452	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C467	HCUS1C105ZF	CAP, CHIP	1UF	1	EA
C468	HCUS1C105ZF	CAP, CHIP	1UF	1	EA
C469	HCUS1C105ZF	CAP, CHIP	1UF	1	EA
C470	HCUS1C105ZF	CAP, CHIP	1UF	1	EA
C475	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C476	HCUS1H101JA	CAP, CHIP	100PF	1	EA
C477	HCUS1H101JA	CAP, CHIP	100PF	1	EA
C478	HCUS1C105ZF	CAP, CHIP	1UF	1	EA
C479	HCUS1C105ZF	CAP, CHIP	1UF	1	EA
C480	CCKT1H103ZF	CAP , CERAMIC	0.01UF 50V ZF	1	EA
Semiconductors					
D445	LIV/DMTZ IC ODT	DIODE ZENED	0.01/4/01/4	4	F ^
D445	HVDMTZJ6.8BT	DIODE ZENER	6.8V 1/2W	1	EΑ
D446	HVDMTZJ6.8BT	DIODE ZENER	6.8V 1/2W	1	EΑ
D447 D475	HVDMTZJ12BT	DIODE , ZENER DIODE	12V 1/2W 1SS133T	1	EA EA
IC44	HVD1SS133MT HVINJW1159M	I.C , VOLUME (2-CH) (NJW1159M)	JRC	1	EA
IC44 IC45	HVINJW1159M HVINJM2068MDTE1	I.C , VOLUME (2-CH) (NJW1159M)	JRC	1	EA
IC50	HVINJM2068MDTE1	I.C , OP AMP (NJM2068)	JRC	1	EA
Q451	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EA
Q451 Q452	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EA
Q452 Q453	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EA
Q454	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EA
<b>3</b> 10 1		TO STORY MOTE	1110201-10		
Resistors					
R401	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R402	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
		RES , CHIP	5.6K OHM	1	EA
R421	CRJ10DJ562T	TRES COR	19.0K UHIVI		

Ref. Designator	Part Number	Description		Qty	
MUTI-ROOM &	A-BUS PCB (CUP118	<u> </u>			
R431	CRJ10DJ122T	RES , CHIP	1.2K OHM	1	EA
R432	CRJ10DJ122T	RES , CHIP	1.2K OHM	1	EA EA
R441 R442	CRJ10DJ101T CRJ10DJ101T	RES , CHIP RES , CHIP	100 OHM 100 OHM	1	EA
R445	CRJ10DJ821T	RES, CHIP	820 OHM	1	EA
R446	CRJ10DJ821T	RES, CHIP	820 OHM	1	EA
R447	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R451	CRJ10DJ184T	RES , CHIP	180K OHM	1	EΑ
R452	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R461	CRJ10DJ104T	RES, CHIP	100K OHM	1	EA
R462	CRJ10DJ104T	RES, CHIP	100K OHM	1	EA
R463	CRJ10DJ821T	RES, CHIP	820 OHM	1	EA
R464	CRJ10DJ821T	RES, CHIP	820 OHM	1	EA
R465	CRJ10DJ472T	RES , CHIP	4.7K OHM	1	EΑ
R466 R467	CRJ10DJ472T CRJ10DJ472T	RES , CHIP RES , CHIP	4.7K OHM 4.7K OHM	1	EA EA
R468	CRJ10DJ472T	RES, CHIP	4.7K OHM	1	EA
R469	CRJ10DJ4721 CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R470	CRJ10DJ184T	RES , CHIP	180K OHM	1	EA
R475	CRJ10DJ4R7T	RES, CHIP	4.7 OHM	1	EA
R476	CRJ10DJ221T	RES , CHIP	220 OHM	1	EA
R477	CRJ10DJ221T	RES , CHIP	220 OHM	1	EΑ
R478	CRJ10DJ562T	RES , CHIP	5.6K OHM	1	EA
R479	CRJ10DJ562T	RES, CHIP	5.6K OHM	1	EA
R480	CRJ10DJ102T	RES, CHIP	1K OHM	1	EA
R489	CRJ10DJ392T	RES . CHIP	3.9K OHM	1	EA
R490	CRJ10DJ392T	RES . CHIP	3.9K OHM	1	EA
R499	CRJ10DJ102T	RES, CHIP	1K OHM	1	EA
Miscellaneous					
CN12	CJP03GA19ZY	WAFER, STRAIGHT, 3PIN	WAFER	1	EA
JK16	CJJ4N076Z	JACK , IN/OUT	JACK	1	EA
JK17	CJJ9L004Z	JACK , RJ-45	JACK	1	EA
JK18	CJJ2D008Z	JACK, STEREO	JACK	1	EΑ
BN16 BN29	CJP10GA115ZY CWZAVR340BN11	WAFER , CARD CABLE WIRE ASS'Y (SHIELD)	WAFER WIRE	1	EA EA
BN87	CWB1C902050EN	WIRE ASS'Y	WIRE	1	EA
BN90	CWB1C902030EN	WIRE	WIRE	1	EA
Бічоо	OWBTOSOZSOCEIV	VVIICE	WIICE	'	
VIDEO PCB (C	UP11849-1)				
Capacitors					+
C401	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C402	CCKT1H101KB	CAP, CERAMIC	100PF 50V KB	1	EA
C403	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C404	CCKT1H101KB	CAP, CERAMIC	100PF 50V KB	1	EA
C405	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C406	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EΑ
C407	CCKT1H101KB	CAP, CERAMIC	100PF 50V KB	1	EΑ
C408 C409	CCEA1VH100T	CAP CERAMIC	10UF 35V	1	EA EA
C409 C410	CCKT1H101KB CCKT1H101KB	CAP, CERAMIC CAP, CERAMIC	100PF 50V KB 100PF 50V KB	1	EA
C410	HCBS1H101KBT	CAP, CERAMIC	100PF 50V KB	1	EA
C412	HCBS1H101KBT	CAP, CERAMIC	100PF 50V K	1	EA
C413	HCBS1H101KBT	CAP, CERAMIC	100PF 50V K	1	EA
C414	HCBS1H101KBT	CAP, CERAMIC	100PF 50V K	1	EA
C415	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C416	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C417	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA

Ref. Designator	Part Number	Description		Qty	
\(\(IDEO BOD \(\text{IDEO BOD \(\t	0110440404)				
VIDEO PCB (	CUP11849-1)				
C418	HCBS1H223ZFT	CAP , CERAMIC	0.022UF 50V Z	1	EA
C419	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C420	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C421	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C422	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C423	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C424	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C425	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C426	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C427	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EΑ
C428 C429	CCEA1CH101T	CAP, CEPANIC	100UF 16V 0.022UF 50V Z	1 1	EA EA
C429 C430	HCBS1H223ZFT CCEA1CH101T	CAP, CERAMIC CAP, ELECT	100UF 16V	1	EA
C430	CCEATCH1011	CAP, ELECT	10UF 35V	1	EA
C432	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C436	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C437	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C438	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C439	CCEA1CH101T	CAP , ELECT	100UF 16V	1	EΑ
C442	HCBS1H103ZFT	CAP, CERAMIC	0.01UF 50V Z	1	EΑ
C443	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C444	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C445	HCBS1H103ZFT	CAP, CERAMIC	0.01UF 50V Z	1	EA
C446	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C447	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C448	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C449	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C450	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z 100UF 16V	1	EΑ
C451 C452	CCEA1CH101T HCBS1H223ZFT	CAP, ELECT CAP, CERAMIC	0.022UF 50V Z	1 1	EA EA
C452 C453	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C454	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C455	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C456	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
C457	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C458	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C459	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
C461	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C462	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C463	HCBS1H473ZFT	CAP, CERAMIC	0.047UF 50V Z	1	EA
C464	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C501	HCBS1H330JT	CAP, CERAMIC	33PF 50V	1	EA
C502	HCBS1H330JT	CAP, CERAMIC	33PF 50V	1	EΑ
C503 C504	HCBS1H181KBT CCEA1HHR47T	CAP, CERAMIC CAP, ELECT	180PF 50V K 0.47UF 50V	1 1	EA
C504	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C506	CCEA1AH471T	CAP, ELECT	470UF 10V	1	EA
C507	CCCT1H220JC	CAP, CERAMIC	22PF 50V JC	1	EA
C508	CCCT1H270JC	CAP, CERAMIC	22PF 50V JC	1	EA
C509	CCEA1HH1R0T	CAP, ELECT	1UF 50V	1	EA
C510	CCEA1HH1R0T	CAP, ELECT	1UF 50V	1	EA
C511	HCQI1H682JZT	CAP, MYLAR	6800PF 50V J	1	EA
C512	CCEA1HH0R1T	CAP, ELECT	0.1UF 50V	1	EA
C513	HCBS1H560JT	CAP, CERAMIC	56PF 50V J	1	EA
C514	HCBS1H220JCT	CAP, CERAMIC	22PF 50V J	1	EA
C515	CCEA1AH471T	CAP, ELECT	470UF 10V	1	EA
C517	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C518	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EΑ
C519	CCFT1H104ZF C3A206	CAP , SEMICONDUCTOR WIRE , COPPER	0.1UF 50V ZF	1	EA
C523 C555	CCEA1AH471T	CAP, ELECT	SN95/PB5 , 0.6 470UF 10V	1	EA
U000	IOCEATAM4/11	I UAP , ELEUT	14/00F 10V	l I	ĮΕΑ

Ref. Designator	Part Number	Description		Qty	
VIDEO PCB (C	 				
VIDEO I OD (O					
C556	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C557	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C561	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C568	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
C520	CCEA0JKR3222E	CAP, ELECT	2200UF 6.3V	1	EA
C590	CCCT1H220JC	CAP, CERAMIC	22PF 50V JC	1	EA
C943	CCEA1HH2R2T	CAP, ELECT	2.2UF 50V	1	EA
Semiconductors					
D401	HVD1SS133MT	DIODE	1SS133T	1	EA
D402	HVD1SS133MT	DIODE	1SS133T	1	EA
D403	HVD1SS133MT	DIODE	1SS133T	1	EΑ
D404	HVD1SS133MT	DIODE	1SS133T	1	EA
D405	HVD1SS133MT	DIODE	1SS133T	1	EA
L501	HLQ02C101JT	COIL, AXAIL	100UH,J	1	EA
L502	KLQ5R6J405T	COIL, PEAKING(RADIAL)	5.6UH J 4X5	1	EA
Q402	HVTKSA733CYT	TRANSISTOR	KSA733CY	1	EA
Q403	HVTKRA107MT	TRANSISTOR	KRA107M	1	EΑ
Q404	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q405	HVTKSA733CYT	TRANSISTOR	KSA733CY	1	EA
Q406	HVTKRA107MT	TRANSISTOR	KRA107M	1	EA
Q407	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q408	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q501	HVTKSC2785YT	TRANSISTOR	KSC2785Y(DEAD)	1	EA
Q502	HVTKSA1175YT	TRANSISTOR	KSA1175Y(DEAD)	1	EA
Q556	HVTKSA1175YT	TRANSISTOR	KSA1175Y(DEAD)	1	EA
Q568	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EA
Q569	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
IC41	HVINJM2296M	I.C, VIDEO SW (NJM2296M)	JRC	1	EA
IC42	HVINJM2296M	I.C , VIDEO SW (NJM2296M)	JRC	1	EA
IC43	HVINJM2296M	I.C , VIDEO SW (NJM2296M)	JRC	1	EA
IC44	HVIHCF4053M013T	I.C (HCF4053) TRIPLE 2 CHAN MULTPLX		1	EA
IC45	HVIHCF4053M013T	I.C (HCF4053) TRIPLE 2 CHAN MULTPLX		1	EA
IC46	HVINJM2581MTE1	I.C (NJM2581M) 3ch VIDEO AMPLIFIER	JRC	1	EA
IC47	HVIMM1511XNRE	IC, Y/C-MIX (MM1511) VIDEO SWITCH	MITSUMI	1	EA
IC52	HVI74ACT04MTR	I.C , HEX (74ACT04)	FAIRCHILD	1	EA
IC48	CVIL7805CPNA	I.C, REGULATOR (L7805CP)	ASS'Y	1	EA
IC49	CVIL7905CPNA	I.C, REGULATOR (L7905CP)	ASS'Y	1	EA
	HVIL7805CP	I.C, REGULATOR (L7805CP)	ST	1	EA
IC51	HVIL7905CP HVILC74763M	I.C, REGULATOR (L7905CP) I.C , OSD (LC74763M)	ST SANYO	1	EA
Resistors					
R401	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EΑ
R402	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R403	CRD20TJ332T	RES , CARBON	3.3K OHM 1/5W J	1	EA
R404	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EΑ
R405	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R406	CRD20TJ332T	RES, CARBON	3.3K OHM 1/5W J	1	EA
R407	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R408	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R409	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R410	CRD20TJ332T	RES, CARBON	3.3K OHM 1/5W J	1	EA
R411	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R412	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R413	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R414	CRD20TJ332T	RES , CARBON	3.3K OHM 1/5W J	1	EA
R415	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R416	CRD20TJ332T	RES, CARBON	3.3K OHM 1/5W J	1	EA

Ref. Designate	or Part Number	Description		Qty	
VIDEO PCB	(CUP11849-1)				
R417	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R418	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R419	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R420	CRD20TJ332T	RES , CARBON	3.3K OHM 1/5W J	1	EA
R421	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R422	CRD20TJ332T	RES , CARBON	3.3K OHM 1/5W J	1	EΑ
R423	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EΑ
R424 R425	CRD20TJ750T CRD20TJ750T	RES , CARBON RES , CARBON	75 OHM 1/5W J 75 OHM 1/5W J	1 1	EA
R426	CRD20TJ730T	RES, CARBON	3.3K OHM 1/5W J	1	EA
R420 R427	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R428	CRD20TJ730T	RES, CARBON	3.3K OHM 1/5W J	1	EA
R430	CRD20TJ1R8T	RES , CARBON	1.8 OHM 1/5W J	1	EA
R431	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R432	CRD20TJ1R0T	RES , CARBON	1 OHM 1/5W J	1	EA
R433	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R434	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R435	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R436	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R437	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R438	CRD25TJ1R0T	RES , CARBON	1 OHM 1/4W J	1	EA
R439	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R440	CRD20TJ1R8T	RES , CARBON	1.8 OHM 1/5W J	1	EΑ
R441	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EΑ
R442	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R443	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EΑ
R444	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EΑ
R445	CRD20TJ1R0T	RES , CARBON	1 OHM 1/5W J	1	EA
R446	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R447	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R448	CRD20TJ1R8T	RES , CARBON	1.8 OHM 1/5W J	1	EA
R449	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EA
R450	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EA
R451	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EA
R452	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R456	CRD20TJ680T	RES , CARBON	68 OHM 1/5W J	1	EA
R457	CRD20TJ333T	RES, CARBON	33K OHM 1/5W J	1	EA
R458	CRD20TJ123T	RES , CARBON	12K OHM 1/5W J	1	EA
R459	CRD20TJ680T	RES , CARBON	68 OHM 1/5W J	1	EΑ
R460 R461	CRD20TJ333T CRD20TJ123T	RES, CARBON	33K OHM 1/5W J 12K OHM 1/5W J	1 1	EA EA
R462	CRD20TJ102T	RES , CARBON RES , CARBON	1K OHM 1/5W J	1	EA
R463	CRD20TJ102T	RES , CARBON	10K OHM 1/5W J	1	EA
R464	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R465	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R467	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R468	CRD20TJ100T	RES, CARBON	10 OHM 1/5W J	1	EA
R469	CRD20TJ100T	RES . CARBON	10 OHM 1/5W J	1	EA
R470	CRD20TJ100T	RES , CARBON	10 OHM 1/5W J	1	EΑ
R471	CRD20TJ100T	RES, CARBON	10 OHM 1/5W J	1	EA
R472	CRD20TJ151T	RES, CARBON	150 OHM 1/5W J	1	EA
R473	CRD20TJ181T	RES, CARBON	180 OHM 1/5W J	1	EA
R474	CRD20TJ1R8T	RES, CARBON	1.8 OHM 1/5W J	1	EA
R475	CRD20TJ1R0T	RES, CARBON	1 OHM 1/5W J	1	EA
R476	CRD25TJ101T	RES, CARBON	100 OHM 1/4W J	1	EA
R477	CRD20TJ2R2T	RES, CARBON	2.2 OHM 1/5W J	1	EA
R479	CRD20TJ181T	RES, CARBON	180 OHM 1/5W J	1	EA
R481	CRD20TJ183T	RES, CARBON	18K OHM 1/5W J	1	EA
R483	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R484	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R485	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA

Ref. Designator	Part Number	Description		Qty	
VIDEO PCB (	 CUP11849-1)				
(					
R501	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R502	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R503	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EA
R504	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R505	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R506	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R507	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R508	CRD20TJ682T	RES , CARBON	6.8K OHM 1/5W J	1	EA
R509	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EA
R510	CRD20TJ393T	RES , CARBON	39K OHM 1/5W J	1	EA
R511	CRD20TJ222T	RES , CARBON	2.2K OHM 1/5W J	1	EA
R512	CRD20TJ271T	RES , CARBON	270 OHM 1/5W J	1	EA
R513	CRD20TJ822T	RES , CARBON	8.2K OHM 1/5W J	1	EA
R514	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R516	CRD20TJ202T	RES , CARBON	2K OHM 1/5W J	1	EΑ
R517	CRD20TJ273T	RES , CARBON	27K OHM 1/5W J	1	EΑ
R555	CRD20TJ101T	RES , CARBON	100 OHM 1/5W J	1	EΑ
R556	CRD20TJ183T	RES , CARBON	18K OHM 1/5W J	1 1	EΑ
R558 R568	CRD20TJ102T CRD20TJ223T	RES , CARBON RES , CARBON	1K OHM 1/5W J 22K OHM 1/5W J	1	EA EA
				1	EA
R569	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	l l	EA
Miscellaneous					
BN14	CWB4F232450PU	WIRE ASS'Y	WIRE	1	EA
BN91	CWB4FE53130PU	WIRE ASS'Y	WIRE	1	EA
CN14	CJP06GA19ZY	WAFER, STRAIGHT, 6PIN	WAFER	1	EA
CN41	CJP06GA19ZY	WAFER, STRAIGHT, 6PIN	WAFER	1	EA
CN43	CJP13GA115ZY	WAFER, CARD CABLE	WAFER	1	EA
CN52	CJP05GA19ZY	WAFER, STRAIGHT, 5PIN	WAFER	1	EA
ET04	CMD1A569	BRACKET, PCB	BRACKET	1	EA
ET05	CMD1A569	BRACKET, PCB	BRACKET	1	EA
	CMY1A218	HEAT SINK(TR)	HEAT SINK	1	EA
	CTB3+8J	SCREW	SCREW	1 1	EA
	CMY1A218	HEAT SINK(TR)	HEAT SINK	1	EA
117.4.4	CTB3+8J	SCREW	SCREW	1	EA
JK41	CJJ9N001Z	JACK, S-VIDEO (2P/H)	JACK	1	EΑ
JK42 JK43	CJJ9N001Z CJJ9S001Z	JACK , S-VIDEO (2P/H)	JACK JACK	1	EΑ
JK48	CJJ9S001Z CJJ4N043Z	JACK , S-VIDEO (3P/H)  JACK , BOARD	JACK	1	EA EA
JK49	CJJ4N043Z	JACK, BOARD	JACK	1	EA
JK50	CJJ4S010Z	JACK, BOARD	JACK	1	EA
JW11	CWEP202110VV	WIRE	WIRE	1	EA
X501	HOX14318E220C	CRYSTAL	14.318Mhz	1	EA
OUTLET DOB	 				
OUTLET FOR	1043-1)				
C124	HCQE2E104KDE	CAP , LINE ACROSS	0.1UF	1	EA
CN21	KJP02GA89ZM	WAFER	WAFER	1	EA
CN84	KJP02KA060ZY	WAFER	WAFER	1	EA
F901	KBA2D2500TLET	FUSE	2.5A	1	EA
F902	KBA2D2500TLET	FUSE	2.5A	1	EA
OL91	KJJ7A015Z	OUTLET , AC(UL/2P/SEP)	OUTLET	1	EA
COMPONENT	PCB (CUP11849-2)				
Capacitors					
Capacitors					
C601	HCBS1H220JCT	CAP , CERAMIC	22PF 50V J	1	EA
C602	HCBS1H220JCT	CAP, CERAMIC	22PF 50V J	1	EA

C604         HCBS1H220JCT         CAP , CERAMIC         22PF           C605         HCBS1H220JCT         CAP , CERAMIC         22PF           C606         HCBS1H220JCT         CAP , CERAMIC         22PF           C607         HCBS1H220JCT         CAP , CERAMIC         22PF	PF 50V J PF 50V J PF 50V J PF 50V J	1	
C603         HCBS1H220JCT         CAP , CERAMIC         22PF           C604         HCBS1H220JCT         CAP , CERAMIC         22PF           C605         HCBS1H220JCT         CAP , CERAMIC         22PF           C606         HCBS1H220JCT         CAP , CERAMIC         22PF           C607         HCBS1H220JCT         CAP , CERAMIC         22PF	PF 50V J PF 50V J PF 50V J		
C604         HCBS1H220JCT         CAP , CERAMIC         22PF           C605         HCBS1H220JCT         CAP , CERAMIC         22PF           C606         HCBS1H220JCT         CAP , CERAMIC         22PF           C607         HCBS1H220JCT         CAP , CERAMIC         22PF	PF 50V J PF 50V J PF 50V J		
C604         HCBS1H220JCT         CAP , CERAMIC         22PF           C605         HCBS1H220JCT         CAP , CERAMIC         22PF           C606         HCBS1H220JCT         CAP , CERAMIC         22PF           C607         HCBS1H220JCT         CAP , CERAMIC         22PF	PF 50V J PF 50V J PF 50V J	1	EA
C606         HCBS1H220JCT         CAP , CERAMIC         22PF           C607         HCBS1H220JCT         CAP , CERAMIC         22PF	PF 50V J		EΑ
C607 HCBS1H220JCT CAP, CERAMIC 22PF		1	EΑ
	PF 50V J	1	EA
C608 HCBS1H220JCT LCAP CFRAMIC 122PF		1	EA
	PF 50V J	1	EA
	PF 50V J	1	EA
	22UF 50V Z	1	EA
	JF/16V	1	EA
	22UF 50V Z	1	EA
	JF/16V	1	EA
	IUF 50V Z	1	EA
	JF 35V	1	EA
C616 CCEA1VH100T CAP, ELECT 10UF	JF 35V	11	EA
Semiconductors			
D601 HVD1SS133MT DIODE 1SS	S133T	1	EA
	S133T	1	EA
IC61 HVINJM2586AMTE1 I.C , VIDEO SW (NJM2586A) JRC		1	EΑ
IC62 HVIHCF4053M013T I.C (HCF4053) TRIPLE 2 CHAN MULTPLX ST		1	ΕA
	4107M	1	ΕA
	A733CY	1	ΕA
	C107M	1	EA
Resistors			
R601 CRD20TJ750T RES , CARBON 75 O	OHM 1/5W J	1	EA
	OHM 1/5W J	1	EA
	OHM 1/5W J	1	EA
	OHM 1/5W J	1	EA
	OHM 1/5W J	1	EA
	OHM 1/5W J	1	EA
	OHM 1/5W J	1	EA
	OHM 1/5W J	1	EΑ
	OHM 1/5W J	1	EΑ
	OHM 1/5W	1	EΑ
	OHM 1/5W	1	EΑ
R612 CRD20TJ472T RES, CARBON 4.7K	COHM 1/5W J	1	EΑ
R614 CRD25TJ750T RES, CARBON 75 O	OHM 1/4W J	1	EΑ
	OHM 1/5W J	1	EA
R616 CRD20TJ680T RES , CARBON 68 O	OHM 1/5W J	1	EA
	OHM 1/5W J	1	EA
	COHM 1/5W J	1	EA
R619 CRD20TJ123T RES , CARBON 12K	OHM 1/5W J	1	EA
Miscellaneous			
	N.	- 1	E ^
JK61         CJJ4L009Z         JACK 9P (RRR/BBB/GGG)         JACI           CN62         CJP04GA19ZY         WAFER, STRAIGHT, 4PIN         WAF		<u>1</u> 1	EA EA
DIGITAL IN/OUT PCB (CUP11849-13)			
DIGITAL 110-0011 OD (COI 110-3-13)			
Capacitors			
C750 CCEA1AH471T CAP, ELECT 470L	UF 10V	1	EA
	UF 10V	1	EΑ
	UF 10V	1	EΑ
	PF 50V K	1	EΑ
C754 HCBS1H181KBT CAP, CERAMIC 180F	PF 50V K	1	EΑ
C755 HCBS1H181KBT CAP, CERAMIC 180F	PF 50V K	1	EA

Ref. Designator	Part Number	Description		Qty	
DIGITAL IN/OLI	T PCB (CUP11849-13)				
DIGITAL III/OU	1100 (00111049-13)				
C756	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EΑ
C757	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
C758	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
C759	HCBS1H101KBT	CAP, CERAMIC	100PF 50V K	1	EA
C760	CCKT1H473ZF	CAP, CERAMIC	0.047UF 50V ZF	1	EA
C761	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C762	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C763	HCBS1H104ZFT	CAP , CERAMIC	0.1UF 50V Z	11	EA
Semiconductors					
IC72	HVI74HCU04AFNG	I.C , INVERTER (74HCU04)	TOSHIBA	1	EA
Resistors					
R750	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R750	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	<u> </u>	EA
R752	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R753	CRD20TJ1R0T	RES , CARBON	1 OHM 1/5W J	<u>'</u> 1	EA
R754	CRD20TJ1R0T	RES , CARBON	1 OHM 1/5W J	<del>:</del> 1	EA
R755	CRD20TJ1R0T	RES , CARBON	1 OHM 1/5W J	1	EA
R756	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EΑ
R757	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R758	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EΑ
R759	CRD20TJ100T	RES, CARBON	10 OHM 1/5W J	1	EΑ
R760	CRD20TJ241T	RES, CARBON	240OHM 1/5W J	1	EA
R761	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EΑ
R762	CRD20TJ1R0T	RES, CARBON	1 OHM 1/5W J	1	EA
R763	CRD20TJ1R0T	RES, CARBON	1 OHM 1/5W J	1	EA
R764	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EA
R765	CRD20TJ104T	RES, CARBON	100K OHM 1/5W J	1	EA
R766	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R767	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R768	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R770	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R771	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R772	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R776	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	11	EA
Miscellaneous					
BN18	KJP12GB143ZP	DIP SOCKET	SOCKET	1	EA
JK75	HJSTORX177L	MODULE , OPTICAL(RX)	OPTICAL JACK	1	EA
JK76	HJSTORX177L	MODULE, OPTICAL(RX)	OPTICAL JACK	1	EA
JK77	HJSTORX177L	MODULE, OPTICAL(RX)	OPTICAL JACK	1	EA
JK78	CJJ4P053Z	JACK, RCA (4P ALL ORG)	JACK	1	EA
JK79	HJSTOTX177L	MODULE , OPTICAL(TX)	OPTICAL JACK	1	EA
POWER TRANS	S PCB (CUP11849-4,5)				
Capacitors					$\vdash$
Capaonoro					+
C107	CCKT1H103ZF	CAP, CERAMIC	0.01UF 50V ZF	1	ΕA
C108	CCKT1H103ZF	CAP, CERAMIC	0.01UF 50V ZF	1	EΑ
C109	CCFT1H104ZF	CAP , SEMICONDUCTOR	0.1UF 50V ZF	1	EA
C110	CCFT1H104ZF	CAP , SEMICONDUCTOR	0.1UF 50V ZF	1	EA
C111	CCKT1H103ZF	CAP, CERAMIC	0.01UF 50V ZF	1	EA
C112	CCKT1H103ZF	CAP, CERAMIC	0.01UF 50V ZF	1	EA
C117	CCEA1HH4R7T	CAP, ELECT	4.7UF 50V	1	EA
C118	CCKT1H103ZF	CAP, CERAMIC	0.01UF 50V ZF	1	EA
C119	CCEA1JH470TS	CAP, ELECT	63V/47UF/105'C	1	EA

Ref. Designator	Part Number	Description		Qty	
POWER TRANS	L S PCB (CUP11849-4,5)				
C120	CCEA1JH470TS	CAP, ELECT	63V/47UF/105'C	1	EA
C121	CCKT1H103ZF	CAP, CERAMIC	0.01UF 50V ZF	1	EA
C122	CCEA2AH101E	CAP , ELECT	100UF	1	EA
C921	HCQI1H104JZT	CAP, MYLAR	0.1UF 50V J	1	EA
C922	HCQI1H104JZT	CAP, MYLAR	0.1UF 50V J	1	EA
C923	HCQI1H104JZT	CAP, MYLAR	0.1UF 50V J	1	EA
C924	HCQI1H104JZT	CAP, MYLAR	0.1UF 50V J	1	EA
C925	HCQI1H103JZT	CAP, MYLAR	0.01UF 50V J	1	EA
C926	HCQI1H103JZT	CAP, MYLAR	0.01UF 50V J	1	EA
C927	HCQI1H103JZT	CAP, MYLAR	0.01UF 50V J	1	EA
C928	HCQI1H103JZT	CAP, MYLAR	0.01UF 50V J	11	EA
C931	HCQI1H473JZT	CAP, MYLAR	0.047UF 50V J	11	EA EA
C932	HCQI1H473JZT	CAP, MYLAR	0.047UF 50V J 0.047UF 50V J	<u>1</u> 1	
C933 C934	HCQI1H473JZT HCQI1H473JZT	CAP , MYLAR CAP , MYLAR	0.047UF 50V J	1	EA EA
C934 C947	CCFT1H104ZF	CAP , MYLAR  CAP , SEMICONDUCTOR	0.1UF 50V ZF	1	EA
C947	CCKT1H104ZF	CAP, CERAMIC	0.10F 50V ZF	1	EA
C949	CCKT1H103ZF	CAP, CERAMIC	0.01UF 50V ZF	1	EA
C951	CCEA1HH102E	CAP, ELECT	1000UF , 50V	1	EA
C951	CCEATHHTOZE	CAF, ELECT	100001, 500		EA
Semiconductors					
D101	HVDMTZJ15BT	DIODE , ZENER	15V 1/2W	1	EA
D102	HVDMTZJ27BT	DIODE , ZENER	27V 1/2W	1	EΑ
D104	HVD1N5819T	DIODE , SCHOTTKY	1N5819	1	EΑ
D105	HVD1N5819T	DIODE , SCHOTTKY	1N5819	1	EΑ
D108	KVD1N4003ST	DIODE	1N4003	1	EΑ
D109	HVDMTZJ12BT	DIODE , ZENER	12V 1/2W	1	EΑ
D111	HVDMTZJ12BT	DIODE , ZENER	12V 1/2W	1	EΑ
D950	KVD1N4003ST	DIODE	1N4003	1	EA
D951	KVD1N4003ST	DIODE	1N4003	1	EΑ
D991	CVDKBU804FMA	BRIDGE DIODE ASS'Y	KBU804F	1	EΑ
	HVDKBU804F	DIODE , BRIDGE	BRIDGE DIODE	1	EA
D992	CVDKBU804FMA	BRIDGE DIODE ASS'Y	KBU804F	1	EA
	HVDKBU804F	DIODE , BRIDGE	BRIDGE DIODE	1	EA
Q104	HVTKSC2316YT	TRANSISTOR	KSC2316Y	1	EA
Resistors					
R101	KRD25FJ3R3T	RES , CARBON	3.3 OHM 1/4W	1	EA
R104	KRQ1AJR47H	RES , FUSE	0.47 OHM 1W J	1	EA
R105	KRQ1AJR47H	RES , FUSE	0.47 OHM 1W J	1	EA
R106	CRQ1AJR33H	RES, FUSE	0.33 OHM 1W J	<del>:</del>	EA
R107	CRQ1AJR33H	RES, FUSE	0.33 OHM 1W J	1	EA
R108	CRD20TJ4R7T	RES, CARBON	4.7 OHM 1/5W	1	EΑ
R109	CRD20TJ100T	RES , CARBON	10 OHM 1/5W J	1	EA
R110	CRD20TJ4R7T	RES , CARBON	4.7 OHM 1/5W	1	EA
R112	CRD20TJ122T	RES , CARBON	1.2K OHM 1/5W J	1	EA
R113	CRD20TJ473T	RES , CARBON	47K OHM 1/5W J	1	EA
R949	CRQ1AJR33H	RES , FUSE	0.33 OHM 1W J	1	EΑ
R950	CRQ1AJR33H	RES , FUSE	0.33 OHM 1W J	1	EA
Miscellaneous					$\vdash$
ooonanooao	1				+
BN22	CWB1C902280NN	WIRE , ASS'Y	WIRE	1	EΑ
BN95	CWB1C002350EN	WIRE ASS'Y	WIRE	1	EA
BN96	CWB1C908150BM	WIRE ASS'Y	WIRE	1	EA
CN13	CJP05GA01ZY	CON WAFER YMW025-05R	WAFER	1	EA
CN19	KJP03GA90ZM	WAFER	WAFER	1	EA
CN20	KJP04GA90ZM	WAFER	WAFER	1	EA
CN81	CJP08GA01ZY	WAFER, STRAIGHT, 8PIN	WAFER	1	EA

Ref. Designator	Part Number	Description		Qty	
DOWED TO AN	 S PCB (CUP11849-4,5)				
FOWER TRAIN	7 FCB (COF 11049-4,5)				
SW91	KST1A010Z	SW , TACT CN	SWITCH	1	EΑ
	CMY1A219	HEAT SINK (BRIDGE DIODE)	HEAT SINK	1	EΑ
	CTB3+12J	SCREW	SCREW	1	EΑ
	CMY1A219	HEAT SINK (BRIDGE DIODE)	HEAT SINK	1	EΑ
	CTB3+12J	SCREW	SCREW	1	EΑ
F903	KBA2C8000TLU	FUSE	8.0A 250V	1	EΑ
F904	KBA2C8000TLU	FUSE	8.0A 250V	1	EΑ
F905	KBA2C6300TLUZ	FUSE	6.3A 250V	1	EA
F906	KBA2C6300TLUZ	FUSE	6.3A 250V	1	EA
F907	KBA2C8000TLU	FUSE	8.0A 250V	1	EA
	KJCFC5S	HOLDER, FUSE	HOLDER for F903-906	2	EA
	KJCFC5S	HOLDER, FUSE	HOLDER for F903-906	2	EΑ
	KJCFC5S KJCFC5S	HOLDER , FUSE HOLDER , FUSE	HOLDER for F903-906	2	EA EA
	KJCFC5S	HOLDER, FUSE	HOLDER for F903-906 HOLDER for F907	2	EA
	NJUFUSS	HOLDER, FUSE	HOLDER IOI F907		EA
DIAS & DECIII	ATOR PCB (CUP11849	) C 0)			
DIAS & REGUL	HIUR FUD (UUF 11848	7-0,0)			
Capacitors	<del>                                     </del>				-
σαμαυποιδ	<del>                                     </del>				1
C851	CCEA1HH100T	CAP , ELECT	10UF 50V	1	EA
C852	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EA
C853	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EA
C855	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EA
C856	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EA
C857	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EΑ
C858	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EΑ
C929	CCEA1VH472F	CAP, ELECT	4700UF 35V	1	EΑ
C930	CCEA1VH222F	CAP, ELEC (ANGLE)	2200UF 35V	1	EΑ
C935	CCKT1H223ZF	CAP, CERAMIC	0.022UF 50V ZF	1	EΑ
C936	CCKT1H223ZF	CAP, CERAMIC	0.022UF 50V ZF	1	EA
C937	CCKT1H223ZF	CAP, CERAMIC	0.022UF 50V ZF	1	EΑ
C938	CCEA1EH101T	CAP, ELECT	100UF 25V	1	EΑ
C939	CCEA1EH101T	CAP , ELECT	100UF 25V	1	EA
C940	CCEA1EH101T	CAP, ELECT	100UF 25V	1	EA
C941	CCEA1CH682E	CAP, ELECT	6800UF , 16V	1	EA
C942	CCEA1HH3R3T	CAP, ELECT	3.3UF 50V	1	EA
0					
Semiconductors					
D904	K\/D1N4003ST	DIODE	1NA003	1	EA
D904 D905	KVD1N4003ST KVD1N4003ST	DIODE	1N4003 1N4003	1	EA
D905	KVD1N4003ST	DIODE	1N4003	1	EA
D900 D907	KVD1N4003ST	DIODE	1N4003	1	EA
D915	HVD1SS133MT	DIODE	1SS133T	1	EA
D916	HVD1SS133MT	DIODE	1SS133T	1	EA
D917	HVDSB2100	DIODE , SCHOTTKY	SB2100	1	EA
D918	HVDSB2100	DIODE , SCHOTTKY	SB2100	1	EA
IC91	HVIL7815CP	I.C, REGULATOR (L7815CP)	ST	1	EΑ
IC92	HVIL7915CP	I.C, REGULATOR (L7915CP)	ST	1	EΑ
IC93	HVIL7805CP	I.C, REGULATOR (L7805CP)	ST	1	EΑ
Q851	HVTKTD600KGR	TRANSISTOR, BIAS	KTD600KGR	1	EA
Q852	HVTKTD600KGR	TRANSISTOR, BIAS	KTD600KGR	1	EΑ
Q853	HVTKTD600KGR	TRANSISTOR, BIAS	KTD600KGR	1	EΑ
Q855	HVTKTD600KGR	TRANSISTOR, BIAS	KTD600KGR	1	EA
Q856	HVTKTD600KGR	TRANSISTOR, BIAS	KTD600KGR	1	EA
Q857	HVTKTD600KGR	TRANSISTOR, BIAS	KTD600KGR	1	EA
Q858	HVTKTD600KGR	TRANSISTOR, BIAS	KTD600KGR	1	EA
	<del> </del>				
	<del>                                     </del>				1
					1

Ref. Designator	Part Number	Description		Qty	
BIAS & REGUL	L ∟ATOR PCB (CUP118	49-6,8)			
Resistors					
Resisions					+-
R874	CRD20TJ331T	RES , CARBON	330 OHM 1/5W J	1	ΕA
R875	CRD20TJ331T	RES, CARBON	330 OHM 1/5W J	1	EA
R876	CRD20TJ331T	RES, CARBON	330 OHM 1/5W J	1	EA
R878	CRD20TJ331T	RES, CARBON	330 OHM 1/5W J	1	EA
R879	CRD20TJ331T	RES , CARBON	330 OHM 1/5W J	1	EA
R880	CRD20TJ331T	RES , CARBON	330 OHM 1/5W J	1	EΑ
R881 R882	CRD20TJ331T CRD20TJ122T	RES , CARBON RES , CARBON	330 OHM 1/5W J 1.2K OHM 1/5W J	1	EA EA
R883	CRD20TJ122T	RES, CARBON	1.2K OHM 1/5W J	1	EA
R884	CRD20TJ122T	RES , CARBON	1.2K OHM 1/5W J	1	EA
R886	CRD20TJ122T	RES , CARBON	1.2K OHM 1/5W J	1	EA
R887	CRD20TJ122T	RES , CARBON	1.2K OHM 1/5W J	1	EA
R888	CRD20TJ122T	RES, CARBON	1.2K OHM 1/5W J	1	EA
R889	CRD20TJ122T	RES, CARBON	1.2K OHM 1/5W J	1	EA
R912	CRD20TJ153T	RES, CARBON	15K OHM 1/5W J	1	EA
R913	CRD20TJ153T	RES, CARBON	15K OHM 1/5W J	1	EA
R914	CRD20TJ752T	RES , CARBON	7.5K OHM 1/5W J	1	EA
VR81	HVN1RA221B01T	RES , SEMI FIXED(220 OHM)	RH0615C100221	1	EA
VR82	HVN1RA221B01T	RES , SEMI FIXED(220 OHM)	RH0615C100221	1	EA
VR83	HVN1RA221B01T	RES , SEMI FIXED(220 OHM)	RH0615C100221	1	EA
VR85 VR86	HVN1RA221B01T HVN1RA221B01T	RES , SEMI FIXED(220 OHM) RES , SEMI FIXED(220 OHM)	RH0615C100221 RH0615C100221	1 1	EA EA
VR87	HVN1RA221B01T	RES , SEMI FIXED(220 OHM)	RH0615C100221	1	EA
VR88	HVN1RA221B01T	RES , SEMI FIXED(220 OHM)	RH0615C100221	1	EA
V100	TIVINITOREZIBOTI	INCO , OLIMIT INCO(220 OTTIM)	14100130100221	'	
Miscellaneous					
ONIO	0.100000.407\/	I WAFER ANOLE OPIN	WASED.		
CN31	CJP02GB46ZY	WAFER, ANGLE, 2PIN	WAFER	1	EA
CN32 CN33	CJP02GB46ZY CJP02GB46ZY	WAFER, ANGLE, 2PIN	WAFER	1 1	EA EA
CN35	CJP02GB46ZY	WAFER, ANGLE, 2PIN WAFER, ANGLE, 2PIN	WAFER WAFER	1	EA
CN36	CJP02GB46ZY	WAFER, ANGLE, 2PIN	WAFER	1	EA
CN37	CJP02GB46ZY	WAFER, ANGLE, 2PIN	WAFER	1	EA
CN38	CJP02GB46ZY	WAFER, ANGLE, 2PIN	WAFER	1	EA
CN96	CJP08GA01ZY	WAFER, STRAIGHT, 8PIN	WAFER	1	EA
CN98	HJP08GB131ZK	WAFER	WAFER	1	EA
BN97	CWB2B902200EN	WIRE ASS'Y	WIRE	1	EA
MIC & HP PCB	(CIID11840-0)				
100	(001 11043 3)				_
Capacitors					
0000	00544)#1105	LOAD SISSE	401/2 02/4		<del> </del>
C820	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C821	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EΑ
C822	CCEA1VH100T	CAP, ELECT	47UF 25V	1	EΑ
C823 C824	CCEA1VH100T HCBS1H471KBT	CAP, ELECT CAP, CERAMIC	10UF 35V 470PF 50V	1 1	EA EA
C825	HCBS1H151KBT	CAP, CERAMIC	150PF 50V K	1	EA
C826	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C827	HCBS1H223ZFT	CAP, CERAMIC	0.022UF 50V Z	1	EA
C828	HCBS1H470JT	CAP, CERAMIC	47PF 50V J	1	EA
C829	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C830	HCBS1H473ZFT	CAP, CERAMIC	0.047UF 50V Z	1	EA
C849	HCBS1H471KBT	CAP, CERAMIC	470PF 50V	1	EA
C850	HCBS1H471KBT	CAP, CERAMIC	470PF 50V	1	EA
C866	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C867	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C868	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EΑ
C869	CCEA1EH470T	CAP, ELECT	47UF 25V	1	EA

Ref. Designator	Part Number	Description		Qty	
	(0) (0) (0)				
MIC & HP PCB	(CUP11849-9)				
C870	HCBS1H681KBT	CAP, CERAMIC	680PF 50V	1	EA
C871	HCBS1H681KBT	CAP, CERAMIC	680PF 50V	1	EA
C872	CCEA1CH331T	CAP, ELECT	330UF 16V	1	EA
C873	CCEA1CH331T	CAP, ELECT	330UF 16V	<del>.</del>	EA
007.0	002/110110011	0/11 , LLL01	100	•	
Semiconductors					
IC86	HVINJM4556AL	I.C , HEADPHONE (NJM4556)	JRC	1	EΑ
IC87	HVINJM2068MDTE1	I.C, OP AMP (NJM2068M)	JRC	1	EA
IC88	HVIHCF4053M013T	I.C (HCF4053) TRIPLE 2 CHAN MULTPLX		1	EA
D801	HVDMTZJ5.6BT	DIODE , ZENER	5.6V 1/2W	1	EA
D802	HVDMTZJ5.6BT	DIODE , ZENER	5.6V 1/2W	1	EA
D803	HVD1SS133MT	DIODE	1SS133T	1	EA
Q734	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EA
Q735	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EA
Q736	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EA
Q737	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	11	EΑ
Q738	HVTKRC107MT	TRANSISTOR	KRC107M KRA107M	11	EΑ
Q739	HVTKRA107MT	TRANSISTOR		11	EΑ
Q740	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Resistors					
Resisions					
R895	CRD20TJ101T	RES , CARBON	100 OHM 1/5W J	1	EA
R896	CRD20TJ101T	RES , CARBON	100 OHM 1/5W J	1	EA
R897	CRD20TJ101T	RES , CARBON	100 OHM 1/5W J	<del>_</del>	EA
R898	CRD20TJ101T	RES , CARBON	100 OHM 1/5W J	<del>:</del>	EA
R899	CRD20TJ104T	RES, CARBON	100K OHM 1/5W J	1	EA
R900	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R901	CRD20TJ152T	RES, CARBON	1.5K OHM 1/5W J	1	EΑ
R902	CRD20TJ152T	RES, CARBON	1.5K OHM 1/5W J	1	EΑ
R903	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EΑ
R904	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EA
R905	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R906	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R907	CRD20TJ562T	RES , CARBON	5.6K OHM 1/5W J	1	EA
R908	CRD20TJ562T	RES, CARBON	5.6K OHM 1/5W J	1	EA
R909	CRD20TJ221T	RES, CARBON	220 OHM 1/5W J	1	EA
R910	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	1	EA
R911	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	11	EA
R915 R918	CRD20TJ221T CRD20TJ562T	RES , CARBON RES , CARBON	220 OHM 1/5W J 5.6K OHM 1/5W J	<u>1</u> 1	EA EA
R918	CRD20TJ562T	RES , CARBON	5.6K OHM 1/5W J	1	EA
R920	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EA
R921	CRD20TJ102T	RES, CARBON	10K OHM 1/5W J	1	EA
R922	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EA
R923	CRD20TJ101T	RES , CARBON	100 OHM 1/5W J	<del>:</del>	EA
R924	CRD20TJ101T	RES , CARBON	100 OHM 1/5W J	1	EA
R925	CRD20TJ680T	RES , CARBON	68 OHM 1/5W J	1	EA
R926	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R927	CRD20TJ102T	RES , CARBON	1K OHM 1/5W J	1	EΑ
R928	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EΑ
R929	CRD20TJ562T	RES, CARBON	5.6K OHM 1/5W J	1	EΑ
R930	CRD20TJ103T	RES, CARBON	10K OHM 1/5W J	1	EA
R931	CRD20TJ104T	RES, CARBON	100K OHM 1/5W J	1	EA
R932	CRD20TJ104T	RES, CARBON	100K OHM 1/5W J	1	EA
R933	CRD20TJ103T	RES, CARBON	10K OHM 1/5W J	1	EA
R934	CRD20TJ222T	RES, CARBON	2.2K OHM 1/5W J	1	EA
R935	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R936	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EA
R937	CRD20TJ104T	RES, CARBON	100K OHM 1/5W J	1	EA

Ref. Designator	Part Number	Description		Qty	
MIC & HP PCF	 				
11110 0 111 1 01					
R957	CRD20TJ101T	RES, CARBON	100 OHM 1/5W J	1	EA
R958	CRD20TJ471T	RES , CARBON	470 OHM 1/5W J	1	EA
Miscellaneous					+-
Miscellarieous					+
RL81	HSL4A011ZE	RELAY	OMI-SS-212L	1	EA
BN16	CWZAVR140BN16	WIRE ASS'Y (SHIELD)	WIRE	1	EA
BN19	CWZAVR335BN19	WIRE ASS'Y	WIRE	1	EA
BN44	CWB2B906350EN	WIRE ASS'Y	WIRE	1	EA
CN15	CJP10GA19ZY	WAFER, STRAIGHT, 10PIN	WAFER	1	EA
CN82 CN85	KJP06HA37ZM	WAFER STRAIGHT ARIN	WAFER	1	EA EA
CN92	CJP03GA19ZY CJP05GA19ZY	WAFER, STRAIGHT, 3PIN WAFER, STRAIGHT, 5PIN	WAFER WAFER	1	EA
CN9Z	CJF03GAT9ZT	WAFER, STRAIGHT, SPIN	WAFER	<u> </u>	LA
24V REGULAT	TOR PCB (CUP11849-	11)			
C950	CCEA1VH101T	CAP, ELECT	100UF 50V	1	EA
C952	CCKT1H223ZF	CAP, CERAMIC	0.022UF 50V ZF	1	EA
C954	CCEA1VH101T	CAP, ELECT	100UF 50V	1	EA
CN90	CJP02GA19ZY	WAFER, 2PIN	WAFER	1	EA
CN95 CN97	CJP02GA19ZY CJP03GA01ZY	WAFER, 2PIN	WAFER WAFER	1	EΑ
D955	KVD1N4003ST	WAFER DIODE	1N4003	1	EA EA
D956	KVD1N4003ST	DIODE	1N4003	1	EA
IC94	HVINJM7824FA	I.C , REGULATOR(+24V) (NJM7824FA)	JRC	1	EA
R103	CRQ12AJ100T	RES,FUSEBLE 10 OHM (1/2W)	10 OHM 1/2W	1	EA
100	ONQ12A01001	INCO,1 GOLDEL 10 OTHVI (1/244)	10 OF IIVE 1/2VV	1	
REMOTE IN/O	UT PCB (CUP11849-1	2)			
C953	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
CN87	CJP02GA19ZY	WAFER, 2PIN	WAFER	1	EA
CN88	CJP04GA19ZY	WAFER, STRAIGHT, 4PIN	WAFER	1	EA
D952	HVD1SS133MT	DIODE	1SS133T	1	EA
D953	HVD1SS133MT	DIODE	1SS133T	1	EA
D954 IC95	HVD1SS133MT	DIODE	1SS133T	1	EΑ
	BVIKP1010B	IC, PHOTO COUPLER (KP1010)	COSMO		EΑ
JK94	BVIKP1010B CJJ2D008Z	JACK , STEREO	JACK	1	EA EA
JK95	CJJ2D008Z	JACK, STEREO	JACK	1	EA
JK96	CJJ2D008Z	JACK, STEREO	JACK	1	EA
Q995	HVTKRA107MT	TRANSISTOR	KRA107M	1	EA
Q996	HVTKRC104MT	TRANSISTOR	KRC104M	1	EA
R948	CRD20TJ271T	RES, CARBON	270 OHM 1/5W J	1	EA
R951	CRD20TJ103T	RES, CARBON	10K OHM 1/5W J	1	EA
R952	CRD20TJ103T	RES, CARBON	10K OHM 1/5W J	1	EA
R953	CRD20TJ473T	RES, CARBON	47K OHM 1/5W J	1	EA
R954	CRD20TJ470T	RES, CARBON	47 OHM 1/5W J	1	EA
R955	CRD20TJ271T	RES, CARBON	270 OHM 1/5W J	1	EA
R956	CRD20TJ473T	RES , CARBON	47K OHM 1/5W J	1	EA
					+
IPOD PCB (CU	JP11834Y)				
Capacitors					+
C400	HCUS1H104ZF	CAP, CHIP	0.1UF	1	EA
C400 C401	HCUS1H104ZF	CAP , CHIP	0.1UF	1	EA
C401 C402	HCUS1H471JA	CAP, CHIP	470PF	1	EA
C402	HCUS1H471JA	CAP, CHIP	470PF	1	EA
C408	HCEC1CRV2100T	CAP, ELEC (SMD)	10UF / 16V	1	EA
C409	HCEC1CRV2100T	CAP, ELEC (SMD)	10UF / 16V	1	EA
		· · · · · · · · · · · · · · · · · · ·			

Ref. Designator	Part Number	Description		Qty	
IPOD PCB (CU	 				
1F00 FCB (C0)					
C410	HCEC1HRV21R0T	CAP , ELEC (SMD)	1UF/50	1	EA
C411	HCEC1HRV21R0T	CAP, ELEC (SMD)	1UF/50	1	EA
C416	HCUS1H473ZF	CAP, CHIP	0.047UF	1	EA
C421	HCUS1H471JA	CAP, CHIP	470PF	1	EA
C422	HCUS1H471JA	CAP, CHIP	470PF	1	EΑ
C423	HCUS1H223KC	CAP, CHIP	2200PF	1	EA
C424	HCUS1H223KC	CAP, CHIP	2200PF	1	EA
C417	CCEA1CH471T	CAP, ELECT	470UF 16V	1	EA
Semiconductors					
D. 100	L III / D / O O O O O O O	7,075,0117	1,000==		
D400	HVD1SS355T	DIODE , CHIP	1SS355	1	EA
D401	HVD1SS355T	DIODE , CHIP	1SS355	1	EA
IC41	HVITC9215AF	I.C (TC9215AF) HI V ANALOG SWITCH	TOSHIBA	1	EA
Q400	HVTKRC102S	TRANSISTOR, CHIP	KRC102S	1	EA
Q401	HVTKRC102S	TRANSISTOR, CHIP	KRC102S	1	EA
Q402	HVTKRC102S	TRANSISTOR, CHIP	KRC102S	1	EA
D402	KVD1N4003ST	DIODE	1N4003	1	EA
Resistors					+
R400	CRJ10DJ4R7T	RES , CHIP	4.7 OHM	1	EA
R401	CRJ10DJ4R7T	RES , CHIP	4.7 OHM	1	EΑ
R402	CRJ10DF5493T	RES , CHIP 549KOHM/1608/1%	49K OHM/1608/1%	1	EΑ
R403	CRJ10DJ0R0T	RES , CHIP	0 OHM	1	EΑ
R404	CRJ10DJ470T	RES, CHIP	47 OHM	1	EA
R405	CRJ10DJ470T	RES, CHIP	47 OHM	1	EA
R406	CRJ10DJ474T	RES, CHIP	470K OHM	1	EΑ
R407	CRJ10DJ474T	RES, CHIP	470K OHM	1	EA
R412	CRJ10DJ471T	RES, CHIP	470 OHM	1	EA
R413	CRJ10DJ471T	RES, CHIP	470 OHM	1	EA
R419	CRJ10DJ332T	RES, CHIP	3.3K OHM	1	EA
R420	CRJ10DJ332T	RES, CHIP	3.3K OHM	1	EA
R421	CRJ10DJ223T	RES, CHIP	22K OHM 1/5W J	1	EA
R422	CRJ10DJ224T	RES , CHIP	220K OHM	1	EA
Miscellaneous					
R416	CLZ9Z068Z	COIL,CHOKE	CHOKE COIL	1	EA
CN42	CJP05GB46ZY	WAFER	WAFER	1	EA
CN43	CJP03GB46ZY	WAFER , ANGLE , 3PIN	WAFER	1	EA
CN44	CJP06GB46ZY	WAFER, ANGLE, 6PIN	WAFER	1	EA
ET01	CMD1A570	BRACKET, PCB	BRACKET	1	EΑ
2101	CHG1A306	CUSHION	CUSHION	1	EΑ
JK40	HJJ9L003Z	JACK , IPOD	IPOD JACK	1	EA
MAIN PCB (CU	D11570W\				
WAIN FOR (CO	1 137344)				
Capacitors					
C501	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C502	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C503	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C504	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C505	CCEA1VH100T	CAP, ELECT	10UF 35V	1	EA
C506	CCKT1H331KB	CAP, CERAMIC	330PF 50V KB	1	EA
C507	CCKT1H331KB	CAP, CERAMIC	330PF 50V KB	1	EA
C508	CCKT1H331KB	CAP, CERAMIC	330PF 50V KB	1	EA
C509	CCKT1H331KB	CAP, CERAMIC	330PF 50V KB	1	EΑ
C510	CCKT1H331KB	CAP, CERAMIC	330PF 50V KB	1	EΑ

Ref. Designator	Part Number	Description		Qty	
MAIN PCB (CU	  P11579W\				
MAIN I OD (OC	1137311)				
C561	CCEA1CH101T	CAP, ELECT	100UF 16V	1	ΕA
C562	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C564	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C566	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C567	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C568	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C569	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C570	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C571	HCBS1H681KBT	CAP, CERAMIC	680PF 50V	1	EA
C572	HCBS1H681KBT	CAP, CERAMIC	680PF 50V	1	EA
C573	HCBS1H681KBT	CAP, CERAMIC	680PF 50V	1	EA EA
C574 C575	HCBS1H681KBT HCBS1H681KBT	CAP , CERAMIC CAP , CERAMIC	680PF 50V 680PF 50V	1	EA
C601	CCCT1H120JC	CAP, CERAMIC	12PF 50V JC	1	EA
C602	CCCT1H120JC	CAP , CERAMIC	12PF 50V JC	1	EA
C603	CCCT1H120JC	CAP , CERAMIC	12PF 50V JC	1	EA
C604	CCCT1H120JC	CAP, CERAMIC	12PF 50V JC	1	EA
C605	CCCT1H120JC	CAP, CERAMIC	12PF 50V JC	1	EA
C606	CCCT1H330JC	CAP , CERAMIC	33PF 50V JC	1	EA
C607	CCCT1H330JC	CAP, CERAMIC	33PF 50V JC	1	EA
C608	CCCT1H330JC	CAP, CERAMIC	33PF 50V JC	1	EA
C609	CCCT1H330JC	CAP, CERAMIC	33PF 50V JC	1	EA
C610	CCCT1H330JC	CAP, CERAMIC	33PF 50V JC	1	EA
C681	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EA
C682	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EA
C683	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EA
C684	CCEA1HH100T	CAP , ELECT	10UF 50V	1	EA
C685	CCEA1HH100T	CAP , ELECT	10UF 50V	1	EA
C721	CCKT1H221KB	CAP, CERAMIC	220PF 50V KB	1	EA
C722	CCKT1H221KB	CAP, CERAMIC	220PF 50V KB	1	EA
C723	CCKT1H221KB	CAP, CERAMIC	220PF 50V KB	1	EA
C724	CCKT1H221KB	CAP, CERAMIC	220PF 50V KB	1	EA
C725	CCKT1H221KB	CAP, CERAMIC	220PF 50V KB	1	EA
C726 C727	CCKT1H221KB CCKT1H221KB	CAP , CERAMIC CAP , CERAMIC	220PF 50V KB 220PF 50V KB	1	EA EA
C728	CCKT1H221KB	CAP, CERAMIC	220PF 50V KB	1	EA
C801	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EA
C802	CCEA1HH100T	CAP, ELECT	10UF 50V	1	EA
C803	CCCT1H330JC	CAP, CERAMIC	33PF 50V JC	1	EA
C804	CCCT1H330JC	CAP , CERAMIC	33PF 50V JC	1	EA
C805	CCCT1H120JC	CAP , CERAMIC	12PF 50V JC	1	EA
C806	CCCT1H120JC	CAP, CERAMIC	12PF 50V JC	1	EΑ
C811	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C812	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C813	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C814	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C815	CCKT1H331KB	CAP, CERAMIC	330PF 50V KB	1	EA
C816	CCKT1H331KB	CAP, CERAMIC	330PF 50V KB	1	EA
C817	CCEA1VH100T	CAP , ELECT	10UF 35V	1	EA
C818	CCEA1VKS100T	CAP, ELECT	10UF 35V	1	EA
C819	HCBS1H681KBT	CAP, CERAMIC	680PF 50V	1	EA
C820	HCBS1H681KBT	CAP, CERAMIC	680PF 50V	1	EA
C900	HCQI1H473JZT	CAP, MYLAR	0.047UF 50V J	1	EA
C901	HCQI1H473JZT	CAP, MYLAR	0.047UF 50V J	1	EA
C905	CCKT1H223ZF	CAP, CERAMIC	0.022UF 50V ZF	1	EA
C907	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EΑ
C908	CCKT1H223ZF	CAP, CERAMIC	0.022UF 50V ZF	1	EΑ
C910	HCQI1H473JZT	CAP FLECT	0.047UF 50V J	1	EΑ
C911 C912	CCEA1CH471T CCEA1EH221T	CAP ELECT	470UF 16V 220UF 25V	1	EA EA
	CCFT1H104ZF	CAP SEMICONDUCTOR	0.1UF 50V ZF	1	_
C913	JOOF I ITH 104ZF	CAP , SEMICONDUCTOR	U. TUF 50V ZF	1 1	EA

Ref. Designator	Part Number	Description		Qty	
MAIN PCB (CU	<u> </u> P11579W)				
Ì					
C914	HCQI1H473JZT	CAP , MYLAR	0.047UF 50V J	1	EA
C917	HCQI1H473JZT	CAP , MYLAR	0.047UF 50V J	1	EA
C918	HCQI1H473JZT	CAP , MYLAR	0.047UF 50V J	1	EA
C919	HCQI1H473JZT	CAP, MYLAR	0.047UF 50V J	1	EA
C924	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
C925	HCBS1H104ZFT	CAP, CERAMIC	0.1UF 50V Z	1	EA
C932	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C933 C934	CCEA1EH221T CCKT1H223ZF	CAP, CEPAMIC	220UF 25V	1	EA
		CAP, CERAMIC	0.022UF 50V ZF	1	EΑ
C939 C940	CCEA1HH4R7T	CAP, ELECT	4.7UF 50V 470UF 10V	1 1	EA EA
C940 C950	CCEA1AH471T CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C950 C971	HCQI1H562JZT	CAP, ELECT	5600PF 50V J	1	EA
C971	HCQI1H562JZT	CAP, MYLAR	5600PF 50V J	1	EA
C972	HCQI1H562JZT	CAP, MYLAR	5600PF 50V J	1	EA
C974	HCQI1H562JZT	CAP , MYLAR	5600PF 50V J	1	EA
C974	HCQI1H562JZT	CAP, MYLAR	5600PF 50V J	1	EA
C980	HCQI1H562JZT	CAP, MYLAR	5600PF 50V J	1	EA
C981	HCQI1H562JZT	CAP, MYLAR	5600PF 50V J	1	EA
C990	HCQI1H473JZT	CAP, MYLAR	0.047UF 50V J	1	EA
C991	CCEA1HH1R0T	CAP, ELECT	1UF 50V	1	EA
C992	HCQI1H473JZT	CAP, MYLAR	0.047UF 50V J	1	EA
C993	HCQI1H473JZT	CAP, MYLAR	0.047UF 50V J	1	EA
C994	HCQI1H473JZT	CAP , MYLAR	0.047UF 50V J	1	EA
C995	HCQI1H473JZT	CAP , MYLAR	0.047UF 50V J	1	EA
C996	HCQI1H473JZT	CAP , MYLAR	0.047UF 50V J	1	EΑ
C997	HCQI1H473JZT	CAP , MYLAR	0.047UF 50V J	1	EΑ
C999	CCKT1H223ZF	CAP, CERAMIC	0.022UF 50V ZF	1	EΑ
C563	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C565	CCEA1CH101T	CAP, ELECT	100UF 16V	1	EA
C631	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C632	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C633	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C634	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C635	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C636	CCEA1JH221E	CAP , ELECT	220UF 63V	1	EA
C637	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C638	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C639	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C640	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C807	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C808	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C809	CCEA1JH221E	CAP, ELECT	220UF 63V	1	EA
C810	CCEA1JH221E	CAP, ELECT	220UF 63V 8200/63V (30*50	1	EA
C902	CCET63VKL5822NK	CAP, ELECT CAP, CERAMIC(X1/Y2/SC)		1 1	EA
C904 C906	KCKDKS472ME CCEA1EH102E	CAP, CERAMIC(X1/12/3C)	0.0047UF/2.5KV 1000UF 25V	1	EA
C908	CCET63VKL5822NK	CAP, ELECT	8200/63V (30*50	1	EA
C909	CCET63VKL5123NK	CAP, ELECT	12000/63V (30°5	1	EA
C916	CCET63VKL5123NK	CAP, ELECT	12000/63V (30°5	1	EA
0010	COLTOSVILLOTZONIC	Orti , EEEOT	12000/03 (30 3	'	
Semiconductors	1	<del> </del>			
					1
D501	HVD1SS133MT	DIODE	1SS133T	1	EΑ
D502	HVD1SS133MT	DIODE	1SS133T	1	EA
D503	HVD1SS133MT	DIODE	1SS133T	1	EA
D504	HVD1SS133MT	DIODE	1SS133T	1	EA
D505	HVD1SS133MT	DIODE	1SS133T	1	EΑ
D581	HVD1SS133MT	DIODE	1SS133T	1	EA
D582	HVD1SS133MT	DIODE	1SS133T	1	EA
D583	HVD1SS133MT	DIODE	1SS133T	1	EA

Ref. Designator	Part Number	Description		Qty	
MAIN PCB (CU	  D11570\\/\				
WAIN PCB (CU	F113/9W)				
D584	HVD1SS133MT	DIODE	1SS133T	1	EA
D585	HVD1SS133MT	DIODE	1SS133T	1	EΑ
D601	HVD1SS133MT	DIODE	1SS133T	1	EA
D801	HVD1SS133MT	DIODE	1SS133T	1	EA
D802	HVD1SS133MT	DIODE	1SS133T	1	EA
D803	HVD1SS133MT	DIODE	1SS133T	1	EA
D804	HVD1SS133MT	DIODE	1SS133T	1	EA
D901	KVD1N4003ST	DIODE	1N4003	1	EA
D902	HVD1SS133MT	DIODE	1SS133T	1	EA
D911	HVD1SS133MT	DIODE	1SS133T	1	EA
D912 D914	HVD1SS133MT	DIODE	1SS133T	1	EA EA
D914 D917	HVD1SS133MT HVD1SS133MT	DIODE	1SS133T 1SS133T	1	EA
D917	HVD1SS133MT	DIODE	1SS133T	1	EA
D954	KVD1N4003SRT	DIODE TW	1N4003	1	EA
D955	KVD1N4003SRT	DIODE TW	1N4003	1	EA
D961	KVD1N4003ST	DIODE	1N4003	1	EA
D962	KVD1N4003ST	DIODE	1N4003	1	EΑ
D963	KVD1N4003ST	DIODE	1N4003	1	EA
D964	HVD1SS133MT	DIODE	1SS133T	1	EA
D967	HVD1SS133MT	DIODE	1SS133T	1	EA
D968	HVD1SS133MT	DIODE	1SS133T	1	EA
D969	HVD1SS133MT	DIODE	1SS133T	1	EA
D971	HVD1SS133MT	DIODE	1SS133T	1	EA
D972	HVD1SS133MT	DIODE	1SS133T	1	EA
D973	HVD1SS133MT	DIODE	1SS133T	1	EA
D974	HVD1SS133MT	DIODE	1SS133T	1	EA
D975	HVD1SS133MT	DIODE	1SS133T	1	EΑ
D976 Q501	HVD1SS133MT HVTKTA1268GRT	DIODE TRANSISTOR	1SS133T KTA1268GR	1	EA EA
Q502	HVTKTA1268GRT	TRANSISTOR	KTA1268GR	1	EA
Q503	HVTKTA1268GRT	TRANSISTOR	KTA1268GR	1	EA
Q504	HVTKTA1268GRT	TRANSISTOR	KTA1268GR	1	EA
Q505	HVTKTA1268GRT	TRANSISTOR	KTA1268GR	1	EA
Q511	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q512	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q513	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q514	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q515	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q516	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q517	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q518	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q519	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EΑ
Q520 Q541	HVTKTC3200GRT HVTKTC3198YT	TRANSISTOR TRANSISTOR	KTC3200GR KTC3198Y	1	EA EA
Q541 Q542	HVTKTC3198YT	TRANSISTOR	KTC3198Y	1	EA
Q543	HVTKTC3198YT	TRANSISTOR	KTC3198Y	1	EA
Q544	HVTKTC3198YT	TRANSISTOR	KTC3198Y	1	EA
Q545	HVTKTC3198YT	TRANSISTOR	KTC3198Y	1	EA
Q556	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EΑ
Q557	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q558	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q559	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q560	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q561	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q562	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q563	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q564	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q565	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EΑ
Q601 Q602	HVTKTA1268GRT HVTKTA1268GRT	TRANSISTOR TRANSISTOR	KTA1268GR KTA1268GR	1	EA EA
Q602	IIV INTAIZOOGKI	TRANSISTOR	INTATZUOUK		ĽΑ

Ref. Designator	Part Number	Description		Qty	
MAIN PCB (CU	L P11579W)				
Q603	HVTKTA1268GRT	TRANSISTOR	KTA1268GR	1	EΑ
Q604	HVTKTA1268GRT	TRANSISTOR	KTA1268GR	1	EΑ
Q605	HVTKTA1268GRT	TRANSISTOR	KTA1268GR	1	EA
Q681	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EA
Q682	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EA
Q683	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EA EA
Q684 Q685	KVTKSC2785YT KVTKSC2785YT	TRANSISTOR TRANSISTOR	KSC2785Y KSC2785Y	1	EA
Q701	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EA
Q702	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EA
Q703	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EΑ
Q704	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EΑ
Q705	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EΑ
Q706	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EA
Q707	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EΑ
Q708	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EA
Q801	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EA
Q802	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EΑ
Q812 Q813	HVTKTA1268GRT HVTKTC3200GRT	TRANSISTOR TRANSISTOR	KTA1268GR KTC3200GR	1	EA EA
Q814	HVTKTC3200GRT	TRANSISTOR	KTA1268GR	1	EA
Q815	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q816	HVTKTC3260GRT	TRANSISTOR	KTA1268GR	1	EA
Q817	HVTKTA1268GRT	TRANSISTOR	KTA1268GR	1	EA
Q818	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q819	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EΑ
Q820	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EΑ
Q821	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EΑ
Q822	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q823	HVTKTC3200GRT	TRANSISTOR	KTC3200GR	1	EA
Q824	HVTKTC3198YT	TRANSISTOR	KTC3198Y	1	EA
Q825	HVTKTC3198YT	TRANSISTOR	KTC3198Y	1	EA
Q826	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EΑ
Q827 Q901	HVTKTC2874BT KVTKSC2785YT	TRANSISTOR , MUTE TRANSISTOR	KTC2874B KSC2785Y	1	EA EA
Q902	HVTKRA107MT	TRANSISTOR	KRA107M	1	EA
Q903	HVTKRA107MT	TRANSISTOR	KRA107M	1	EA
Q904	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q911	HVTKTA1271YT	TRANSISTOR	KTA1271Y	1	EA
Q912	HVTKTA1271YT	TRANSISTOR	KTA1271Y	1	EΑ
Q913	HVTKTA1271YT	TRANSISTOR	KTA1271Y	1	EΑ
Q914	HVTKTA1271YT	TRANSISTOR	KTA1271Y	1	EA
Q915	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EA
Q916	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EA
Q917	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EA
Q918 Q938	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EA EA
Q939	HVTKRA107MT HVTKRA107MT	TRANSISTOR TRANSISTOR	KRA107M KRA107M	1	EA
Q942	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EA
Q943	KVTKSC2785YT	TRANSISTOR	KSC2785Y	1	EA
Q951	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q952	HVTKRA107MT	TRANSISTOR	KRA107M	1	EA
Q960	HVTKRC107MT	TRANSISTOR	KRC107M	1	EA
Q961	HVTKTA1024YT	TRANSISTOR	KTA1024Y	1	EΑ
Q969	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EA
Q970	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EA
Q971	HVTKTC2874BT	TRANSISTOR , MUTE	KTC2874B	1	EA
Q972	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EA
Q973	HVTKTC2874BT	TRANSISTOR, MUTE	KTC2874B	1	EΑ
Q991	HVTKRC107MT	TRANSISTOR	KRC107M	1	EΑ
Q992	HVTKRA107MT	TRANSISTOR	KRA107M	J I	EA

Ref. Designato	or Part Number	Description		Qty	
MAIN PCB (	 CUP11579W)				
MAINT OB (					
Q993	HVTKRA107MT	TRANSISTOR	KRA107M	1	EΑ
Q994	HVTKRC107MT	TRANSISTOR	KRC107M	1	EΑ
Q652	HVT2SB1647-OKM	TRANSISTOR, POWER	2SB1647	1	EΑ
Q653	HVT2SB1647-OKM	TRANSISTOR, POWER	2SB1647	1	EA
Q654	HVT2SB1647-OKM	TRANSISTOR, POWER	2SB1647	1	EA
Q655	HVT2SB1647-OKM	TRANSISTOR, POWER	2SB1647	1	EA
Q657	HVT2SD2560-OKM	TRANSISTOR, POWER	2SD2560	1	EA
Q658	HVT2SD2560-OKM	TRANSISTOR, POWER	2SD2560	1	EA
Q659	HVT2SD2560-OKM	TRANSISTOR, POWER	2SD2560	1	EA
Q660	HVT2SD2560-OKM	TRANSISTOR, POWER	2SD2560	1	EA
Q661	HVT2SB1647-OKM	TRANSISTOR, POWER	2SB1647	1	EA
Q670	HVT2SD2560-OKM	TRANSISTOR, POWER	2SD2560	1	EA
Q803	HVT2SD2560-OKM	TRANSISTOR, POWER	2SD2560	1	EA
Q804	HVT2SB1647-OKM	TRANSISTOR, POWER	2SB1647	1	EA
Q805	HVT2SD2560-OKM	TRANSISTOR, POWER	2SD2560	1	EA
Q807	HVT2SB1647-OKM	TRANSISTOR, POWER	2SB1647	1	EA
Q858	HVT2SA1360O	TRANSISTOR	2SA1360O	1	EA
Q871	HVT2SA1360O	TRANSISTOR	2SA1360O	1	EΑ
Q872	HVT2SA13600	TRANSISTOR	2SA1360O	1	EΑ
Q874	HVT2SA1360O	TRANSISTOR	2SA1360O	1	EA
Q875	HVT2SA1360O	TRANSISTOR	2SA1360O	1	EA
Q876	HVT2SA1360O	TRANSISTOR	2SA1360O	1	EA
Q877	HVT2SA1360O	TRANSISTOR	2SA1360O	1	EΑ
Q881	HVT2SC3423O	TRANSISTOR	2SC3423O	1	EΑ
Q882	HVT2SC3423O	TRANSISTOR	2SC3423O	1 1	EΑ
Q883 Q884	HVT2SC34230 HVT2SC34230	TRANSISTOR TRANSISTOR	2SC3423O 2SC3423O	1	EA EA
Q885	HVT2SC34230	TRANSISTOR	2SC3423O 2SC3423O	1	EA
Q886	HVT2SC34230	TRANSISTOR	2SC3423O 2SC3423O	1	EA
Q887	HVT2SC34230	TRANSISTOR	2SC3423O	1	EA
IC94	HVIMC7805C	I.C, REGULATOR (MC7805)	KA7805-ABTU	1	EA
Resistors					
R501	CRD20TJ433T	RES , CARBON	43K OHM 1/5W J	1	EA
R502	CRD20TJ433T	RES , CARBON	43K OHM 1/5W J	1	EA
R503	CRD20TJ433T	RES , CARBON	43K OHM 1/5W J	1	EA
R504	CRD20TJ433T	RES , CARBON	43K OHM 1/5W J	1	EA
R505	CRD20TJ433T	RES , CARBON	43K OHM 1/5W J	1	EA
R506	CRD20TJ333T	RES , CARBON	33K OHM 1/5W J	1	EA
R507	CRD20TJ333T	RES , CARBON	33K OHM 1/5W J	1	EA
R508	CRD20TJ333T	RES , CARBON	33K OHM 1/5W J	1	EA
R509	CRD20TJ333T	RES , CARBON	33K OHM 1/5W J	1	EA
R510	CRD20TJ333T	RES , CARBON	33K OHM 1/5W J	1	EΑ
R511	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EΑ
R512	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EΑ
R513	CRD20TJ152T	RES, CARBON	1.5K OHM 1/5W J	1	EΑ
R514	CRD20TJ152T	RES, CARBON	1.5K OHM 1/5W J	1	EΑ
R515	CRD20TJ152T	RES, CARBON	1.5K OHM 1/5W J	1	EΑ
R516	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EΑ
R517	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EΑ
R518	CRD20TJ152T	RES, CARBON	1.5K OHM 1/5W J	1	EΑ
R519	CRD20TJ152T	RES, CARBON	1.5K OHM 1/5W J	1	EΑ
R520	CRD20TJ152T	RES, CARBON	1.5K OHM 1/5W J	1	EA
R521	CRD20TJ471T	RES, CARBON	470 OHM 1/5W J	1	EA
R522	CRD20TJ471T	RES, CARBON	470 OHM 1/5W J	1	EA
R523	CRD20TJ471T	RES, CARBON	470 OHM 1/5W J	1	EA
R524	CRD20TJ471T	RES, CARBON	470 OHM 1/5W J	1	EA
R525	CRD20TJ471T	RES, CARBON	470 OHM 1/5W J	1	EA
R531	CRD20TJ221T	RES, CARBON	220 OHM 1/5W J	1	EA
R532	CRD20TJ221T	RES, CARBON	220 OHM 1/5W J	1	EA

Ref. Designator	Part Number	Description		Qty	
MAIN PCB (CU	L P11579W)				
,					
R533	CRD20TJ221T	RES, CARBON	220 OHM 1/5W J	1	EA
R534	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	1	EA
R535	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	1	EΑ
R536	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	1	EA
R537 R538	CRD20TJ221T CRD20TJ221T	RES , CARBON RES , CARBON	220 OHM 1/5W J 220 OHM 1/5W J	1	EA EA
R539	CRD20TJ22TT	RES, CARBON	220 OHM 1/5W J	1	EA
R540	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	1	EA
R541	CRD20TJ271T	RES , CARBON	270 OHM 1/5W J	1	EA
R542	CRD20TJ271T	RES , CARBON	270 OHM 1/5W J	1	EA
R543	CRD20TJ271T	RES , CARBON	270 OHM 1/5W J	1	EA
R544	CRD20TJ271T	RES , CARBON	270 OHM 1/5W J	1	EA
R545	CRD20TJ271T	RES, CARBON	270 OHM 1/5W J	1	EA
R556	CRD20TJ273T	RES, CARBON	27K OHM 1/5W J	1	EA
R557	CRD20TJ273T	RES, CARBON	27K OHM 1/5W J	1	EA
R558	CRD20TJ273T	RES, CARBON	27K OHM 1/5W J	1	EA
R559	CRD20TJ273T	RES, CARBON	27K OHM 1/5W J	1	EΑ
R560	CRD20TJ273T	RES, CARBON	27K OHM 1/5W J	1	EA
R561	CRD20TJ162T	RES , CARBON	1.6K OHM 1/5W J	1	EA
R562	CRD20TJ162T	RES, CARBON	1.6K OHM 1/5W J	1	EA
R564	CRD20TJ162T	RES, CARBON	1.6K OHM 1/5W J	1	EA
R566	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R567	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EΑ
R568 R569	CRD20TJ561T CRD20TJ561T	RES , CARBON RES , CARBON	560 OHM 1/5W J 560 OHM 1/5W J	1	EA EA
R570	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R571	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R572	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R573	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R574	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R575	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R576	CRD20TJ100T	RES, CARBON	10 OHM 1/5W J	1	EA
R577	CRD20TJ100T	RES , CARBON	10 OHM 1/5W J	1	EA
R578	CRD20TJ100T	RES, CARBON	10 OHM 1/5W J	1	EA
R579	CRD20TJ100T	RES, CARBON	10 OHM 1/5W J	1	EA
R580	CRD20TJ100T	RES , CARBON	10 OHM 1/5W J	1	EA
R581	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R582	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R583	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R584	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R585	CRD20TJ561T CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA EA
R586 R587	CRD20TJ561T	RES , CARBON RES , CARBON	560 OHM 1/5W J 560 OHM 1/5W J	1 1	EA
R588	CRD20TJ561T	RES . CARBON	560 OHM 1/5W J	1	EA
R589	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R590	CRD20TJ561T	RES . CARBON	560 OHM 1/5W J	1	EA
R591	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R592	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R593	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R594	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EΑ
R595	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R596	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R597	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R598	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R599	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R600	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R601	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EΑ
R602	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EΑ
R603	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EΑ
R604	CRD20TJ223T	RES, CARBON	22K OHM 1/5W J	1	EΑ
R605	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EA

Ref. Designat	or Part Number	Description		Qty	
MAIN PCB (	CUP11579W)				
R606	CRD20TJ223T	RES, CARBON	22K OHM 1/5W J	1	EA
R607	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EA
R608	CRD20TJ223T	RES, CARBON	22K OHM 1/5W J	1	EA
R609	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EA
R610	CRD20TJ223T	RES, CARBON	22K OHM 1/5W J	1	EA
R611	CRD20TJ100T	RES, CARBON	10 OHM 1/5W J	1	EA
R612	CRD20TJ100T	RES , CARBON	10 OHM 1/5W J	1	EA
R631	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EA
R632	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EA
R633	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EΑ
R634	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EΑ
R635	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EΑ
R636	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EΑ
R637 R638	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EΑ
	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EΑ
R639 R640	KRD25FJ180T KRD25FJ180T	RES , CARBON RES , CARBON	18 OHM 1/4W 18 OHM 1/4W	1	EA EA
R646	KRD25FJ1801 KRD25FJ3R3T	RES, CARBON	3.3 OHM 1/4W	1	EA
R647	KRD25FJ3R3T	RES, CARBON	3.3 OHM 1/4W	1	EA
R648	KRD25FJ3R3T	RES, CARBON	3.3 OHM 1/4W	1	EA
R649	KRD25FJ3R3T	RES, CARBON	3.3 OHM 1/4W	1	EA
R650	KRD25FJ3R3T	RES, CARBON	3.3 OHM 1/4W	1	EA
R651	KRD25FJ3R3T	RES, CARBON	3.3 OHM 1/4W	1	EA
R652	KRD25FJ3R3T	RES, CARBON	3.3 OHM 1/4W	1	EA
R653	KRD25FJ3R3T	RES , CARBON	3.3 OHM 1/4W	1	EA
R654	KRD25FJ3R3T	RES , CARBON	3.3 OHM 1/4W	1	EA
R655	KRD25FJ3R3T	RES , CARBON	3.3 OHM 1/4W	1	EA
R666	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EA
R667	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EA
R668	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EA
R669	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EA
R670	CRD25TJ470T	RES, CARBON	47 OHM 1/4W	1	EA
R671	CRD20TJ911T	RES, CARBON	910 OHM 1/5W J	1	EA
R672	CRD20TJ911T	RES , CARBON	910 OHM 1/5W J	1	EA
R673	CRD20TJ911T	RES , CARBON	910 OHM 1/5W J	1	EΑ
R674	CRD20TJ911T	RES, CARBON	910 OHM 1/5W J	1	EΑ
R675	CRD20TJ911T	RES , CARBON	910 OHM 1/5W J	1	EA
R676	CRD20TJ182T	RES, CARBON	1.8K OHM 1/5W J	1	EA
R677	CRD20TJ182T	RES, CARBON	1.8K OHM 1/5W J	1	EA
R678	CRD20TJ182T	RES , CARBON	1.8K OHM 1/5W J	1	EA
R679	CRD20TJ182T	RES, CARBON	1.8K OHM 1/5W J	1	EA
R680	CRD20TJ182T	RES, CARBON	1.8K OHM 1/5W J	1	EA
R681	CRD20TJ562T	RES, CARBON	5.6K OHM 1/5W J	1	EA
R682	CRD20TJ562T	RES, CARBON	5.6K OHM 1/5W J	1	EA
R683	CRD20TJ562T	RES , CARBON	5.6K OHM 1/5W J	1	EA
R684	CRD20TJ562T	RES , CARBON	5.6K OHM 1/5W J	1	EA
R685	CRD20TJ562T	RES , CARBON	5.6K OHM 1/5W J	1	EA
R686	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R687	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R688	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R689	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R690	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R696	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EA
R697	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EA
R698	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EΑ
R699	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EΑ
R700	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EΑ
R701	CRD20TJ821T	RES , CARBON	820 OHM 1/5W J	1	EΑ
R702	CRD20TJ821T	RES , CARBON	820 OHM 1/5W J	1	EΑ
R703	CRD20TJ821T	RES, CARBON	820 OHM 1/5W J	1	EΑ
R704	CRD20TJ821T	RES , CARBON	820 OHM 1/5W J	1	EA


Ref. Designato	or Part Number	Description		Qty	
MAIN PCB (	 CUP11579W)				
R705	CRD20TJ821T	RES, CARBON	820 OHM 1/5W J	1	EA
R706	CRD20TJ821T	RES , CARBON	820 OHM 1/5W J	1	EA
R707	CRD20TJ821T	RES, CARBON	820 OHM 1/5W J	1	EA
R708	CRD20TJ821T	RES, CARBON	820 OHM 1/5W J	1	EA
R711	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R712	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R713	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R714 R715	CRD20TJ472T	RES , CARBON RES , CARBON	4.7K OHM 1/5W J	1	EA
R716	CRD20TJ472T CRD20TJ472T	RES, CARBON	4.7K OHM 1/5W J 4.7K OHM 1/5W J	1 1	EA
R717	CRD20TJ472T	RES, CARBON	4.7K OHM 1/5W J	1	EA
R718	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R721	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R722	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R723	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R724	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R725	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R726	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R727	CRD20TJ104T	RES, CARBON	100K OHM 1/5W J	1	EΑ
R728	CRD20TJ104T	RES , CARBON	100K OHM 1/5W J	1	EA
R771	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R772	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R773	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R774	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R775	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R776	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R777	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R781	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R782	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R783	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R784	CRD20TJ750T	RES , CARBON	75 OHM 1/5W J	1	EA
R785 R786	CRD20TJ750T CRD20TJ750T	RES , CARBON RES , CARBON	75 OHM 1/5W J 75 OHM 1/5W J	1 1	EA
R787	CRD20TJ750T	RES, CARBON	75 OHM 1/5W J	1	EA
R801	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R802	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R803	CRD20TJ562T	RES, CARBON	5.6K OHM 1/5W J	1	EA
R804	CRD20TJ562T	RES , CARBON	5.6K OHM 1/5W J	1	EA
R805	CRD20TJ911T	RES, CARBON	910 OHM 1/5W J	1	EA
R807	CRD20TJ911T	RES , CARBON	910 OHM 1/5W J	1	EA
R808	CRD20TJ182T	RES, CARBON	1.8K OHM 1/5W J	1	EΑ
R809	CRD20TJ182T	RES , CARBON	1.8K OHM 1/5W J	1	EΑ
R812	CRD25TJ470T	RES, CARBON	47 OHM 1/4W	1	EA
R813	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EA
R814	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EA
R815	CRD25TJ470T	RES, CARBON	47 OHM 1/4W	1	EA
R817	KRD25FJ3R3T	RES , CARBON	3.3 OHM 1/4W	1	EA
R818	KRD25FJ3R3T	RES, CARBON	3.3 OHM 1/4W	1	EA
R819	KRD25FJ3R3T	RES , CARBON	3.3 OHM 1/4W	1	EA
R820	KRD25FJ3R3T	RES , CARBON	3.3 OHM 1/4W	1	EA
R821	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EΑ
R822	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EA
R823	KRD25FJ180T	RES , CARBON	18 OHM 1/4W	1	EΑ
R824	KRD25FJ180T	RES, CARBON	18 OHM 1/4W	1	EΑ
R830 R831	CRD20TJ223T CRD20TJ223T	RES , CARBON RES , CARBON	22K OHM 1/5W J 22K OHM 1/5W J	1 1	EA EA
R832	CRD20TJ223T	RES, CARBON	22K OHM 1/5W J	1	EA
R833	CRD20TJ223T	RES, CARBON	22K OHM 1/5W J	1	EA
R834	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R835	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R836	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
	01.020100011	, 0, 11, 15011	000 OT 11V1 1/0VV 0	'	1-/\


Ref. Designato	r Part Number	Description		Qty	
MAIN PCB (C	 CUP11579W)				
R837	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EΑ
R838	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EΑ
R839	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EΑ
R840	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EΑ
R841 R842	CRD20TJ561T	RES , CARBON RES , CARBON	560 OHM 1/5W J	1 1	EA EA
R843	CRD20TJ561T CRD20TJ561T	RES, CARBON	560 OHM 1/5W J 560 OHM 1/5W J	1	EA
R844	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R845	CRD20TJ561T	RES , CARBON	560 OHM 1/5W J	1	EA
R848	CRD20TJ273T	RES , CARBON	27K OHM 1/5W J	1	EA
R849	CRD20TJ273T	RES , CARBON	27K OHM 1/5W J	1 1	EA
R850	CRD20TJ162T	RES , CARBON	1.6K OHM 1/5W J	1	EA
R851	CRD20TJ162T	RES , CARBON	1.6K OHM 1/5W J	1	EA
R852	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EA
R853	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EA
R854	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EA
R855	CRD20TJ152T	RES , CARBON	1.5K OHM 1/5W J	1	EA
R856	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	1	EA
R857	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	1	EA
R858	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	1	EA
R859	CRD20TJ221T	RES , CARBON	220 OHM 1/5W J	1	EA
R860	CRD20TJ271T	RES , CARBON	270 OHM 1/5W J	1	EΑ
R861	CRD20TJ271T	RES , CARBON	270 OHM 1/5W J	1	EΑ
R862	CRD20TJ333T	RES , CARBON	33K OHM 1/5W J	1	EΑ
R863	CRD20TJ333T	RES , CARBON	33K OHM 1/5W J	1	EΑ
R864	CRD20TJ331T	RES , CARBON	330 OHM 1/5W J	1	EΑ
R865	CRD20TJ331T	RES , CARBON	330 OHM 1/5W J	1	EΑ
R866	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R867	CRD20TJ472T	RES, CARBON	4.7K OHM 1/5W J	1	EΑ
R868	CRD20TJ473T	RES, CARBON	47K OHM 1/5W J	1	EA
R869	CRD20TJ473T	RES, CARBON	47K OHM 1/5W J	1	EA
R870	CRD20TJ433T	RES, CARBON	43K OHM 1/5W J	1	EA
R871	CRD20TJ433T	RES, CARBON	43K OHM 1/5W J	1	EA
R872	CRD20TJ471T	RES , CARBON	470 OHM 1/5W J	1	EA
R873	CRD20TJ471T	RES , CARBON	470 OHM 1/5W J	1	EA
R900	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R901	CRD25TJ393T	RES, CARBON	39K OHM 1/4W J	1	EA
R902	CRD25TJ393T	RES , CARBON	39K OHM 1/4W J	1	EA
R903	CRD25TJ393T	RES, CARBON	39K OHM 1/4W J	1	EA
R906	CRD25TJ393T	RES , CARBON	39K OHM 1/4W J	1	EA
R907	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R908	CRD20TJ105T	RES , CARBON	1M OHM 1/5W J	1	EA
R909	CRD20TJ682T	RES , CARBON	6.8K OHM 1/5W J	1	EA
R910	CRD20TJ105T	RES , CARBON	1M OHM 1/5W J	1	EΑ
R911	CRD25TJ680T	RES , CARBON	68 OHM 1/4W J	1	EΑ
R917	CRD25TJ393T	RES , CARBON	39K OHM 1/4W J	1 1	EΑ
R918 R919	CRD25TJ393T	RES , CARBON RES , CARBON	39K OHM 1/4W J 39K OHM 1/4W J	1	EA EA
R920	CRD25TJ393T CRD25TJ393T	RES . CARBON	39K OHM 1/4W J	1	EA
R921	KRD25FJ180T	RES , CARBON	18 OHM 1/4W 3	1	EA
R922	CRD25TJ470T	RES , CARBON	47 OHM 1/4W	1	EA
R924	CRD20TJ473T	RES , CARBON	47K OHM 1/5W J	1	EA
R925	CRD20TJ473T	RES, CARBON	47K OHM 1/5W J	1	EA
R926	CRD20TJ473T	RES, CARBON	47K OHM 1/5W J	1	EA
R927	CRD20TJ473T	RES, CARBON	47K OHM 1/5W J	1	EA
R928	CRD20TJ222T	RES , CARBON	2.2K OHM 1/5W J	1	EA
R929	CRD20TJ222T	RES , CARBON	2.2K OHM 1/5W J	1	EA
R930	CRD20TJ222T	RES , CARBON	2.2K OHM 1/5W J	1	EA
R931	CRD20TJ222T	RES , CARBON	2.2K OHM 1/5W J	1	EA
R932	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R933	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA

Ref. Designator	Part Number	Description		Qty	
MAIN PCB (CU	JP11579W)				
D004	ODDOOT HOAT	DEC CARRON	40014 01 114 4 /514 1		- A
R934	CRD20TJ104T CRD20TJ154T	RES , CARBON	100K OHM 1/5W J	1 1	EA
R935 R936	CRD20TJ154T	RES, CARBON RES, CARBON	150K OHM 1/5W J 180K OHM 1/5W J	1	EA
R939	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R940	CRD20TJ152T	RES, CARBON	1.5K OHM 1/5W J	1	EA
R941	CRD20TJ223T	RES, CARBON	22K OHM 1/5W J	1	EA
R942	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EA
R943	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EA
R944	CRD25TJ223T	RES , CARBON	22K OHM 1/4W J	1	EA
R945	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EA
R946	CRD25TJ223T	RES , CARBON	22K OHM 1/4W J	1	EA
R947	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EΑ
R953	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EΑ
R954	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EΑ
R955	CRD20TJ203T	RES , CARBON	20K OHM 1/5W J	1	EA
R956	CRD20TJ394T	RES , CARBON	390K OHM 1/5W J	1	EΑ
R957	CRD20TJ153T	RES , CARBON	15K OHM 1/5W J	1	EΑ
R958	CRD20TJ563T	RES , CARBON	56K OHM 1/5W J	1	EΑ
R960	CRD20TJ222T	RES , CARBON	2.2K OHM 1/5W J	1	EΑ
R961	CRD20TJ331T	RES, CARBON	330 OHM 1/5W J	1	EΑ
R962	CRD20TJ273T	RES, CARBON	27K OHM 1/5W J	1	EA
R963	CRD20TJ105T	RES, CARBON	1M OHM 1/5W J	1	EA
R964	CRD20TJ105T	RES, CARBON	1M OHM 1/5W J	1	EA
R966	CRD20TJ472T	RES, CARBON	4.7K OHM 1/5W J	1	EA
R969	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R970	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R971	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R972	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R973	CRD20TJ472T	RES , CARBON	4.7K OHM 1/5W J	1	EA
R974	CRD20TJ331T	RES , CARBON	330 OHM 1/5W J	1	EA
R975	CRD20TJ331T	RES , CARBON	330 OHM 1/5W J	1	EA
R976	CRD20TJ331T	RES , CARBON	330 OHM 1/5W J	1	EA
R977	CRD20TJ331T	RES , CARBON	330 OHM 1/5W J	1	EA
R978	CRD20TJ331T	RES , CARBON	330 OHM 1/5W J	1	EA
R979	CRD20TJ473T	RES , CARBON	47K OHM 1/5W J	1	EA
R980 R981	CRD20TJ473T CRD20TJ473T	RES , CARBON RES , CARBON	47K OHM 1/5W J 47K OHM 1/5W J	1	EA EA
R982	CRD20TJ473T	RES, CARBON	47K OHM 1/5W J	1	EA
R983	CRD20TJ473T	RES , CARBON	47K OHM 1/5W J	1	EA
R986	CRD20TJ102T	RES, CARBON	1K OHM 1/5W J	1	EA
R987	CRD20TJ561T	RES, CARBON	560 OHM 1/5W J	1	EA
R988	CRD20TJ562T	RES , CARBON	5.6K OHM 1/5W J	1	EA
R991	CRD20TJ822T	RES , CARBON	8.2K OHM 1/5W J	1	EA
R992	CRD20TJ562T	RES . CARBON	5.6K OHM 1/5W J	1	EA
R998	CRD20TJ103T	RES , CARBON	10K OHM 1/5W J	1	EA
R563	CRD20TJ162T	RES , CARBON	1.6K OHM 1/5W J	1	EA
R565	CRD20TJ162T	RES , CARBON	1.6K OHM 1/5W J	1	EA
R656	CRF5EKR27HX2K	RES, CEMENT	0.27ohm X 2	1	EA
R657	CRF5EKR27HX2K	RES, CEMENT	0.27ohm X 2	1	EΑ
R658	CRF5EKR27HX2K	RES, CEMENT	0.27ohm X 2	1	EΑ
R659	CRF5EKR27HX2K	RES, CEMENT	0.27ohm X 2	1	EA
R660	CRF5EKR27HX2K	RES, CEMENT	0.27ohm X 2	1	EA
R810	CRF5EKR27HX2K	RES, CEMENT	0.27ohm X 2	1	EΑ
R811	CRF5EKR27HX2K	RES , CEMENT	0.27ohm X 2	1	EΑ
R904	HRDERC12UGK335T	RES , CARBONJP	3.3M OHM	1	EΑ
R905	CRG1ANJ100H	RES , METAL OXIDE FILM	10 OHM	1	EA
R923	CRD25TJ220T	RES , CARBON	22 OHM 1/4W J	1	EA
R959	CRD20TJ223T	RES , CARBON	22K OHM 1/5W J	1	EA
R990	CRG1ANJ100H	RES , METAL OXIDE FILM	10 OHM	1	EA
R993	CRG1ANJ100H	RES , METAL OXIDE FILM	10 OHM	1	EA
R994	CRG1ANJ100H	RES , METAL OXIDE FILM	10 OHM	1	EA

Ref. Designator	Part Number	Description		Qty	
MAIN PCB (CU	_  JP11579W)				
,					
R995	CRG1ANJ100H	RES , METAL OXIDE FILM	10 OHM	1	EA
R996	CRG1ANJ100H	RES , METAL OXIDE FILM	10 OHM	1	EA
R997	CRG1ANJ100H	RES , METAL OXIDE FILM	10 OHM	1	EA
R999	CRG1ANJ100H	RES , METAL OXIDE FILM	10 OHM	1	EA
Miscellaneous					+
Wilscellarieous					+
	CMYAVR335	HEAT SINK ASS'Y	ASS'Y	1	EA
	CHD1A012	SCREW, TR	SCREW	21	EA
	CHD1A036FZ	SCREW, SPECIAL	SCREW	4	EA
	CHD3A012	SCREW, TR	SCREW	3	EA
	CMD1A398	BRACKET, PCB	BRACKET	2	EA
	CMD1A417	BRACKET, PCB	BRACKET	2	EA
	CMD1A488	BRACKET , FAN	BRACKET	1	EA
	CMY1A249	HEAT SINK	HEAT SINK	2	EA
	CMY2A205	HEAT SINK,SUB	HEAT SINK	1	EA
	CTB3+10J	SCREW	SCREW	6	EA
	CTB3+8J	SCREW	SCREW	6	EA
	HDMKD1206PTS3	MOTOR, FAN(60X60X25MM)	FAN	1	EA
BN19	CWB3FE03250UP	WIRE ASS'Y	WIRE	1	EA
BN20	CWB3FB43280UP	WIRE ASS'Y	WIRE	1	EA
BN79	CWZAVR230BN79	WIRE ASS'Y (SHIELD)	WIRE	1	EA
BN81	CWB1C902050EN	WIRE ASS'Y	WIRE	1	EA
BN82 BN83	CWB1C902050EN	WIRE ASS'Y WIRE ASS'Y	WIRE WIRE	1	EΑ
BN84	CWB1C902050EN CWB1C902050EN	WIRE ASS Y	WIRE	1	EA EA
BN85	CWB1C902050EN	WIRE ASS'Y	WIRE	1	EA
BN86	CWB1C902050EN	WIRE ASS'Y	WIRE	1	EA
BN87	CWB1C902050EN	WIRE ASS'Y	WIRE	1	EA
BN88	CWB2B904070EN	WIRE ASS'Y	WIRE	1	EA
BN97	CWZAVR340BN97	WIRE ASS'Y	WIRE	1	EA
BN98	HJP08GA130ZK	WAFER	WAFER	1	EA
CN61	KJP02GA01ZM	WAFER	WAFER	1	EA
CN62	KJP02GA01ZM	WAFER	WAFER	1	EA
CN63	KJP02GA01ZM	WAFER	WAFER	1	EA
CN64	KJP02GA01ZM	WAFER	WAFER	1	EA
CN65	KJP02GA01ZM	WAFER	WAFER	1	EA
CN66	KJP02GA01ZM	WAFER	WAFER	1	EA
CN67	KJP02GA01ZM	WAFER	WAFER	1	EA
CN80	KJP11GA19ZM	WAFER	WAFER	1	EA
CN89	KJP02GA01ZM	WAFER	WAFER	1	EA
CN91	KJP03GA89ZM	WAFER	WAFER	1	EA
CN92	KJP02GA01ZM	WAFER	WAFER	1	EA
CN94	KJP13GA98ZM	WAFER	WAFER	1	EA
CN95	KJP08GA98ZM	WAFER	WAFER	1	EA
ET01	CMD1A387	BRACKET, PCB	BRACKET	3	EA
ET01	CNE75	PLATE , EARTH	PLATE	1	EA
ET02	CMD1A387	BRACKET, PCB	BRACKET	3	EA
ET03	CNE75 CJJ5R006Z	PLATE , EARTH	PLATE TERMINAL	1	EΑ
JK91		TERMINAL SPEAKER	SPEAKER TERMINAL	1	EΑ
JK92 JK97	CJJ5Q012Z CJJ4P041W	TERMINAL , SPEAKER  JACK IN/OUT	SPEAKER TERMINAL JACK	1	EA EA
JK97 JK98	CJJ4P041W	JACK IN/OUT	JACK	1	EA
JW90	CWEE212120VV	WIRE ASS'Y	WIRE	1	EA
JW90 JW91	CWE8212180VV	WIRE ASS Y	WIRE	1	EA
JW93	CWE7202110AA	WIRE ASS Y	WIRE	1	EA
JW98	CWE7202110AA	WIRE ASS'Y	WIRE	1	EA
JW99	CWE8202150AA	WIRE ASS'Y	WIRE	1	EA
L501	CLEY0R5KAK	COIL , SPEAKER	0.5UH K	1	EA
L502	CLEY0R5KAK	COIL, SPEAKER	0.5UH K	1	EA
L503	CLEY0R5KAK	COIL, SPEAKER	0.5UH K	1	EA
			1		


Ref. Designator	Part Number	Description		Qty	
MAIN PCB (CUP11579W)					
L504	CLEY0R5KAK	COIL , SPEAKER	0.5UH K	1	EΑ
L505	CLEY0R5KAK	COIL , SPEAKER	0.5UH K	1	EΑ
L506	CLEY0R5KAK	COIL , SPEAKER	0.5UH K	1	EΑ
L507	CLEY0R5KAK	COIL , SPEAKER	0.5UH K	1	EA
RY94	HSL1A008ZE	RELAY	SDT-S-112DMR	1	EA
TH91	KRTP42T7D330B	THERMAL SENSOR , POSISTOR	POSISTOR	1	EA
T902	CLT5J038ZU	TRANS, SUB	SUB TRANS	1	EA
	CTW3+8J	SCREW	SCREW	2	EA
	CUP11817Z	PCB, CONNECTOR	PCB		
	CNVM9011MS071L	AVR 340 TUNER MODULE			

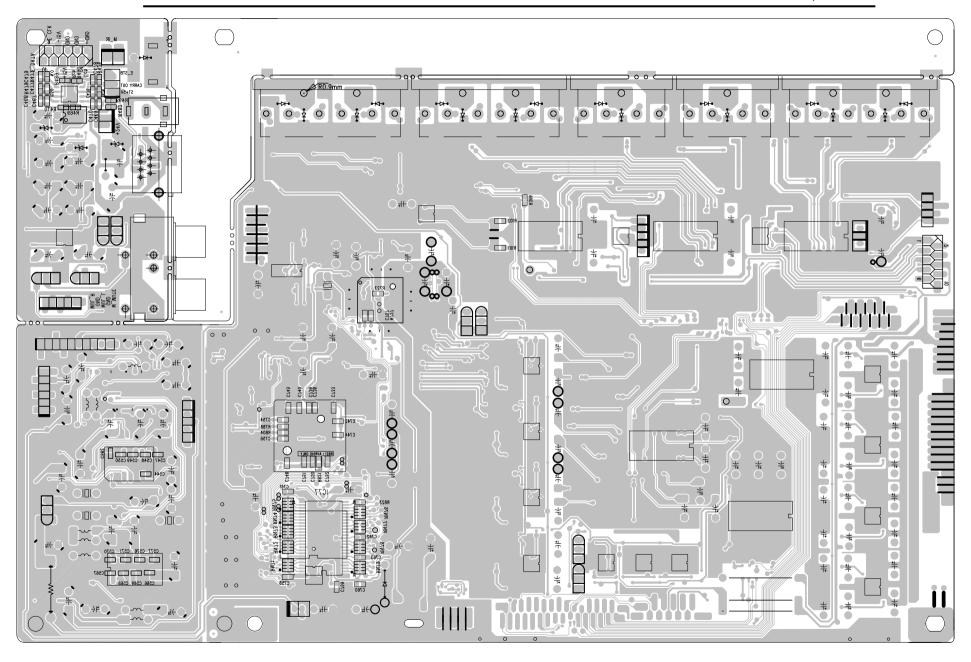

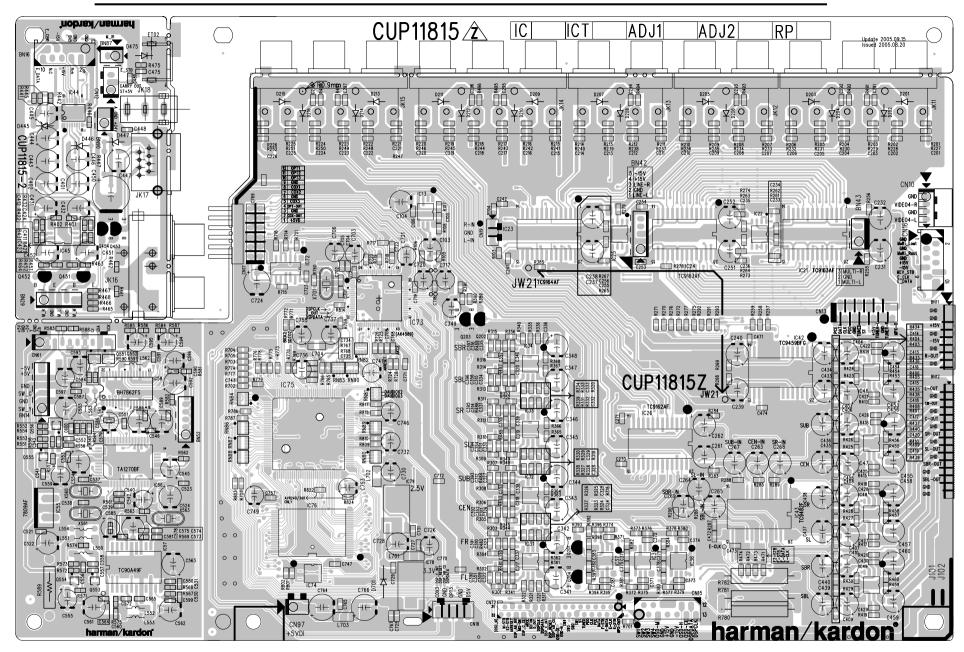



AVR340 INPUT MP 050819. - Thu Oct 27 11:45:21 2005


5 C4

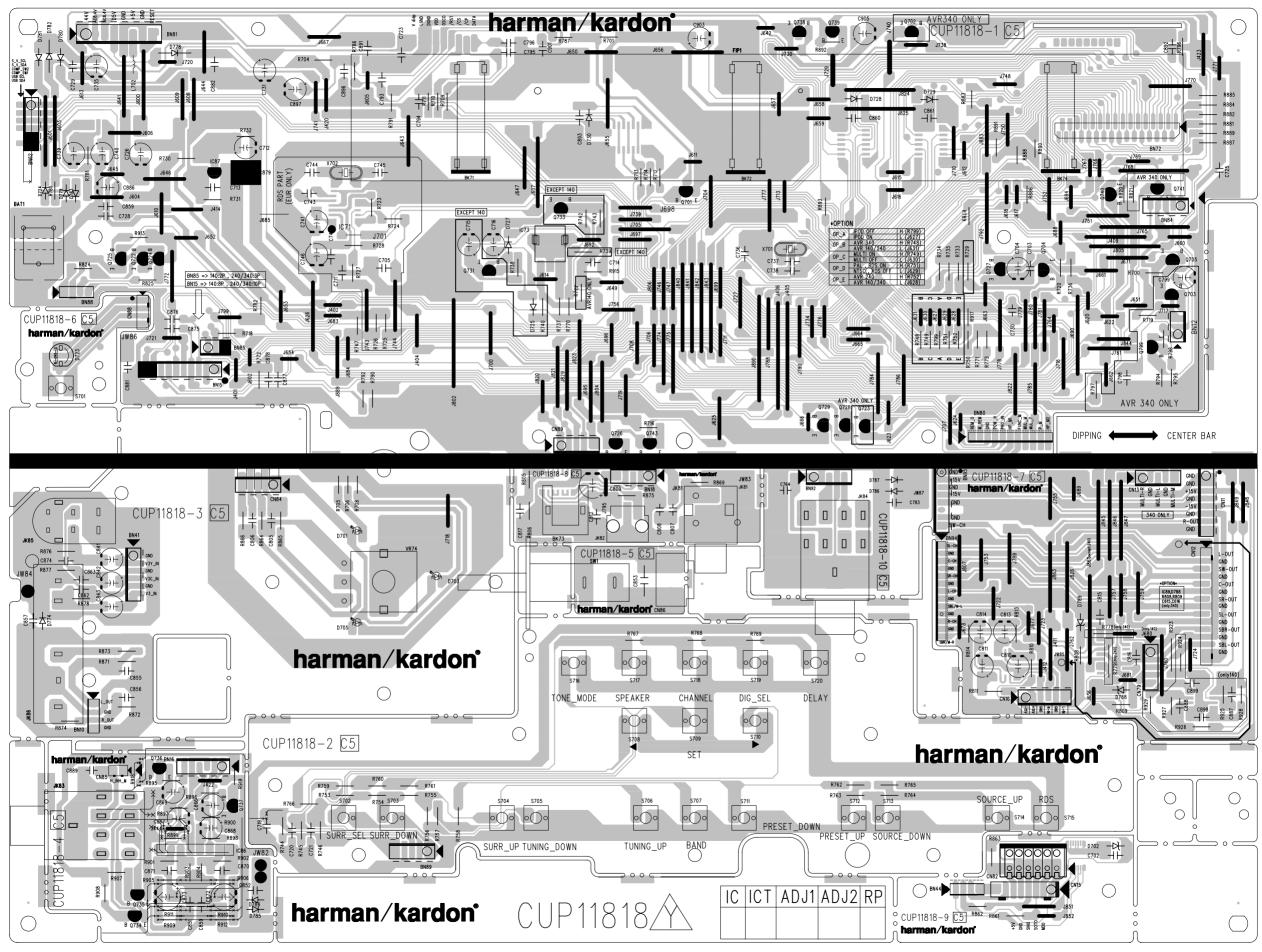

harman/kardon **AVR340** 

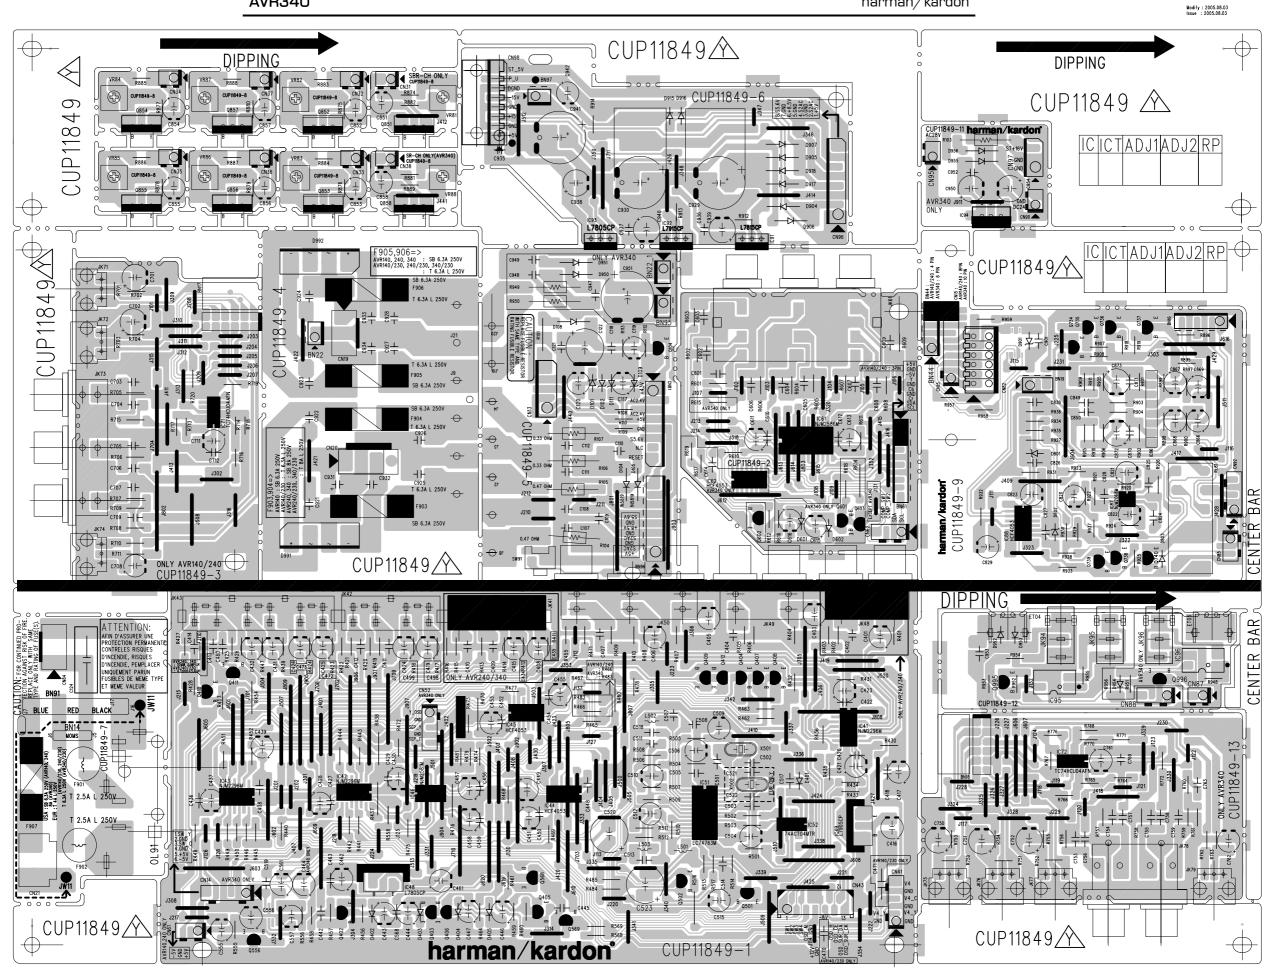

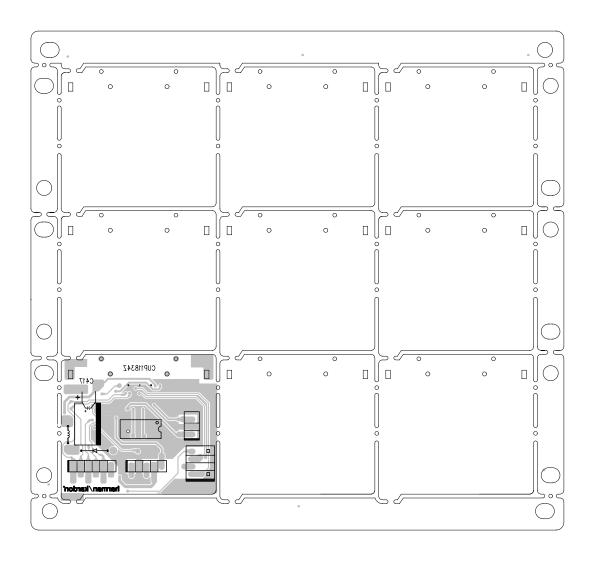

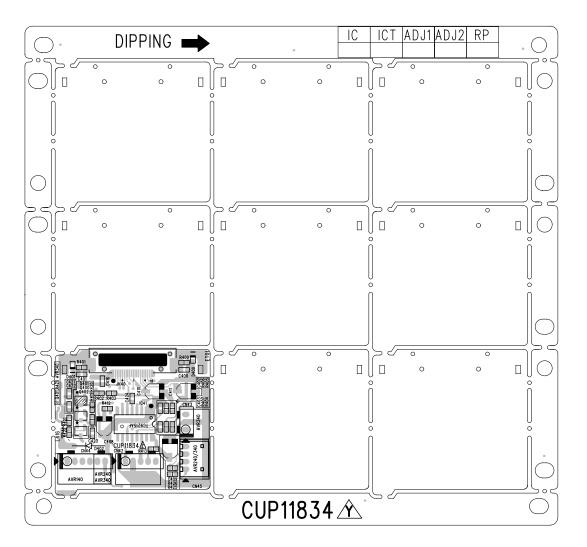



November 1988 Revised November 1999

# 74AC04 • 74ACT04 Hex Inverter

## 74ACT04SC: IC52,75,83,84

## **General Description**

The AC/ACT04 contains six inverters.

#### **Features**

- I<sub>CC</sub> reduced by 50% on 74AC only
- Outputs source/sink 24 mA
- ACT04 has TTL-compatible inputs

## **Ordering Code:**


Order Number	Package Number	Package Description
74AC04SC	M14A	14-Lead Small Outline Integrated Circuit (SOIC), JEDEC MS-120, 0.150" Narrow Body
74AC04SJ	M14D	14-Lead Small Outline Package (SOP), EIAJ TYPE II, 5.3mm Wide
74AC04MTC	MTC14	14-Lead Thin Shrink Small Outline Package (TSSOP), JEDEC MO-153, 4.4mm Wide
74AC04PC	N14A	14-Lead Plastic Dual-In-Line Package (PDIP), JEDEC MS-001, 0.300" Wide
74ACT04SC	M14A	14-Lead Small Outline Integrated Circuit (SOIC), JEDEC MS-120, 0.150" Narrow Body
74ACT04MTC	MTC14	14-Lead Thin Shrink Small Outline Package (TSSOP), JEDEC MO-153, 4.4mm Wide
74ACT04PC	N14A	14-Lead Plastic Dual-In-Line Package (PDIP), JEDEC MS-001, 0.300" Wide

Device also available in Tape and Reel. Specify by appending suffix letter "X" to the ordering code. (PC not available in Tape and Reel.)

## **Logic Symbol**



## **Connection Diagram**

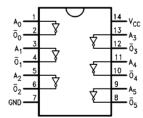

## **Pin Descriptions**

Pin Names	Description
A <sub>n</sub>	Inputs
$\overline{O}_n$	Outputs




# M54HCU04 M74HCU04

## HEX INVERTER (SINGLE STAGE)

- HIGH SPEED
  - $t_{PD} = 5 \text{ ns (TYP.)} \text{ AT V}_{CC} = 5 \text{ V}$
- LOW POWER DISSIPATION  $I_{CC} = 1 \mu A \text{ (MAX.)} \text{ AT } I_A = 25 \text{ °C}$
- HIGH NOISE IMMUNITY V<sub>NIH</sub> = V<sub>NIL</sub> = 10 % V<sub>CC</sub> (MIN.)
- OUTPUT DRIVE CAPABILITY 10 LSTTL LOADS
- SYMMETRICAL OUTPUT IMPEDANCE | I<sub>OH</sub> | = I<sub>OL</sub> = 4 mA (MIN.)
- BALANCED PROPAGATION DELAYS

  tplh = tphl
- WIDE OPERATING VOLTAGE RANGE VCC (OPR) = 2 V TO 6 V
- PIN AND FUNCTION COMPATIBLE WITH 54/74LS04

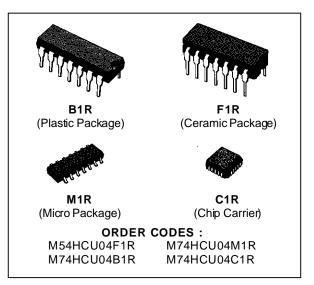


#### **DESCRIPTION**


The M54/74HCU04 is a high speed CMOS HEX IN-VERTER (SINGLE STAGE) fabricated in silicon gate C<sup>2</sup>MOS technology. It has the same high speed performance of LSTTL combined with true CMOS low power consumption.

As the intrnal circuit is composed of a single stage inverter, it can be used in crystal oscillator.


All inputs are equipped with circuits against static discharge and transient excess voltage.

#### INPUT AND OUTPUT EQUIVALENT CIRCUIT

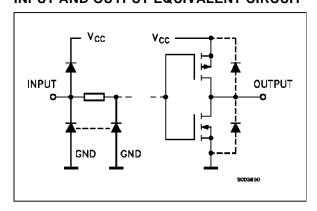


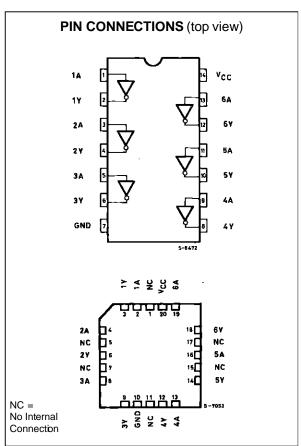

# ■ PIN ASSIGNMENT (74HCU04AFN: IC72,76)

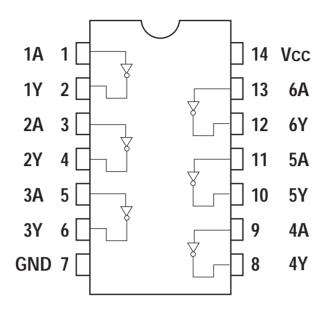

## ■ LOGIC SYMBOL

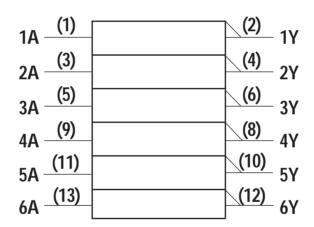

## **■ TRUTH TABLE**

А	Υ
L	Н
Н	L

Video Switch · 75Ω driver · Y/C mix MM1501

## MITSUMI

# Video Switch $\cdot$ 75 $\Omega$ driver $\cdot$ Y/C mix

# Monolithic IC MM1501 Series

## **Outline**

This IC extends the series of ICs for video/audio signal switching, with a 2-input 1-output single video switch, video signal/chroma signal  $75\Omega$  driver, and Y/C mixing circuit in one small package (SOT-26).

## **Features**

- (1) Low power consumption achieved.
- (2) Low power supply voltage realized.
- (3) Frequency bandwidth without 75 $\Omega$  driver: 10MHz with 75 $\Omega$  driver: 7MHz
- (4) Cross talk 70dB When 4.43MHz
- (5) With SAG measures pin (75 $\Omega$  driver and Y/C mix driver)

## **Package**

SOT-26A (with  $75\Omega$  driver) SOT-26B (without  $75\Omega$  driver)

# **Applications**


- (1) TV
- (2) VTR
- (3) Video camera
- (4) Digital still camera
- (5) Other visual equipment


## Line-up

Functions	Model Name	Input	Output	Clamp	6dB amp	75Ω driver	SAG measures pin	Power supply voltage
	MM1501			×	×	×	×	4.5~13.0V
	MM1502			×	0	×	×	4.5~13.0V
	MM1503			0	×	×	×	4.5~13.0V
Switch	MM1504	$\frac{1}{2}$	1	0	0	×	×	4.5~13.0V
Switch	MM1505	2		×	×	0	×	4.5~13.0V
	MM1506			×	0	0	×	4.5~13.0V
	MM1507			0	×	0	×	4.5~13.0V
	MM1508			0	0	0	×	4.5~13.0V
Driver	MM1509	1	1	×	0	0	0	4.5~13.0V
Dilvei	MM1510	1	1	0	0	0	0	4.5~13.0V
Y/C mix	MM1511	1	1	○/×	×	×	×	4.5~13.0V
Y/C IIIIX	MM1512	1	1	○/×	0	0	0	4.5~13.0V

## MM1507


## MM1508

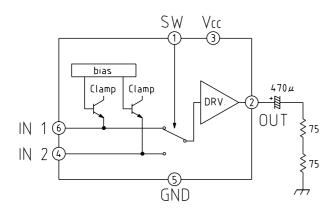


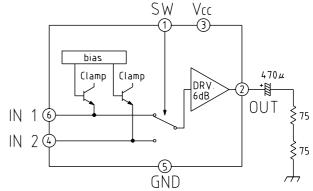

#### MM1509


## MM1510

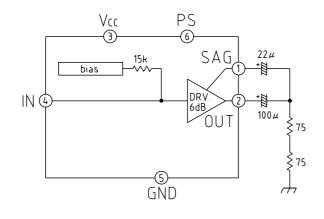


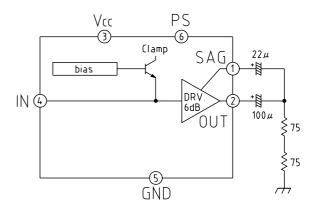

## MM1511

## MM1512

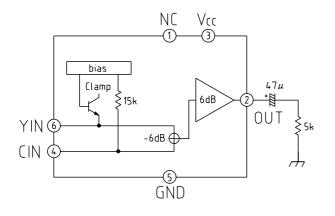

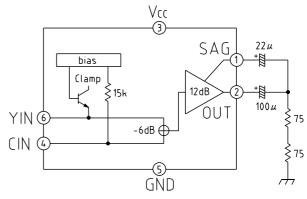

## MM1509

Item		Symbol	Measurement conditions	Min.	Тур.	Max.	Unit
Consumption co	urrent	Icc1	Refer to measurement procedures		6.3	8.2	mA
Current consumption	on for PS	Icc2	Refer to measurement procedures		20	30	μA
PS input volta	ge L	VPSL	Refer to measurement procedures			0.3	V
PS input voltage	ge H	VPSH	Refer to measurement procedures	1.8			V
Input pin volta	age	Vin	No-signal, no-load	1.75	1.95	2.15	V
Output pin voltage		Vout	No-signal, no-load		2.35		V
Voltage gai	n	Gv	Refer to measurement procedures	5.5	6.0	6.5	dB
Frequency charac	cteristic	fc	Refer to measurement procedures	-1	0	+1	dB
Differential gain	Vcc=9V	DG	Refer to measurement procedures	-3	0	+3	%
Differential phase	Vcc=9V	DP	Refer to measurement procedures	-3	0	+3	deg
Output dynamic range		$V_{\mathrm{D}}$	Refer to measurement procedures	2.9	3.2		V
Input impeda	nce	Zi			15		kΩ

## MM1510

Item	Symbol	Measurement conditions	Min.	Тур.	Max.	Unit
Consumption current	Icc1	Refer to measurement procedures		6.4	8.3	mA
Current consumption for PS	Icc2	Refer to measurement procedures		20	30	μA
PS input voltage L	VPSL	Refer to measurement procedures			0.3	V
PS input voltage H	VPSH	Refer to measurement procedures	1.8			V
Input pin voltage	Vin	No-signal, no-load	1.15	1.35	1.55	V
Output pin voltage	Vout	No-signal, no-load		1.15		V
Voltage gain	Gv	Refer to measurement procedures	5.5	6.0	6.5	dB
Frequency characteristic	fc	Refer to measurement procedures	-1	0	+1	dB
Differential gain	DG	Refer to measurement procedures	-3	0	+3	%
Differential phase	DP	Refer to measurement procedures	-3	0	+3	deg
Output dynamic range	$V_{\mathrm{D}}$	Refer to measurement procedures	2.6	3.0		V

## MM1511

Item	Symbol	Measurement conditions	Min.	Тур.	Max.	Unit
Consumption current	Icc	Refer to measurement procedures		4.4	5.7	mA
Y input pin voltage	Vyin	No-signal, no-load	2.00	2.20	2.40	V
C input pin voltage	Vcin	No-signal, no-load	1.85	2.05	2.25	V
Output pin voltage	Vout	No-signal, no-load		1.15		V
Voltage gain	Gv	Refer to measurement procedures	-0.5	0	6.5	dB
Frequency characteristic	fc	Refer to measurement procedures	-1	0	+0.5	dB
Differential gain	DG	Refer to measurement procedures	-3	0	+3	%
Differential phase	DP	Refer to measurement procedures	-3	0	+3	deg
Y output dynamic range	$V_{\mathrm{DY}}$	Refer to measurement procedures	2.6	2.9		V
C output dynamic range	VDC	Refer to measurement procedures	2.0			V
C input impedance	Zi			15		kΩ
Output impedance	Zo			25		Ω



# HY57V161610ETP-I 2 Banks x 512K x 16 Bit Synchronous DRAM

#### DESCRIPTION

THE Hynix HY57V161610E is a 16,777,216-bits CMOS Synchronous DRAM, ideally suited for the main memory and graphic applications which require large memory density and high bandwidth. HY57V161610E is organized as 2banks of 524,288x16.

HY57V161610E is offering fully synchronous operation referenced to a positive edge clock. All inputs and outputs are synchronized with the rising edge of the clock input. The data paths are internally pipelined to achieve very high bandwidth. All input and output voltage levels are compatible with LVTTL.

Programmable options include the length of pipeline (Read latency of 1,2 or 3), the number of consecutive read or write cycles initiated by a single control command (Burst length of 1,2,4,8 or full page), and the burst count sequence(sequential or interleave). A burst of read or write cycles in progress can be terminated by a burst terminate command or can be interrupted and replaced by a new burst read or write command on any cycle. (This pipeline design is not restricted by a '2N' rule.)

#### **FEATURES**

- Single 3.0V to 3.6V power supply
- All device pins are compatible with LVTTL interface
- JEDEC standard 400mil 50pin TSOP-II with 0.8mm of pin pitch
- All inputs and outputs referenced to positive edge of system clock
- Data mask function by UDQM/LDQM
- · Internal two banks operation

- Auto refresh and self refresh
- 4096 refresh cycles / 64ms
- Programmable Burst Length and Burst Type
  - 1, 2, 4, 8 and Full Page for Sequence Burst
  - 1, 2, 4 and 8 for Interleave Burst
- Programmable CAS Latency; 1, 2, 3 Clocks
- Pb-free Package

#### ORDERING INFORMATION

Part No.	Clock Frequency	Organization	Interface	Package
HY57V161610ETP-5I	200MHz			
HY57V161610ETP-55I	183MHz			
HY57V161610ETP-6I	166MHz			400mil
HY57V161610ETP-7I	143MHz	2Banks x 512Kbits x 16	LVTTL	50pin TSOP II
HY57V161610ETP-8I	125MHz			(Pb free)
HY57V161610ETP-10I	100MHz			
HY57V161610ETP-15I	66MHz			

#### Note:

- 1. VDD(min) of HY57V161610ETP-5I/55I is 3.15V
- 2. Hynix supports lead free part for each speed grade with same specification.


This document is a general product description and is subject to change without notice. Hynix Semiconductor does not assume any responsibility for use of circuits described. No patent licenses are implied

Rev. 0.1 / Nov. 2003

# ициіх

## HY57V161610ETP-I

## **PIN CONFIGURATION**

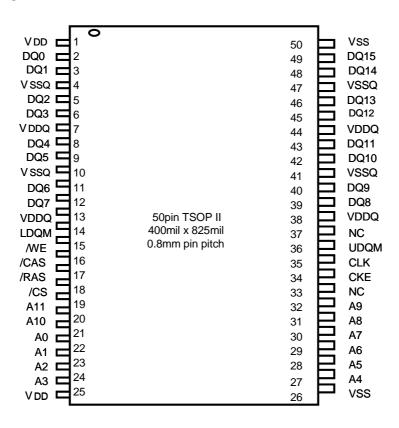

#### **PIN DESCRIPTION**

PIN	PIN NAME	DESCRIPTION
CLK	Clock	The system clock input. All other inputs are referenced to the SDRAM on the rising edge of CLK.
CKE	Clock Enable  Controls internal clock signal and when deactivated, the SDRAM was states among power down, suspend or self refresh.	
CS	Chip Select	Command input enable or mask except CLK, CKE and DQM
BA	Bank Address	Select either one of banks during both RAS and CAS activity.
A0 ~ A10	Address	Row Address : RA0 ~ RA10, Column Address : CA0 ~ CA7 Auto-precharge flag : A10
RAS, CAS, WE	Row Address Strobe, Column Address Strobe, Write Enable	RAS, CAS and WE define the operation.  Refer function truth table for details
LDQM, UDQM	Data Input/Output Mask	DQM control output buffer in read mode and mask input data in write mode
DQ0 ~ DQ15	Data Input/Output	Multiplexed data input / output pin
VDD/VSS	Power Supply/Ground	Power supply for internal circuit and input buffer
VDDQ/VSSQ	Data Output Power/Ground	Power supply for DQ
NC	No Connection	No connection


Rev. 0.1 / Nov. 2003



## HY57V161610ETP-I

## **FUNCTIONAL BLOCK DIAGRAM**

1Mx16 Synchronous DRAM

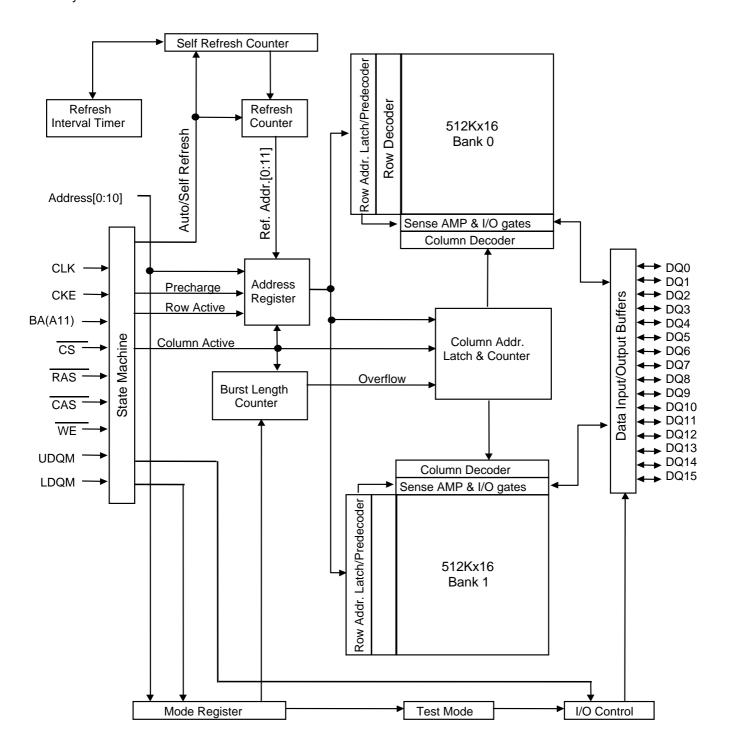

Rev. 0.1 / Nov. 2003 3



## HY57V161610ETP-I

## **COMMAND TRUTH TABLE**

Comman	d	CKEn-1	CKEn	cs	RAS	CAS	WE	DQM	A0~A9	A10/ AP	ВА	Note
Mode Register Set	Mode Register Set		Х	L	L	L	L	Х	OP code			
No Operation		Н	Х	Н	Х	Х	Х	_		Х		
No Operation			^	L	Н	Н	Н	X		^		
Bank Active		Н	Х	L	L	Н	Н	Х	Row A	ddress	V	
Read		н	Х		Н		Н	х	Column	L	V	
Read with Auto precha	arge		^	L	П	L	П	^	Address	Н	V	
Write			Х		н			х	Column	L		
Write with Auto precha	irge	Н	X	L	н	L	L	X	Address	Н	V	
Precharge All Bank		н	Х	L	L	Н	L	Х	Х	Н	Х	
Precharge selected Ba	ank		^	L		П	L	^	^	L	V	
Burst Stop		Н	Х	L	Н	Н	L	Х	X			
U/LDQM		Н			Х			V	V X			
Auto Refresh		Н	Н	L	L	L	Н	Х	Х			
Burst-READ-Single-W	RITE	Н	х	L	L	L	L	Х	(Othe	A9 Pin High er Pins OP c	ode)	
	Entry	Н	L	L	L	L	Н	Х				
Self Refresh <sup>1</sup>	Exit	L	Н	Н	Х	Х	Х	Х		Χ		
	EXIL	L	П	L	Н	Н	Н	^				
	Entry	н	L	Н	Х	Х	Х	Х				
Precharge power	Entry		_	L	Н	Н	Н	^	x			
down	down		Н	Н	Х	Х	Х	Х				
	Exit	L	П	L	Н	Н	Н	^				
	Entry	Н	L	Н	Х	Х	Х	Х				
Clock Suspend	Lility	11		L	V	V	V	^		Χ		
	Exit	L	Н		,	×		Х				

#### Note

Rev. 0.1 / Nov. 2003 12

<sup>1.</sup> Exiting Self Refresh occurs by asynchronously bringing CKE from low to high.

<sup>2.</sup> X=Do not care, L=Low, H=High, BA=Bank Address, RA= Row Address, CA=Column Address, Opcode=Operand Code, NOP=No Operation.



March 1995 Revised February 2005

## 74LCX32 Low Voltage Quad 2-Input OR Gate with 5V Tolerant Inputs

#### **General Description**

The LCX32 contains four 2-input OR gates. The inputs tolerate voltages up to 7V allowing the interface of 5V systems to 3V systems.

The 74LCX32 is fabricated with advanced CMOS technology to achieve high speed operation while maintaining CMOS low power dissipation.

#### **Features**

- 5V tolerant inputs
- 2.3V-3.6V V<sub>CC</sub> specifications provided
- 5.5 ns  $t_{PD}$  max ( $V_{CC} = 3.3V$ ), 10  $\mu$ A  $I_{CC}$  max
- Power down high impedance inputs and outputs
- $\blacksquare$  ±24 mA output drive (V<sub>CC</sub> = 3.0V)
- Implements patented noise/EMI reduction circuitry
- Latch-up performance exceeds JEDEC 78 conditions
- ESD performance:
  Human body model > 2000V
  Machine model > 150V
   Leadless Pb-Free DQFN package

## **Ordering Code:**

Order Number	Package Number	Package Description			
74LCX32M	M14A	14-Lead Small Outline Integrated Circuit (SOIC), JEDEC MS-012, 0.150" Narrow			
74LCX32MX_NL (Note 2)	M14A	Pb-Free 14-Lead Small Outline Integrated Circuit (SOIC), JEDEC MS-012, 0.150" Narrow			
74LCX32SJ	M14D	Pb-Free 14-Lead Small Outline Package (SOP), EIAJ TYPE II, 5.3mm Wide			
74LCX32BQX (Note 1)	MLP014A	Pb-Free 14-Terminal Depopulated Quad Very-Thin Flat Pack No Leads (DQFN), JEDEC MO-241, 2.5 x 3.0mm			
74LCX32MTC	MTC14	14-Lead Thin Shrink Small Outline Package (TSSOP), JEDEC MO-153, 4.4mm Wide			
74LCX32MTCX_NL (Note 2)	MTC14	Pb-Free 14-Lead Thin Shrink Small Outline Package (TSSOP), JEDEC MO-153, 4.4mm Wide			


Devices also available in Tape and Reel. Specify by appending the suffix letter "X" to the ordering code.

Pb-Free package per JEDEC J-STD-020B.

Note 1: DQFN package available in Tape and Reel only.

Note 2: "\_NL" indicates Pb-Free package (per JEDEC J-STD-020B). Device available in Tape and Reel only.

## **Logic Symbol**

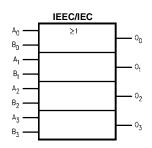


## **Pin Descriptions**


Pin Names	Description		
A <sub>n</sub> , B <sub>n</sub>	Inputs		
O <sub>n</sub>	Outputs		

## **Connection Diagrams**

Pin Assignments for SOIC, SOP, and TSSOP

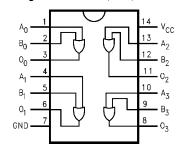

Pad Assignment for DQFN

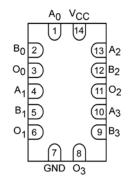

(Top View)

ASAHI KASEI [AK4589]



## **AK4589**

## 2/8-Channel Audio CODEC with DIR

#### **GENERAL DESCRIPTION**

The AK4589 is a single chip CODEC that includes two channels of ADC and eight channels of DAC. The ADC outputs 24bit data and the DAC accepts up to 24bit input data. The ADC has the Enhanced Dual Bit architecture with wide dynamic range. The DAC introduces the new developed Advanced Multi-Bit architecture, and achieves wider dynamic range and lower outband noise. The AK4589 has a dynamic range of 102dB for ADC, 114dB for DAC and is well suited for digital surround for home theater audio. The AK4589 also has the balance volume control corresponding to the Dolby Digital (AC-3) system.

The also has digital audio receiver (DIR) and transmitter (DIT) compatible with 192kHz, 24bits. The DIR has 8-channel input selector and can automatically detect a Non-PCM bit stream. The AK4589 provides a compatibility of hardware and software with the AK4588.

\*Dolby Digital (AC-3) is a trademark of Dolby Laboratories.

#### **FEATURES**

#### ☐ ADC/DAC part

- 2ch 24bit ADC
  - 64x Oversampling
  - Sampling Rate up to 96kHz
  - Linear Phase Digital Anti-Alias Filter
  - Single-Ended Input
  - S/(N+D): 92dB
  - Dynamic Range, S/N: 102dB
  - Digital HPF for offset cancellation
  - Overflow flag
- 8ch 24bit DAC
  - 128x Oversampling
  - Sampling Rate up to 192kHz
  - 24bit 8 times Digital Filter
  - Differential Outputs
  - On-chip Switched-Capacitor Filter
  - S/(N+D): 94dB
  - Dynamic Range, S/N: 114dB
  - Individual channel digital volume with 128 levels and 0.5dB step
  - Soft mute
  - De-emphasis for 32kHz, 44.1kHz, 48kHz
  - Zero Detect Function
- High Jitter Tolerance
- Extenal Master Clock Input:
  - 256fs, 384fs, 512fs (fs=32kHz ~ 48kHz)
  - 128fs, 192fs, 256fs (fs=64kHz ~ 96kHz)
  - 128fs (fs=120kHz ~ 192kHz)

ASAHI KASEI [AK4589]


#### ☐ DIR/DIT Part

- AES3, IEC60958, S/PDIF, EIAJ CP1201 Compatible
- Low jitter Analog PLL
- PLL Lock Range: 32kHz to 192kHz
- Clock Source: PLL or X'tal
- 8-channel Receiver input
- 2-channel Transmission output (Through output or DIT)
- Auxiliary digital input
- De-emphasis for 32kHz, 44.1kHz, 48kHz and 96kHz
- Detection Functions
  - Non-PCM Bit Stream Detection
  - DTS-CD Bit Stream Detection
  - Sampling Frequency Detection (32kHz, 44.1kHz, 48kHz, 88.2kHz, 96kHz, 176.4kHz, 192kHz)
  - Unlock & Parity Error Detection
  - Validity Flag Detection
- Up to 24bit Audio Data Format
- Audio I/F: Master or Slave Mode
- 40-bit Channel Status Buffer
- Burst Preamble bit Pc and Pd Buffer for Non-PCM bit stream
- Q-subcode Buffer for CD bit stream
- Serial μP I/F
- Two Master Clock Outputs: 64fs/128fs/256fs/512fs

FTL Level Digital I/F
I-wire Serial and I <sup>2</sup> C Bus μP I/F for mode setting
Operating Voltage: 4.75 to 5.25V with 5V tolerance
Power Supply for output buffer: 2.7 to 5.25V
30pin LQFP Package (0.5mm pitch)
AK4588 compatible w/o analog outputs

ASAHI KASEI [AK4589]

#### ■ Block Diagram

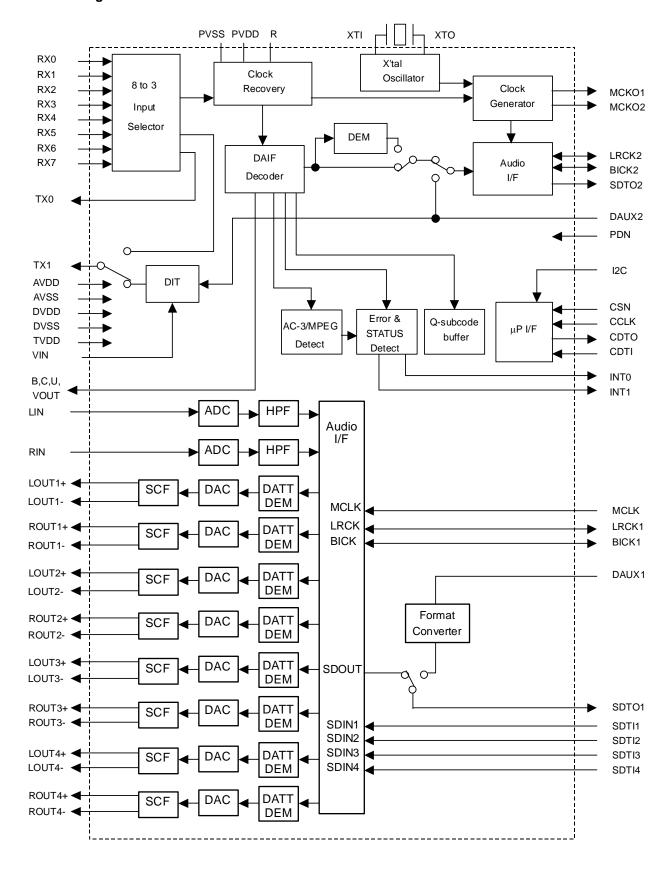


ASAHI KASEI [AK4589]

#### **■** Ordering Guide

AK4589VQ  $-10 \sim +70^{\circ}$ C 80pin LQFP(0.5mm pitch) AKD4589 Evaluation Board for AK4589

#### ■ Pin Layout

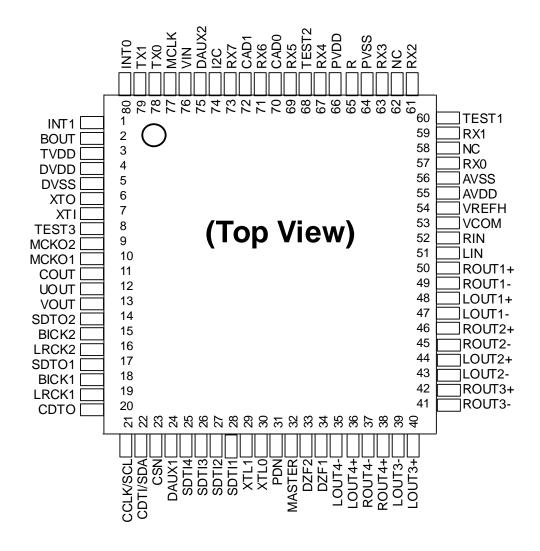

ASAHI KASEI [AK4589]

## PIN/FUNCTION

No.	Pin Name	I/O	Function				
1	INT1	О	Interrupt 1 Pin				
	BOUT	0	Block-Start Output Pin for Receiver Input				
2	БООТ	0	"H" during first 40 flames.				
3	TVDD	-	Output Buffer Power Supply Pin, 2.7V~5.25V				
4	DVDD	-	Digital Power Supply Pin, 4.75V~5.25V				
5	DVSS	-	Digital Ground Pin				
6	XTO	0	X'tal Output Pin				
7	XTI	I	X'tal Input Pin				
8	TEST3	ī	Test 3 Pin				
0	112313	1	This pin should be connected to DVSS.				
9	MCKO2	O	Master Clock Output 2 Pin				
10	MCKO1	О	Master Clock Output 1 Pin				
11	COUT	O	C-bit Output Pin for Receiver Input				
12	UOUT	О	U-bit Output Pin for Receiver Input				
13	VOUT	О	V-bit Output Pin for Receiver Input				
14	SDTO2	О	Audio Serial Data Output Pin (DIR/DIT part)				
15	BICK2	I/O	Audio Serial Data Clock Pin (DIR/DIT part)				
16	LRCK2	I/O	Channel Clock Pin (DIR/DIT part)				
17	SDTO1	О	Audio Serial Data Output Pin (ADC/DAC part)				
18	BICK1	I/O	Audio Serial Data Clock Pin (ADC/DAC part)				
19	LRCK1	I/O	Input Channel Clock Pin				
20	CDTO	О	Control Data Output Pin in Serial Mode, I2C= "L".				
21	CCLK	I	Control Data Clock Pin in Serial Mode, I2C= "L"				
21	SCL	I	Control Data Clock Pin in Serial Mode, I2C= "H"				
22	CDTI	I	Control Data Input Pin in Serial Mode, I2C= "L".				
22	SDA	I/O	Control Data Pin in Serial Mode, I2C= "H".				
23	CSN	I	Chip Select Pin in Serial Mode, I2C= "L".				
23		I	This pin should be connected to DVSS, I2C= "H".				
24	DAUX1	I	AUX Audio Serial Data Input Pin (ADC/DAC part)				
25	SDTI4	I	DAC4 Audio Serial Data Input Pin				
26	SDTI3	I	DAC3 Audio Serial Data Input Pin				
27	SDTI2	I	DAC2 Audio Serial Data Input Pin				
28	SDTI1	I	DAC1 Audio Serial Data Input Pin				
29	XTL1	I	X'tal Frequency Select 0 Pin				
30	XTL0	I	X'tal Frequency Select 1 Pin				


ASAHI KASEI [AK4589]

No.	Pin Name	I/O	Fun	action					
	, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		Power-Down Mode Pin						
31	PDN	I		n, all digital output pins go "L", all registers					
01	121,	_	are reset. When CAD1/0 pins are changed, the AK4589 should be reset by PDN pin.						
	1.5.4.00000	_	Master Mode Select Pin						
32	MASTER	I	"H": Master mode, "L": Slave mode						
			Zero Input Detect 2 Pin	(Table 13)					
	DZF2	O	When the input data of the group 1 follow	w total 8192 LRCK cycles with "0" input					
33	DZF2	U	data, this pin goes to "H". And when RS"	TN bit is "0", PWDAN bit is "0", this pin					
33		<u></u>	goes to "H". It always is in "L" when P/S	S pin is "H".					
	OVF	0	Analog Input Overflow Detect Pin						
	OVI	U	This pin goes to "H" if the analog input of						
			Zero Input Detect 1 Pin	(Table 13)					
34	DZF1	0	When the input data of the group 1 follow						
31	DZII		data, this pin goes to "H". And when RST						
			goes to "H". Output is selected by setting DZFE pin when P/S pin is "H".						
35	LOUT4-	О	DAC4 Lch Negative Analog Output Pin	470pF capacitor should be connected					
36	LOUT4+	О	DAC4 Lch Positive Analog Output Pin	between LOUT4- and LOUT4+.					
37	ROUT4-	О	DAC4 Rch Negative Analog Output Pin	470pF capacitor should be connected					
38	ROUT4+	О	DAC4 Rch Positive Analog Output Pin	between ROUT4- and ROUT4+.					
39	LOUT3-	О	DAC3 Lch Negative Analog Output Pin	470pF capacitor should be connected					
40	LOUT3+	О	DAC3 Lch Positive Analog Output Pin	between LOUT3- and LOUT3+.					
41	ROUT3-	О	DAC3 Rch Negative Analog Output Pin	470pF capacitor should be connected					
42	ROUT3+	О	DAC3 Rch Positive Analog Output Pin	between ROUT3- and ROUT3+.					
43	LOUT2-	О	DAC2 Lch Negative Analog Output Pin	470pF capacitor should be connected					
44	LOUT2+	О	DAC2 Lch Positive Analog Output Pin	between LOUT2- and LOUT2+.					
45	ROUT2-	О	DAC2 Rch Negative Analog Output Pin	470pF capacitor should be connected					
46	ROUT2+	0	DAC2 Rch Positive Analog Output Pin	between ROUT2- and ROUT2+.					
47	LOUT1-	О	DAC1 Lch Negative Analog Output Pin	470pF capacitor should be connected					
48	LOUT1+	О	DAC1 Lch Positive Analog Output Pin	between LOUT1- and LOUT1+.					
49	ROUT1-	0	DAC1 Rch Negative Analog Output Pin	470pF capacitor should be connected					
50	ROUT1+	0	DAC1 Rch Positive Analog Output Pin	between ROUT1- and ROUT1+.					
51	LIN	I	Lch Analog Input Pin						
52	RIN	I	Rch Analog Input Pin						
53	VCOM		Common Voltage Output Pin						
33	V COM		2.2µF capacitor should be connected to A						
54	VREFH	-	Positive Voltage Reference Input Pin, AVD	DD					

ASAHI KASEI [AK4589]

No.	Pin Name	I/O	Function			
55	AVDD	-	Analog Power Supply Pin, 4.75V~5.25V			
56	AVSS	-	Analog Ground Pin, 0V			
57	RX0	I	Receiver Channel 0 Pin (Internal biased pin. Internally biased at PVDD/2)			
58	NC	-	No Connect pin No internal bonding. This pin should be connected to PVSS.			
59	RX1	I	Receiver Channel 1 Pin (Internal biased pin. Internally biased at PVDD/2)			
60	TEST1	I	Test 1 Pin This pin should be connected to PVSS.			
61	RX2	I	Receiver Channel 2 Pin (Internal biased pin. Internally biased at PVDD/2)			
62	NC	-	No Connect pin No internal bonding. This pin should be connected to PVSS.			
63	RX3	I	Receiver Channel 3 Pin (Internal biased pin. Internally biased at PVDD/2)			
64	PVSS	-	PLL Ground pin			
65	R	-	External Resistor Pin $12k\Omega + /-1\%$ resistor should be connected to PVSS externally.			
66	PVDD	-	PLL Power supply Pin, 4.75V~5.25V			
67	RX4	I	Receiver Channel 4 Pin (Internal biased pin. Internally biased at PVDD/2)			
68	TEST2	I	Test 2 Pin This pin should be connected to PVSS.			
69	RX5	I	Receiver Channel 5 Pin (Internal biased pin. Internally biased at PVDD/2)			
70	CAD0	I	Chip Address 0 Pin (ADC/DAC part)			
71	RX6	I	Receiver Channel 6 Pin (Internal biased pin. Internally biased at PVDD/2)			
72	CAD1	I	Chip Address 1 Pin (ADC/DAC part)			
73	RX7	I	Receiver Channel 7 Pin (Internal biased pin. Internally biased at PVDD/2)			
74	I2C	I	Control Mode Select Pin. "L": 4-wire Serial, "H": I <sup>2</sup> C Bus			
75	DAUX2	I	Auxiliary Audio Data Input Pin (DIR/DIT part)			
76	VIN	I	V-bit Input Pin for Transmitter Output			
77	MCLK	I	Master Clock Input Pin			
78	TX0	О	Transmit Channel (Through Data) Output 0 Pin			
79	TX1	0	Transmit Channel Output1 pin When DIT bit = "0", Through Data. When DIT bit = "1", DAUX2 Data.			
80	INT0	0	Interrupt 0 Pin			

Note: All input pins except internal biased pins and Analog input pins (RX0-7, LIN, RIN) should not be left floating.

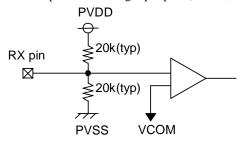

Internal biased pin Circuit

## ■ Handling of Unused Pin

The unused I/O pins should be processed appropriately as below.

Classification	Pin Name	Setting
Analog	RX0-7, LOUT1-4, ROUT1-4, LIN, RIN	These pins should be open.
	INT0-1, BOUT, XTO, MCKO1-2, COUT, UOUT,	These pins should be open.
D	VOUT, SDTO1-2, CDTO, DZF1-2, TX1-0	
Digital	CSN, DAUX1-2, SDTI1-4, XTL0-1	These pins should be connected to DVSS.
	TEST1-3	These pins should be connected to PVSS.



# **CS49400 Family DSP**

# Multi-Standard Audio Decoder

#### **Features**


- CS49300 Legacy Audio Decoder Support
- Dolby Digital EX<sup>TM</sup>, Dolby Pro Logic II<sup>TM</sup>
   DTS-ES 96/24<sup>TM</sup>, DTS 96/24<sup>TM</sup>, DTS-ES Discrete 6.1<sup>TM</sup>, DTS-ES Matrix 6.1<sup>TM</sup>, DTS Digital Surround M and DTS Virtual 5.1<sup>TM</sup>
- MPEG-2: AAC Multichannel 5.1
- MPEG Multichannel and Musicam
- MPEG-1/2, Layer III (MP3) DTS Neo:6<sup>TM</sup>, LOGIC7<sup>®</sup>, SRS Circle Surround II<sup>TM</sup>
- Cirrus Extra Surround<sup>TM</sup>, Cirrus Original Surround 6.1 (C.O.S. 6.1)<sup>TM</sup>
   THX Surround EX<sup>TM</sup>, THX Ultra2 Cinema<sup>TM</sup>
- 12-Channel Serial Audio Inputs
- Integrated 8K Byte Input Buffer
- Powerful 32-bit Audio DSP
- Customer Software Security Keys
- Large On-chip X,Y, and Program RAM
- Supports SDRAM, SRAM, FLASH memories
- 16-channel PCM output
- Dual S/PDIF Transmitters
- SPI Serial, and Motorola® and Intel® Parallel Host Control Interfaces
- GPIO support for all common sub-circuits

## **Description**

The CS49400 Audio Decoder DSP is targeted as a marketspecific consumer entertainment processor for AV Receivers and DVD Audio/Video Players. The device is constructed using an enhanced version of the CS49300 Family DSP audio decoder followed by a 32-bit programmable post-processor DSP, which gives the designer the ability to add product differentiation through the Cirrus Framework<sup>TM</sup> programming structure and Framework module library. Dolby Digital Pro Logic II, DTS Digital Surround, MPEG Multichannel, and Cirrus Original Surround 6.1 PCM Effects Processor (capable of generating such DSP audio modes as: Hall, Theater, Church) are included in the cost of the CS49400 Family DSP. Additional algorithms available through the Crystal Ware<sup>TM</sup> Software Licensing Program, give the designer the ability to further deliver end-product differentiation.

The CS49400 contains sufficient on-chip SRAM to support decoding all major audio decoding algorithms available today including: AAC Multichannel, DTS 96/24, DTS-ES 96/24. The CS49400 also supports a glueless SDRAM/SRAM for increased all-channel delays. The SRAM interface also supports connection to an external byte-wide EPROM for code storage or Flash memory thus allowing products to be fieldupgradable as new audio algorithms are developed.

This chip, teamed with Crystal Ware<sup>TM</sup> certified decoder library, Cirrus digital interface products and mixed signal data converters, enables the conception and design of next generation digital entertainment products.

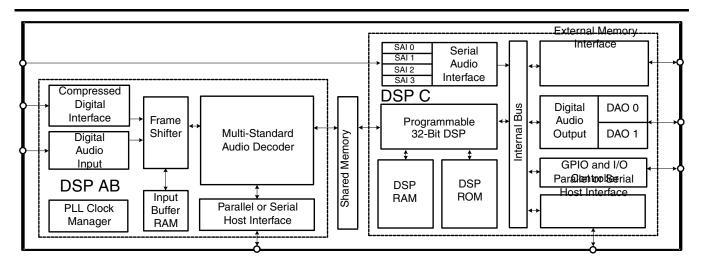

This document contains information for a new product. Cirrus Logic reserves the right to modify this product without notice.



#### 2. OVERVIEW

The CS49400 is a 24-bit fixed-point decoder DSP followed by a 32-bit fixed point programmable post-processor DSP. The decoder portion of the CS49400 is referred to as "DSPAB". The post-processor DSP is referred to as "DSPC". Both DSPAB and DSPC include their own dedicated peripherals such as serial and parallel control ports, and serial audio interfaces. DSPC also has a external memory interface which supports SRAM/SDRAM/EPROM.

All the decoding/processing algorithms listed below require delivery of PCM or IEC61937-packed compressed data via I2S or LJ formatted digital audio to the CS49400. Today the CS49400 will support all of the following decoding/processing standards:

- PCM Pass-Through/PCM Upsampler
- Dolby Digital<sup>TM</sup> (with Dolby Pro Logic)<sup>TM</sup>
- Dolby Digital Pro Logic II<sup>TM</sup>
- Dolby Digital EX<sup>TM</sup>
- Dolby Digital EX Pro Logic II<sup>TM</sup>
- MPEG-2, Advanced Audio Coding Algorithm (AAC)
- MPEG Multichannel
- MPEG Multichannel with Dolby Pro Logic II<sup>TM</sup>
- MPEG-1/2, Layer III (MP3)
- DTS Digital Surround<sup>TM</sup>
- DTS 96/24<sup>TM</sup> (Front-end Decoder)
- DTS Digital Surround<sup>TM</sup> with Dolby Pro Logic II<sup>TM</sup>
- DTS-ES Extended Surround<sup>TM</sup>
   (DTS-ES Discrete 6.1 and DTS-ES Matrix 6.1)
- DTS-ES 96/24<sup>™</sup> (Front-end Decoder)
- DTS Neo:6<sup>TM</sup>
- LOGIC7®
- SRS Circle Surround<sup>TM</sup> II

## • HDCD®

All of the above audio decoding/processing algorithms and the associated application notes (AN208 and their corresponding appendices) are available through the Crystal Ware TM Software Licensing Program. Please refer to AN208 for the latest listing of application codes for DSPAB.

DSPC is unique to DSPAB in the sense that the designer may choose to just load a standard or enhanced application code (.ULD file) from the Crystal Ware Software Library or if they have the Cirrus Framework access to Development Kit, they may choose to build their own application code from a variety of modules. A DSPC application code contains all of the necessary post-processing modules, such as Crossbar Mixer, Pro Logic Module, Bass Manager Module, and Audio Manager (Kernel). A module is just a single processing module, such as Tone Control, Parametric/Graphic EQ, or Dolby Pro Logic matrix decoder. DSPC on the CS49400 will support the following post-processing application codes and/or modules:

- Standard Post-Processor (includes the following modules all compiled into one .ULD file):
   Downmixer module, Dualzone module, Crossbar Mixer module, 7.1 Channel Bass Manager module, Audio Manager module (Volume Control, Trim Control and Channel Remap), and Delay module
- Advanced Post-Processor (includes the all of the standard post-processing modules plus the Tone Control module, Parametric EQ module, Re-EQ module in all compiled into one .ULD )
- Dolby Pro Logic<sup>TM</sup>
- Dolby Pro Logic II<sup>™</sup>
- SRS Circle Surround II<sup>TM</sup>
- DTS Neo:6<sup>TM</sup>
- LOGIC7<sup>®</sup>
- THX<sup>®</sup> Surround EX<sup>TM</sup> 7.1 Channel Post-Processor



- THX<sup>®</sup> Ultra2 Cinema<sup>TM</sup> 7.1 Channel Post-Processor
- Cirrus Extra Surround<sup>TM</sup>
- Cirrus Original Multichannel Surround<sup>TM</sup>
- Virtual Dolby Digital<sup>TM</sup>/Virtual Dolby Digital Pro Logic II<sup>TM</sup> Virtualizer Module
- VMAx VirtualTheater TM Virtualizer Module
- HDCD<sup>®</sup> Multichannel Decoder
- DVD-Audio/Video and Multichannel SACD Bass Management
- DTS/DTS-ES 96/24<sup>TM</sup> Back-End Decoder
- DTS/DTS-ES 96/24<sup>TM</sup> Back-End Decoder with THX<sup>®</sup> Ultra2 Cinema<sup>TM</sup>

All of the above audio post-processing applications codes and/or Cirrus FrameworkTM modules and the associated application notes (AN209 and the associated appendices) are available through the Crystal WareTM Software Licensing Program. All standard or enhanced post-processing code modules are only available to customers who qualify for the Cirrus Framework<sup>TM</sup> CS49400 Family DSPC Programming Kit. Please refer to AN209 for the latest listing of application codes and Cirrus FrameworkTM modules available for DSPC.

#### 2.1 DSPAB

DSPAB is an enhanced version of the CS49300. It was designed to have legacy code support for all decoder applications developed for the CS49300. It includes performance enhancements such as the ability to decode AAC without the need for external SRAM memory. DSPAB has a Digital Audio Input (DAI) and a Compressed Data Input (CDI) port for data delivery in either I<sup>2</sup>S or LJ format. DSPAB can be controlled serially using the SPI standard and can also be controlled via a Parallel host control port using the Motorola<sup>®</sup> or Intel<sup>®</sup> communication standards.

#### **2.2 DSPC**

DSPC is a 32-bit, general-purpose, fixed-point RAM-based processor which includes on-chip ROM tables. It has been designed with a generous amount of on-chip program and data RAM, and has all necessary peripherals required to support the latest standards in consumer entertainment products such as AV receivers and DVD-Audio/Video players.

DSPC has on-chip data and program RAM, and both external SDRAM and SRAM memory interfaces. These interfaces can be used to expand the data memory. DSPC also has its own 8-channel digital audio input for post-processing PCM from a Multichannel Super Audio CD (SACD) input or DVD-Audio/Video input, via high-performance A/Ds or from some other type of multichannel digital input, capable of delivering 4 stereo digital audio channels such as IEEE1394 (a.k.a. I-Link<sup>®</sup>) or Firewire<sup>®</sup>). Data can be delivered to this port using the standard audio formats (I<sup>2</sup>S or LJ). DSPC can be controlled serially using the SPI standard or via Parallel host control port using the Motorola<sup>®</sup> or Intel<sup>®</sup> standard. DSPC has a Digital Audio output port that has eight stereo serial data outputs for a total of 16 channels. Data can be delivered from these outputs in serial I<sup>2</sup>S or LJ format. Two of these outputs (AUDAT3, AUDAT7) can be configured as a IEC60958-format S/PDIF transmitter.

This document focuses on the electrical features of the CS49400. The features are described from a hardware design perspective. It should be understood that not all of the features portrayed in this document are supported by all of the versions of application code available. The application code user's guides should be consulted to determine which hardware features are supported by the software.

Please note that a download of application software is required each time the part is powered up. This term should be interpreted as meaning the transfer of application code into the internal memory of the part



from either an external microcontroller or through one of the boot procedures listed in Section 8.

#### 3. TYPICAL CONNECTION DIAGRAMS

Four typical connection diagrams have been presented to illustrate using the part with the different communication modes available. They are as follows:

Figure 27, "SPI Control with External Memory - 144 Pin Package" on page 38.

Figure 28, "Intel<sup>®</sup> Parallel Control Mode - 144 Pin Package" on page 39.

Figure 29, "Motorola<sup>®</sup> Parallel Control Mode - 144 Pin Package" on page 40.

The following should be noted when viewing the typical connection diagrams:

**Note:** The pins are grouped functionally in each of the typical connection diagrams. Please be aware that the CS49400 symbol may appear differently in each diagram.

The external memory interface is supported when a serial or parallel communication mode has been chosen.

## 3.1 Multiplexed Pins

The CS49400 incorporates a large amount of flexibility into a 144 pin package. The pins are internally multiplexed to serve multiple purposes. Some pins are designed to operate in one mode at power up, and serve a different purpose when the DSP is running. Other pins have functionality which can be controlled by the application running on the DSP. In order to better explain the behavior of the part, the pins which are multiplexed have been given multiple names. Each name is specific to the pin's operation in a particular mode.

In this document, pins will be referred to by their functionality. Section 12 "Pin Description" on page 86 describes each pin of the CS49400 and lists all of its names. Please refer to this section when exact pin numbers are in question.

## 3.2 Termination Requirements

The CS49400 incorporates open drain pins which must be pulled high for proper operation. FINTREQ and INTREQ are always open drains which requires a pull-up for proper operation.

Due to the internal, multiplexed design of the pins, certain signals may or may not require termination depending on the mode being used. If a parallel host communication mode is not being used, all parallel control pins must be terminated or driven as these pins will come up as high impedance inputs and will be prone to oscillation if they are left floating. The specific termination requirements may vary since the state of some of the GPIO pins will determine the communication mode at the rising edge of reset (please see Section 6 "Control" on page 41 for more information). For the explicit termination requirements of each communication mode please see the typical connection diagrams.

Generally a 3.3k Ohm resistor is recommended for open drain and mode select pins. A 10k Ohm resistor is sufficient for all other unused inputs.

## 3.3 Phase Locked Loop Filter

The internal phase locked loop (PLL) of the CS49400 requires an external filter. The topology of this filter is shown in the typical connection diagrams. The component values are shown below. Care should be taken when laying out the filter circuitry to minimize trace lengths and to avoid any high frequency signals. Any noise coupled onto the filter circuit will be directly coupled into the PLL, which could affect performance.

Reference Designator	Value
C1	2.2uF
C2	1200pF
C3	68pF
R1	3k Ohm

**Table 1. PLL Filter Component Values** 



#### 4. POWER

The CS49400 requires a 2.5V digital power supply for the core logic and 2.5V I/O and a 2.5V analog power supply for the internal PLL. For systems with external memory that runs on 3.3V, a 3.3V digital power supply is required on the VDDSD pins along with four digital grounds on VSSSD. There are seven digital power pins, VDD1 through VDD7, along with seven digital grounds, VSS1 through VSS7. There is one analog power pin, PLLVDD, and one analog ground, PLLVSS. The recommendations given below for decoupling and power conditioning of the CS49400 will help to ensure reliable performance.

## 4.1 Decoupling

It is necessary to decouple the power supply by placing capacitors directly between the power and ground of the CS49400. Each pair of power/ground pins (VDD1/VSS1, etc.) should have its own decoupling capacitors. The recommended procedure is to place both a 0.1uF and a 1uF capacitor as close as physically possible to each power pin. The 0.1uF capacitor should be closest to the part (typically 5mm or closer).

## 4.2 Analog Power Conditioning

In order to obtain the best performance from the CS49400's internal PLL, the analog power supply PLLVDD must be as noise-free as possible. A ferrite bead and two capacitors should be used to filter the VDD to generate PLLVDD. This power scheme is shown in the typical connection diagrams.

#### 4.3 Ground

For two layer circuit boards, care should be taken to have sufficient ground between the DSP and parts in which it will be interfacing (DACs, ADCs, S/PDIF Receivers, microcontrollers, and especially external memory). Insufficient ground can degrade noise margins between devices resulting in data integrity problems.

#### 4.4 Pads

The CS49400 has two different I/O voltage levels. All signal pins not associated with the External SRAM/SDRAM memory interface operate from the 2.5V supply and are 3.3V tolerant. The external SRAM/SDRAM memory interface operates at 3.3V only. However, if the external memory interface is not used VDDSD1-4 may be connected to 2.5V.



#### 12.0 PIN DESCRIPTION

# 12.1 144-Pin LQFP Package Pin Layout

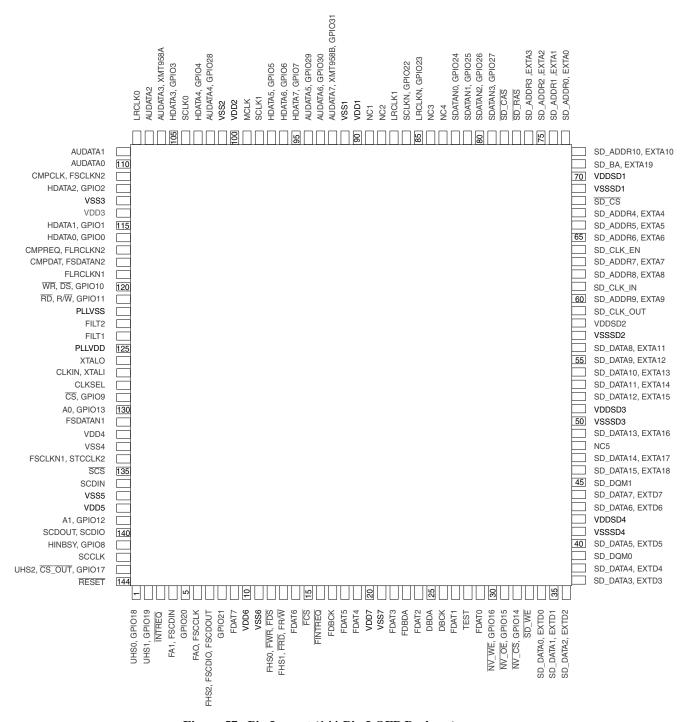


Figure 57. Pin Layout (144-Pin LQFP Package)



## 12.2 100-Pin LQFP Package Pin Layout

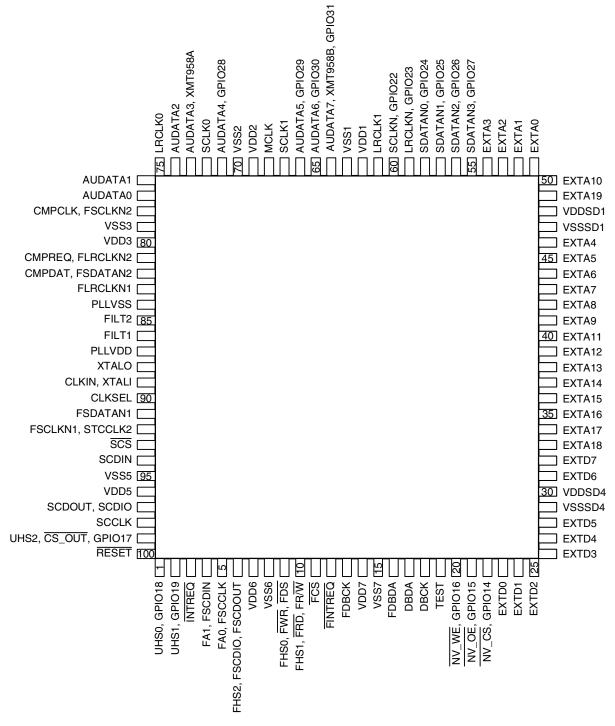


Figure 58. Pin Layout (100-Pin LQFP Package)



#### 12.3 Pin Definitions

#### FILT1 — Phase-Locked Loop Filter

Connects to an external filter for the on-chip phase-locked loop.

#### FILT2 — Phase Locked Loop Filter

Connects to an external filter for the on-chip phase-locked loop.

#### CLKIN, XTALI — External Clock Input/Crystal Oscillator Input

CS49400 clock input. This pin accepts an external clock input signal that is used to drive the internal core logic. When in internal clock mode (CLKSEL == VSS), this input is connected to the internal PLL from which all internal clocks are derived. When in external clock mode (CLKSEL == VDD), this input is connected to the DSP clock. Alternatively, a 12.288 mhZ crystal oscillator can be connected between XTALI and XTALO. *INPUT* 

#### XTALO — Crystal Oscillator Output

Crystal oscillator output. OUTPUT

#### CLKSEL — DSP Clock Select

This pin selects the internal source clock. When CLKSEL is low, CLKIN is connected to the internal PLL from which all internal clocks are derived. When CLKSEL is high, the PLL is bypassed and the external clock directly drives all input logic. *INPUT* 

#### FDAT7 — DSPAB Bidirectional Data Bus

FDAT6

FDAT5

FDAT4

FDAT3

FDAT2

FDAT1

FDAT0

In parallel host mode, these pins provide a bidirectional data bus to DSPAB. These pins have an internal pull-up.

BIDIRECTIONAL - Default: INPUT

#### FA0, FSCCLK — Host Parallel Address Bit Zero or Serial Control Port Clock

In parallel host mode, this pin serves as one of two address input pins used to select one of four parallel registers. In serial host mode, this pin serves as the serial control clock signal, specifically as the SPI clock input. *INPUT* 



#### FA1, FSCDIN — Host Address Bit One or SPI Serial Control Data Input

In parallel host mode, this pin serves as one of two address input pins used to select one of four parallel registers. In SPI serial host mode, this pin serves as the data input. *INPUT* 

## FHS1, FRD, FR/W — Mode Select Bit 1 or Host Parallel Output Enable or Host Parallel R/W

DSPAB control port mode select bit 1. This bit is one of 3 control port select bits that are sampled on the rising edge of RESET to determine the control port mode of DSPAB. In Intel parallel host mode, this pin serves as the active-low data bus enable input. In Motorola parallel host mode, this pin serves as the read-high/write-low control input signal. In serial host mode, this pin can serve as the external memory active-low data-enable output signal. BIDIRECTIONAL - Default: INPUT

#### FHS0, FWR, FDS — Mode Select Bit 0 or Host Write Strobe or Host Data Strobe

DSPAB control port mode select bit 0. This bit is one of 3 control port select bits that are sampled on the rising edge of RESET to determine the control port mode of DSPAB. In Intel parallel host mode, this pin serves as the active-low data-write-input strobe. In Motorola parallel host mode, this pin serves as the active-low data-strobe-input signal. In serial host mode, this pin can serve as the external-memory active-low write-enable output signal. BIDIRECTIONAL - Default: INPUT

# FCS — Host Parallel Chip Select, Host Serial SPI Chip Select

In parallel host mode, this pin serves as the active-low chip-select input signal. In serial host SPI mode, this pin is used as the active-low chip-select input signal. *INPUT* 

# FHS2, FSCDIO, FSCDOUT — Mode Select Bit 2 or Serial Control Port Data Input and Output, Parallel Port Type Select

DSPAB control port mode select bit 2. This bit is one of 3 control port select bits that are sampled on the rising edge of RESET to determine the control port mode of DSPAB. In SPI mode this pin serves as the data output pin. In parallel host mode, this pin is sampled at the rising edge of RESET to configure the parallel host mode as an Intel type bus or as a Motorola type bus. BIDIRECTIONAL - Default: INPUT

#### FINTREQ — Control Port Interrupt Request

Open-drain interrupt-request output. This pin is driven low to indicate that the DSP has outgoing control data that should be read by the host.

OPEN DRAIN I/O - Requires 3.3K Ohm Pull-Up

#### FSCLKN1, STCCLK2 — PCM Audio Input Bit Clock

Digital-audio bit clock input. FSCLKN1 operates asynchronously from all other DSPAB clocks. In master mode, FSCLKN1 is derived from DSPAB's internal clock generator. The active edge of FSCLKN1 can be programmed by the DSP. BIDIRECTIONAL - Default: INPUT

#### FLRCLKN1 — PCM Audio Input Sample Rate Clock



Digital-audio frame clock input. FLRCLKN1 typically is run at the sampling frequency. FLRCLKN1 operates asynchronously from all other DSPAB clocks. The polarity of FLRCLKN1 for a particular subframe can be programmed by the DSP.

BIDIRECTIONAL - Default: INPUT

#### FSDATAN1 — PCM Audio Data Input One

Digital-audio data input that can accept from one compressed line or 2 channels of PCM data. FSDATAN1 can be sampled with either edge of FSCLKN1, depending on how FSCLKN1 has been configured. *INPUT* 

#### CMPCLK, FSCLKN2 — PCM Audio Input Bit Clock

Digital-audio bit clock input. FSCLKN2 operates asynchronously from all other DSPAB clocks. The active edge of FSCLKN2 can be programmed by the DSP.

BIDIRECTIONAL - Default: INPUT

#### CMPDAT, FSDATAN2 — PCM Audio Data Input Number Two

Digital-audio data input that can accept either one compressed line or 2 channels of PCM data. FSDATAN2 can be sampled with either edge of FSCLKN2, depending on how FSCLKN2 has been configured.

BIDIRECTIONAL - Default: INPUT

#### FDBCK — Reserved

This pin is reserved and should be pulled up with an external 3.3k resistor. INPUT

#### FDBDA — Reserved

This pin is reserved and should be pulled up with an external 3.3k resistor.

BIDIRECTIONAL - Default: INPUT

#### PLLVDD — PLL Supply Voltage

2.5 V PLL supply.

#### PLLVSS — PLL Ground Voltage

PLL ground.

#### **RESET** — Master Reset Input

Asynchronous active-low master reset input. Reset should be low at power-up to initialize the DSP and to guarantee that the device is not active during initial power-on stabilization periods. At the rising edge of reset the host interface mode of DSPAB is selected contingent on the state of the FHS0, FHS1, and FHS2 pins. At the rising edge of reset the host interface mode of DSPC is selected contingent on the state of the UHSO, UHS1, and UHS2 pins. If reset is low all bidirectional pins are high-Z inputs. *INPUT* 

#### TEST — Reserved



This should be tied low for normal operation. INPUT

#### MCLK — Audio Master Clock

Bidirectional master audio clock. As an output, MCLK provides a low jitter oversampling clock. MCLK supports all standard oversampling frequencies. BIDIRECTIONAL - Default: INPUT

#### SCLK0 — Audio Output Bit Clock

Bidirectional digital-audio output bit clock for AUDATA0, AUDATA1, AUDATA2, and AUDATA3. As an output, SCLK0 can provide 32 Fs, 64 Fs, 128 Fs, 256 Fs, or 512 Fs frequencies and is synchronous to MCLK. As an input, SCLK0 is independent of MCLK.

BIDIRECTIONAL - Default: INPUT

#### SCLK1 — Audio Output Bit Clock

Bidirectional digital-audio output bit clock for AUDATA4, AUDATA5, AUDATA6, and AUDATA7. As an output, SCLK1 can provide 32 Fs, 64 Fs, 128 Fs, 256 Fs, or 512 Fs frequencies and is synchronous to MCLK. As an input, SCLK1 is independent of MCLK.

BIDIRECTIONAL - Default: INPUT

#### LRCLK0 — Audio Output Sample Rate Clock

Bidirectional digital-audio output frame clock for AUDATA0, AUDATA1, AUDATA2, and AUDATA3. As an output, LRCLK0 can provide all standard output sample rates up to 192 kHz and is synchronous to MCLK. As an input, LRCLK0 is independent of MCLK.

BIDIRECTIONAL - Default: INPUT

#### LRCLK1 — Audio Output Sample Rate Clock

Bidirectional digital-audio output frame clock for AUDATA4, AUDATA5, AUDATA6, and AUDATA7. As an output, LRCLK1 can provide all standard output sample rates up to 192 kHz and is synchronous to MCLK. As an input, LRCLK1 is independent of MCLK.

BIDIRECTIONAL - Default: INPUT

#### AUDATA0 — Digital Audio Output 0

PCM digital-audio data output. OUTPUT

#### AUDATA1 — Digital Audio Output 1

PCM digital-audio data output. OUTPUT

## **AUDATA2** — Digital Audio Output 2

PCM digital-audio data output. OUTPUT

#### AUDATA3, XMT958A — Digital Audio Output 3, S/PDIF Transmitter



CMOS level output that outputs a biphase-mark encoded (S/PDIF) IEC60958 signal or digital audio data which is capable of carrying two channels of PCM digital audio. *OUTPUT* 

#### AUDATA4, GPIO28 — Digital Audio Output 4, General Purpose I/O

PCM digital-audio data output. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: OUTPUT

#### AUDATA5, GPIO29 — Digital Audio Output 5, General Purpose I/O

PCM digital-audio data output. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: OUTPUT

#### AUDATA6, GPIO30 — Digital Audio Output 6, General Purpose I/O

PCM digital-audio data output. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. *BIDIRECTIONAL - Default: OUTPUT* 

# AUDATA7, XMT958B, GPIO31 — Digital Audio Output 7, S/PDIF Transmitter, General Purpose I/O

CMOS level output that contains a biphase-mark encoded (S/PDIF) IEC60958 signal or digital audio data which is capable of carrying two channels of PCM digital audio. This pin can also act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: OUTPUT

#### **DBCK** — Debug Clock

Must be tied high to 3.3k ohm resistor. INPUT

#### **DBDA** — Debug Data

Must be tied high to 3.3k ohm resistor. BIDIRECTIONAL - Default: INPUT

#### SLCKN, GPIO22 — PCM Audio Input Bit Clock, General Purpose I/O

Digital-audio bit clock that is an input. SCLKN operates asynchronously from all other DSPAB clocks. The active edge of SCLKN can be programmed by the DSP. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC.

BIDIRECTIONAL - Default: INPUT

#### LRCLKN, GPIO23 — PCM Audio Input Sample Rate Clock, General Purpose I/O

Digital-audio frame clock input. LRCLKN operates asynchronously from all other DSPAB clocks. The polarity of LRCLKN for a particular subframe can be programmed by the DSP. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: INPUT

#### SDATANO, GPIO24 — PCM Audio Input Data, General Purpose I/O

Digital-audio PCM data input. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: INPUT

#### SDATAN1, GPIO25 — PCM Audio Input Data, General Purpose I/O



Digital-audio PCM data input. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: INPUT

#### SDATAN2, GPIO26 — PCM Audio Input Data, General Purpose I/O

Digital-audio PCM data input. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: INPUT

#### SDATAN3, GPIO27 — PCM Audio Input Data, General Purpose I/O

Digital-audio PCM data input. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: INPUT

## SCS — Host Serial SPI Chip Select

SPI mode active-low chip-select input signal. INPUT

#### SCCLK — Serial Control Port Clock

This pin serves as the serial SPI clock input. INPUT

#### SCDIN — SPI Serial Control Data Input

In SPI mode this pin serves as the data input pin. INPUT

#### SCDOUT, SCDIO — Serial Control Port Data Input and Output

In SPI mode this pin serves as the data output pin. BIDIRECTIONAL - Default: OUTPUT in SPI mode

#### INTREQ — Control Port Interrupt Request

Open-drain interrupt-request output. This pin is driven low to indicate that DSPC has outgoing control data and should be serviced by the host.

OPEN DRAIN I/O - Requires 3.3K Ohm Pull-Up



HDATA7, GPIO7 — DSPC Bidirectional Data Bus, General Purpose I/O

HDATA6, GPIO6

HDATA5, GPIO5

HDATA4, GPIO4

HDATA3, GPIO3

HDATA2, GPIO2

HDATA1, GPIO1

HDATA0, GPIO0

In parallel host mode, these pins provide a bidirectional data bus. These pins can also act as general purpose input or output pins that can be individually configured and controlled by DSPC. These pins have an internal pull-up. BIDIRECTIONAL - Default: INPUT

#### A0, GPIO13 — Host Parallel Address Bit 0, General Purpose I/O

In parallel host mode, this pin serves as the LS Bit of a two bit address input used to select one of four parallel registers. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: INPUT

#### A1, GPIO12 — Host Address Bit 1, General Purpose I/O

In parallel host mode, this pin serves as the MS Bit of a two bit address input used to select one of four parallel registers. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: INPUT

# RD, R/W, GPIO11 — Host Parallel Output Enable, Host Parallel R/W, General Purpose I/O

In Intel parallel host mode, this pin serves as the active-low data bus enable input. In Motorola parallel host mode, this pin serves as the read-high/write-low control input signal. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. This pin has an internal pull-up. *BIDIRECTIONAL - Default: INPUT* 

# WR, DS, GPIO10 — Host Write Strobe, Host Data Strobe, General Purpose I/O

In Intel parallel host mode, this pin serves as the active-low data bus enable input. In Motorola parallel host mode, this pin serves as the read-high/write-low control input signal. In serial host mode, this pin can serve as a general purpose input or output bit. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. This pin has an internal pull-up.

BIDIRECTIONAL - Default: INPUT

# CS, GPIO9 — Host Parallel Chip Select, General Purpose I/O

In parallel host mode, this pin serves as the active-low chip-select input signal. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. This pin has an internal pull-up. *BIDIRECTIONAL - Default: INPUT* 



#### HINBSY, GPIO8 — Input Host Message Status, General Purpose I/O

This pin indicates that serial or parallel communication data written to the DSP has not been read yet. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. This pin has an internal pull-up. BIDIRECTIONAL - Default: OUTPUT

SD\_DATA15, EXTA18 — SDRAM Data Bus, SRAM External Address Bus

SD\_DATA14, EXTA17

SD\_DATA13, EXTA16

SD\_DATA12, EXTA15

SD\_DATA11, EXTA14

SD\_DATA10, EXTA13

SD DATA9, EXTA12

SD\_DATA8, EXTA11

SDRAM data bus 15:8. SRAM external address bus 18:11. OUTPUT

SD\_DATA7, EXTD7 — SDRAM Data Bus, SRAM External Data Bus

SD\_DATA6, EXTD6

SD\_DATA5, EXTD5

SD DATA4, EXTD4

SD\_DATA3, EXTD3

SD\_DATA2, EXTD2

SD\_DATA1, EXTD1

SD\_DATA0, EXTD0

SDRAM data bus 7:0. SRAM external data bus 7:0. BIDIRECTIONAL - Default: INPUT

SD\_ADDR10, EXTA10 — SDRAM Address Bus, SRAM External Address Bus

SD\_ADDR9, EXTA9

SD\_ADDR8, EXTA8

SD\_ADDR7, EXTA7

SD\_ADDR6, EXTA6

SD\_ADDR5, EXTA5 SD\_ADDR4, EXTA4

SD\_ADDR3, EXTA3

SD\_ADDR2, EXTA2

SD ADDR1, EXTA1

SD ADDR0, EXTA0

SDRAM address bus 10:0. SRAM external address bus 10:0. OUTPUT



#### SD\_CLK\_OUT — SDRAM Clock Output

SDRAM clock output. OUTPUT

#### SD\_CLK\_IN — SDRAM Re-timing Clock Input

SDRAM re-timing clock input. INPUT

#### SD\_CLK\_EN — SDRAM Clock Enable

SDRAM clock enable. OUTPUT

#### SD BA, EXTA19 — SDRAM Bank Address Select, SRAM External Address Bus

SDRAM bank address select. SRAM external address bus 19. OUTPUT

#### SD\_CS — SDRAM Chip Select

SDRAM chip select. OUTPUT

## SD\_RAS — SDRAM Row Address Strobe

SDRAM row address strobe. OUTPUT

#### SD\_CAS — SDRAM Column Address Strobe

SDRAM column address strobe. OUTPUT

#### SD WE — SDRAM Write Enable

SDRAM write enable. OUTPUT

#### SD\_DQM1 — SDRAM Data Mask 1

SDRAM data mask 1. *OUTPUT* 

#### SD DQM0 — SDRAM Data Mask 2

SDRAM data mask 0. OUTPUT

#### NV\_CS, GPIO14 — SRAM Chip Select, General Purpose I/O

SRAM/Flash chip select. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: OUTPUT

#### NV\_OE, GPIO15 — SRAM Output Enable, General Purpose I/O

SRAM/Flash output enable. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: OUTPUT



#### NV\_WE, GPIO16 — SRAM Write Enable, General Purpose I/O

SRAM/Flash write enable. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: OUTPUT

# UHS2, CS\_OUT, GPIO17 — Mode Select Bit 2, External Serial Memory Chip Select, General Purpose I/O

DSPC control port mode select bit 2. This pin is sampled at the rising edge of RESET and is one of three pins used to select the control port mode. In serial control port mode, this pin can serve as an output to provide the chip-select for a serial EEPROM. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. BIDIRECTIONAL - Default: INPUT

#### UHS0, GPIO18 — Mode Select Bit 0, General Purpose I/O

DSPC control port mode select bit 0. This pin is sampled at the rising edge of RESET and is one of three pins used to select the control port mode. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC.

BIDIRECTIONAL - Default: INPUT

#### UHS1, GPIO19 — Mode Select Bit 1, General Purpose I/O

DSPC control port mode select bit 1. This pin is sampled at the rising edge of RESET and is one of three pins used to select the control port mode. This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC.

BIDIRECTIONAL - Default: INPUT

#### GPIO20 — General Purpose I/O

This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. This pin has an internal pull-up.

BIDIRECTIONAL - Default: INPUT

#### **GPIO21** — General Purpose I/O

This pin can act as a general-purpose input or output that can be individually configured and controlled by DSPC. This pin has an internal pull-up.

BIDIRECTIONAL - Default: INPUT

#### VDD[7:1] — 2.5V Supply Voltage

2.5V supply voltage.

#### VSS — 2.5V Ground

2.5V ground.



# NC[5:1] — No Connect

Recommended tie to ground.

# VDDSD[4:1] — 3.3V SDRAM/SRAM/EPROM Interface Supply


3.3V SDRAM/SRAM/EPROM supply.

#### VSSSD — 3.3V SDRAM/SRAM/EPROM Interface Ground

3.3V ground.


# BLOCK DIAGRAM




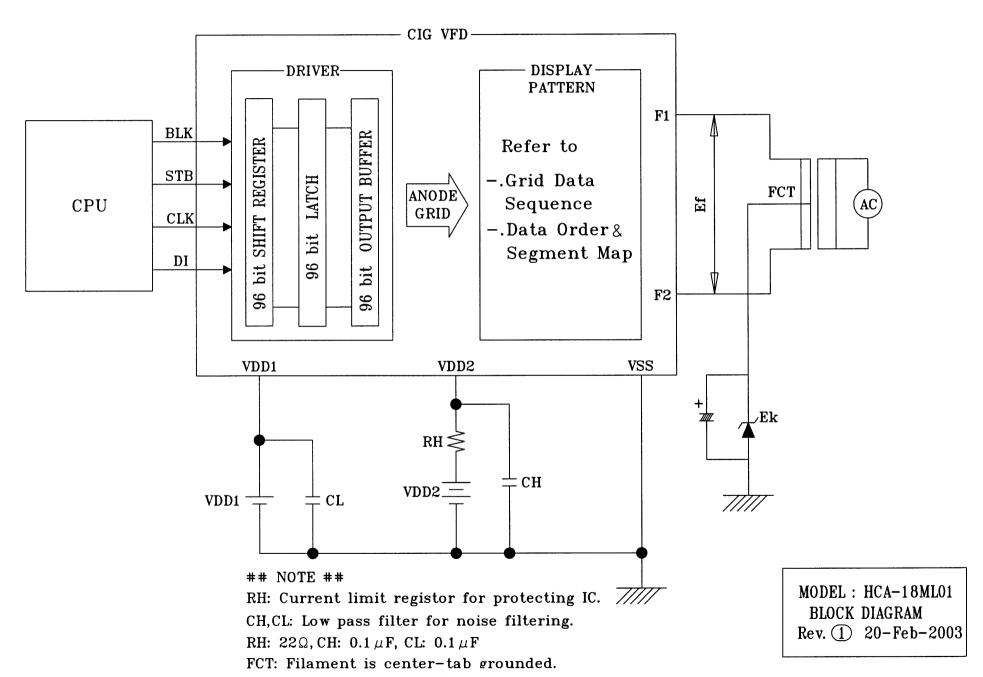


# OUTER DIMENSIONS



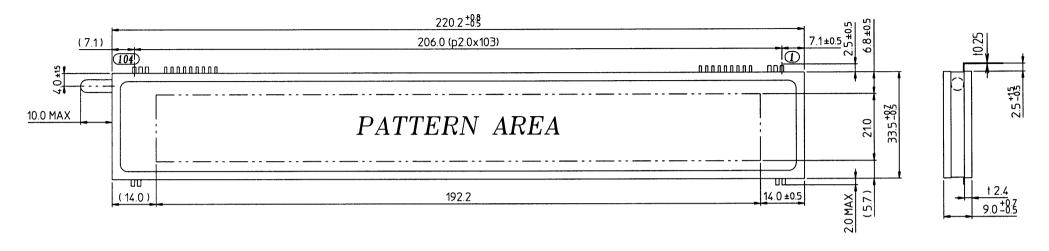

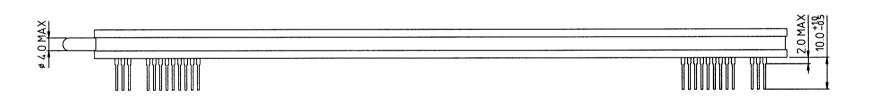

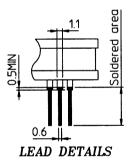

# PIN CONNECTION

	PIN NO.	104	103	102	101	100	99	98	97	96	95	94	93	92	91	90~15	14~6	5	4	3	2	1
I	CONNECTION	F2	F2	F2	NP	NP	VDD2	VSS	VSS	CLK	DO	DI	BLK	STB	VDD1	NP	NC	NP	NP	F1	F1	F1

\*Notes

Fn: Filament Pin

\* DO(Serial data output): Be left open if not used.

NP: No Pin

NC: No Connection Pin

MODEL: HCA-18ML01 OUTER DIMENSIONS

Rev. 1 20-Feb-2003



# 2-CHANNEL ELECTRONIC VOLUME

#### **■** GENERAL DESCRIPTION

NJW1159 is a two channel electronic volume IC. It is included output buffer amplifier and also resistor output terminal for using external amplifier to customize for your application. These functions are controlled by three-wired serial data. And the chip selector is available for using four chips on same serial bus line. It's available for two-channel stereo and or multi-channel audio volume.

#### **■ PACKAGE OUTLINE**







NJW1159V

NJW1159M

NJW1159D

#### **■ FEATURES**


- Operating Voltage
- Three-Wired Serial Data Control
- Chip Selector
- Volume
- Bi-CMOS Technology
- Package Outline

±4.5 to ±7.5V

available for using four chips on same serial bus line. 0 to -95dB/1dBstep, MUTE

SSOP16, DMP16, DIP16


#### ■ BLOCK DIAGRAM

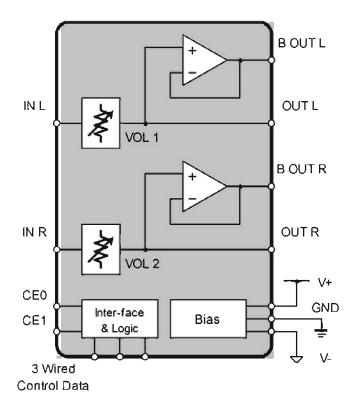

harman/kardon **AVR340** 

# **NJW1159**

#### **■ PIN ASSIGNMENT**

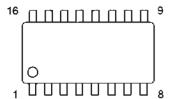

No.	Symbol	Function
1	OUTL	Lch External Opamp Input Connection Terminal
2	BOUTL	Lch Output
3	VDD OUT	Internal VDD Noise Rejection Capacitor Terminal
4	BOUTR	Rch Output
5	OUTR	Rch External Opamp Input Connection Terminal
6	VSS_OUT	Internal VSS Noise Rejection Capacitor Terminal
7	V+	+ Power supply voltage input
8	V-	- Power supply voltage input
9	INL	Lch Input
10	INR	Rch Input
11	CE0	Chip Enable Terminal 0
12	CE1	Chip Enable Terminal 1
13	DATA	Control data signal input
14	CLOCK	Clock signal input
15	LACTH	Latch signal input
16	GND	Ground

■ ABSOLUTE MAXIMUM RATING (Ta=25°C)

PARAMETER	SYMBOL	RATING	UNIT
Power Supply Voltage	V*/\	+8/-8	V
Maximum Input Voltage	ViM	V <sup>+</sup> /V <sup>-(-)</sup>	V
Power Dissipation	Po	SSOP16 ; 300 DMP16 ; 300 DIP16 ; 500	mW
Operating Temperature Range	Topr	-40 to +85	°C
Storage Temperature Range	Tstg	-40 to +125	°C

(★) For the maximum input voltage less than V\*/V\*

ELECTRICAL CHARACTER	(ISTICS (Ta=2	25°C,V+/V- = +7V/-7V, R <sub>L</sub> =47KΩ)
PARAMETER	SYMBOL	TEST CONDITION

PARAMETER	SYMBOL	TEST CONDITION	MIN.	TYP.	MAX.	UNIT
◆ Power Supply				•		
Operating Voltage 1	V+		4.5	7.0	7.5	V
Operating Voltage 2	V-		-7.5	-7.0	-4.5	V
Supply Current 1	Icc	No signal	-	4.5	9.0	mA
Supply Current 2	lee	No signal	-	4.5	9.0	mA
♦ Input/Output Character	istics (BOUT	L : 2pin, BOUTR : 4pin)		•		
Maximum Output Voltage	Vom	f=1kHz,THD=1% Volume=0dB	3.0	4.0	-	Vrms
Voltage Gain	Gv	V <sub>IN</sub> =1Vrms, f=1kHz Volume=0dB	-0.5	0	0.5	dВ
Channel Gain Balance 1	ΔG <sub>V1</sub>	V <sub>IN</sub> =1Vrms, f=1kHz Volume=0dB	-0.5	0	0.5	dB
Channel Gain Balance 2	∆G <sub>V2</sub>	V <sub>IN</sub> =1Vrms, f=1kHz Volume=-60dB	-1.0	0	1.0	dB
Maximum Attenuation	Атт	V <sub>IN</sub> =1Vrms, f=1kHz Volume=-95dB, A-weight	-	-95	-	dB
Mute Level	Mute	V <sub>IN</sub> =1Vrms, f=1kHz Volume=Mute, A-weight	-	-110	-	dB
Output Noise Voltage	VNO	Volume=0dB, Rg=0Ω, A-weight	-	-105 (5.6μ)	-95 (17.8μ)	dBV (Vrms)
Total Harmonic Distortion	THD	Vo=1Vrms, f=1kHz, Volume=0dB, BW=400-30kHz	-	0.005	0.05	%
Channel Separation	cs	Vo=1Vrms, f=1kHz, A-weight Volume=0dB, Rg=0Ω	-	-100	-90	dB




# **HCF4053B**

# TRIPLE 2-CHANNEL ANALOG MULTIPLEXER

- LOW "ON" RESISTANCE : 125Ω (Typ.) OVER 15V p.p SIGNAL-INPUT RANGE FOR VDD - VEE = 15V
- HIGH "OFF" RESISTANCE : CHANNEL LEAKAGE ± 100pA (Typ.) at V<sub>DD</sub> V<sub>FF</sub> = 18V
- BINARY ADDRESS DECODING ON CHIP
- HIGH DEGREE OF LINEARITY : < 0.5% DISTORTION TYP. at  $f_{IS}$  = 1KHz,  $V_{IS}$  = 5  $V_{pp}$ ,  $V_{DD}$  -  $V_{SS}$  ≥ 10V, RL = 10K $\Omega$
- VERY LOW QUIESCENT POWER DISSIPATION UNDER ALL DIGITAL CONTROL INPUT AND SUPPLY CONDITIONS: 0.2 µW (Typ.) at V<sub>DD</sub> - V<sub>SS</sub> = V<sub>DD</sub> - V<sub>EE</sub> =10V
- MATCHED SWITCH CHARACTERISTICS :  $R_{ON} = 5Ω$  (Typ.) FOR  $V_{DD} V_{EE} = 15V$
- WIDE RANGE OF DIGITAL AND ANALOG SIGNAL LEVELS: DIGITAL 3 to 20, ANALOG TO 20V p.p.
- QUIESCENT CURRENT SPECIF. UP TO 20V
- 5V, 10V AND 15V PARAMETRIC RATINGS
- INPUT LEAKAGE CURRENT I<sub>I</sub> = 100nA (MAX) AT V<sub>DD</sub> = 18V T<sub>A</sub> = 25°C
- 100% TESTED FOR QUIESCENT CURRENT
- MEETS ALL REQUIREMENTS OF JEDEC JESD13B " STANDARD SPECIFICATIONS FOR DESCRIPTION OF B SERIES CMOS DEVICES"

#### **DESCRIPTION**

The HCF4053B is a monolithic integrated circuit fabricated in Metal Oxide Semiconductor

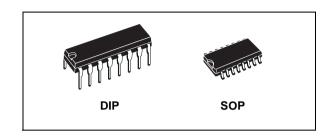


#### **ORDER CODES**

PACKAGE	TUBE	T&R
DIP	HCF4053BEY	
SOP	HCF4053BM1	HCF4053M013TR

technology available in DIP and SOP packages. The HCF4053B analog multiplexer/demultiplexer is a digitally controlled analog switch having low ON impedance and very low OFF leakage current. This multiplexer circuit dissipate extremely low quiescent power over the full  $\rm V_{DD}$ -  $\rm V_{SS}$  and  $\rm V_{DD}$ -  $\rm V_{EE}$  supply voltage range, independent of the logic state of the control signals.

When a logic "1" is present at the inhibit input terminal all channel are off. This device is a triple 2-channel multiplexer having three separate digital control inputs, A, B, and C, and an inhibit input. Each control input selects one of a pair of channels which are connected in a single pole double-throw configuration.


## PIN CONNECTION

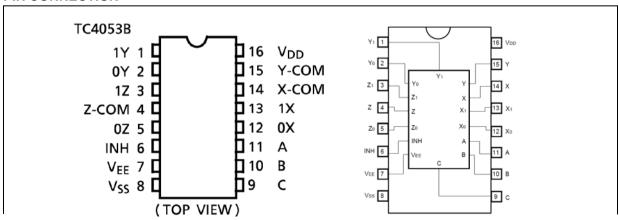

October 2002

#### **HCF4053B**

#### **INPUT EQUIVALENT CIRCUIT**

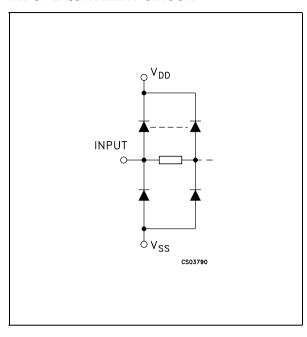

#### **PIN DESCRIPTION**


PIN No	SYMBOL	NAME AND FUNCTION
11, 10, 9	A, B, C	Binary Control Inputs
6	INH	Inhibit Inputs
12, 13, 2, 1, 5, 3	IN/OUT	ax,ay,bx,by,cx,cy Input/ Output
14	OUT/IN	ax or ay
15	OUT/IN	bx or by
4	OUT/IN	cx or cy
7	$V_{EE}$	Supply Voltage
8	$V_{SS}$	Negative Supply Voltage
16	$V_{DD}$	Positive Supply Voltage

#### **TRUTH TABLE**

INHIBIT	C or B or A	
0	0	ax or bx or cx
0	1	ay or by or cy
1	X	NONE

X : Don't Care

#### **FUNCTIONAL DIAGRAM**

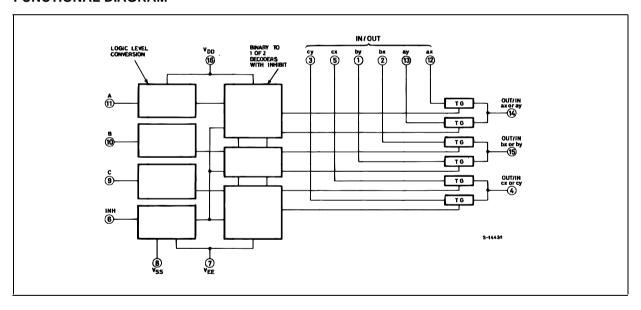

2/10

TOSHIBA TA1270BF

**TENTATIVE** 

TOSHIBA BIPOLAR LINEAR INTEGRATED CIRCUIT SILICON MONOLITHIC

# **TA1270BF**


# PAL/NTSC VIDEO AND

## CHROMA SYNC PROCESSING SYSTEM FOR PIP/POP/PAP

TA1270BF is a PAL/NTSC color TV signal processor IC suitable for PIP/POP/PAP. The IC integrates video and chroma sync processor circuits. It comes in a 48pin flat package.

The video block uses a chroma trap, the chroma block a PAL/NTSC automatic identifier circuit, and the sync processor block a 50/60 Hz automatic identifier circuit. The PAL demodulator circuit contains a baseband signal processor, making the circuit adjustment free.

The TA1270BF incorporates an I<sup>2</sup>C bus, enabling control to be set via the bus line.

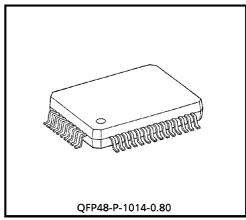

Weight: 0.83 g (Typ.)

#### **FEATURES**

#### Video block

- Chroma trap
- Y delay line
- Sub contrast adjustment (±3 dB)

#### CHROMA block

- UV/CbCr demodulation for NTSC; UV demodulation for PAL
- Tint control
- PAL demodulation baseband signal processing
- PAL/NTSC automatic identification
- Sub color adjustment (±3 dB)

#### Sync processor block


- High-performance sync separator circuit
- Adjustment-free horizontal and vertical oscillator circuit using count down method
- 50 / 60 Hz automatic identifier circuit

#### Switch block

- High-speed switcher circuit
- YUV or RGB input
- Built-in RGB matrix circuit
- YUV or RGB output

**TOSHIBA** 

**TA1270BF** 

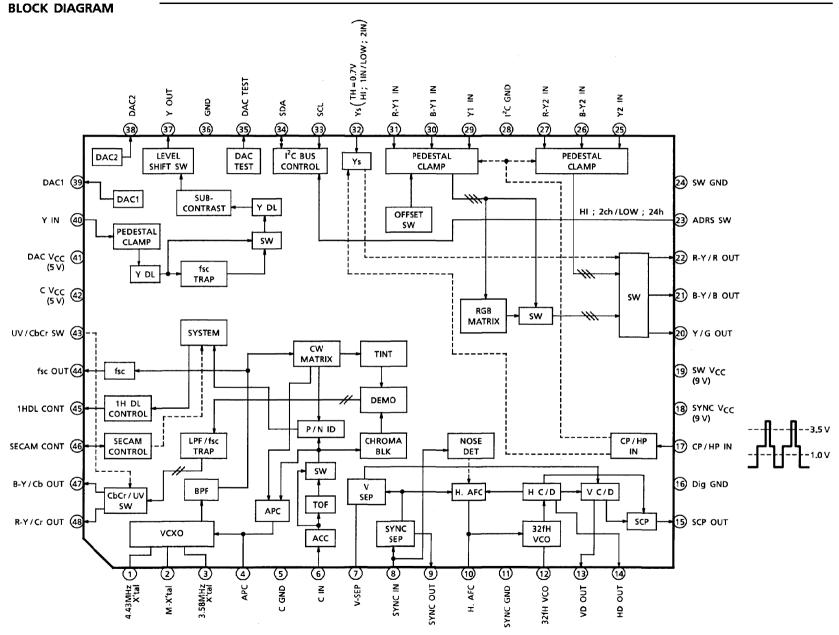

TOSHIBA TA1270BF

# PIN FUNCTION

PIN No.	PIN NAME	FUNCTION	INTERFACE	INPUT / OUTPUT SIGNAL
1 2 3	X'tal-1 X'tal-2 X'tal-3	Connect crystal. Serial capacitance can vary oscillator frequency f0; parallel capacitance can vary oscillator adjustment range.	1 2 3 R Pin 1 1.5 kΩ Pin 2 2.5 kΩ Pin 3 2.5 kΩ	DC 4.0 V 90 mV <sub>p-p</sub>
4	APC filter	Connect APC filter for CHROMA demodulation. The voltage of this pin determines the VCXO oscillator frequency.	42 3 kΩ 3 kΩ 4 m m m m m	DC
5	C GND	CHROMA processor GND pin	_	_
6	CHROMA input	CHROMA input pin. Input CHROMA signal after Y/C separation.	(a) 3 kΩ (b) 3 kΩ (c) 4 kΩ (c)	Burst signal : 300 mV <sub>p-p</sub> 2.5 V  GND
7	V-SEP	Connect vertical sync separation filter.	7 500 Ω 13 13 m	DC 6.4 V

PIN No.	PIN NAME	FUNCTION	INTERFACE	INPUT / OUTPUT SIGNAL
8	Sync input	Sync separator circuit input pin. Input via the clamp capacitor.	(8) (1) (1) (1) (1) (1) (1) (1) (1) (1) (1	1 V <sub>p-p</sub> 2.85 V GND
9	Sync output	Outputs sync signal separated using the sync separator circuit. Open collector output. Connect a pull-up resistor.	(B) (200 Ω) (P) (P) (P) (P) (P) (P) (P) (P) (P) (P	5 VGND
10	AFC filter	Connect a horizontal AFC filter. The voltage of this pin determines the horizontal output frequency.	18 300 Ω 30 kΩ 20 20 20 20 20 20 20 20 20 20 20 20 20 2	DC
11	SYNC GND	Sync processor GND pin	<u> </u>	_
12	32 fH VCO	Connect a ceramic oscillator for horizontal oscillation. Use a CSB503F30 oscillator manufactured by Murata Mfg Co., Ltd.	$\begin{array}{c} 1 & k\Omega \\ 1 & k\Omega \\ 3 & k\Omega \end{array}$	130 mV <sub>p-p</sub>

PIN No.	PIN NAME	FUNCTION	INTERFACE	INPUT / OUTPUT SIGNAL
13	VP output	Vertical pulse output pin	13 200Ω 200Ω 200Ω 200Ω	5 v
14	HD output	Outputs HD pulse processed by the AFC. HD output phase or pulse width can be changed by bus setting.	13 200 Ω 14 200 Ω 18	
15	SCP output	Outputs sand castle pulse (SCP). The output signals are clamp pulse, horizontal blanking pulse, and vertical blanking pulse. The minimum load resistance is $3 \ k\Omega$ .	200Ω 200Ω 200Ω 200Ω	3 V 
16	Dig GND	Logic block GND pin	_	_
17	CP/HP input	Input pin for CP/HP pulse used to operate the SW circuit. CP is used as clamp pulse; HP as blanking pulse.	15kΩ 100 WA 100	3.5 V
18 19	SYNC V <sub>CC</sub> SW V <sub>CC</sub>	V <sub>CC</sub> pins for sync processor block and SW block. Connect 9 V (Typ.).	_	_

PIN No.	PIN NAME	FUNCTION	INTERFACE	INPUT / OUTPUT SIGNAL
20 21 22	Y/G output B-Y/B output R-Y/R output	Output Y/B-Y/R-Y or R/G/B. YUV/RGB output is switched by bus setting.	20 21 22 22 21 22	
23	ADRS SW	Pin used to switch slave addresses.  GND — 24H,  VCC — 2CH	3 50 kΩ / m	2CH —— 0.7 V 24H —— GND
24	SW GND	Switch block GND pin	_	_
25 26 27	Y2 input B-Y2 input R-Y2 input (YUV2)	Y2/B-Y2/R-Y2 (YUV2 input) or R2/G2/B2 input pin. Input via capacitor used for clamp operation.	25 26 27 100 Ω	
28	I <sup>2</sup> C GND	I <sup>2</sup> C block GND pin	_	_
29 30 31	Y1 input B-Y1 input R-Y1 input (YUV1)	Y1/B-Y1/R-Y1 (YUV1 input) or R1/G1/B1 input pin. Input via capacitor used for clamp operation.	Same as those for pins 25, 26 and 27	
32	Ys	High-speed switch for switching input pins 25, 26, and 27 (YUV2) and input pins 29, 30, and 31 (YUV1). The threshold is 0.7 V.	300 Ω 300 Ω 100 Ω 10	YUV1 —— 0.7 V YUV2 —— GND

harman/kardon

PIN No.	PIN NAME	FUNCTION	INTERFACE	INPUT / OUTPUT SIGNAL
33	SCL	I <sup>2</sup> C Bus SCL pin	33 + 20 kΩ / 18	
34	SDA	I <sup>2</sup> C Bus SDA pin	34 50 Ω 20 kΩ SDA ACK ACK ACK ACK	_
35	DAC TEST	DAC monitor pin for IC shipping inspection.	33 1 kΩ (41)	_
36	GND	GND pin	_	_
37	Y output	Outputs Y signal which passed fsc trap (trap is set on or off by Bus) and Y delay line circuit.	(3) V W L M	1 V <sub>p-p</sub> 2 V  GND
38 39	DAC2 DAC1	1 bit DAC output pins	38 39 200 Ω 39	_

PIN No.	PIN NAME	FUNCTION	INTERFACE	INPUT / OUTPUT SIGNAL	
40	Y input	Composite video signal or Y signal input pin. Input via the clamp capacitor.	41 1 kΩ 1 kΩ 1 kΩ 1 kΩ 41	1 V <sub>p-p</sub>	
41 42	DAC V <sub>CC</sub>	V <sub>CC</sub> pins for DAC block and CHROMA processing block. Connect 5 V (Typ.).	_	_	
43	UV/CbCr SW	UV/CbCr demodulation switch.  OPEN —— UV  GND —— CbCr CbCr demodulation is effective for NTSC only.	42) 1 kΩ 2 yes 1.1 v	UV —— 0.7 V CbCr —— 0	
44	fsc output	Outputs crystal oscillator fsc. The pin voltage goes high only when 3.58NTSC is received.	200 C V V V V V V V V V V V V V V V V V V	AC; 0.6 V <sub>p-p</sub> DC; 3.58NTSC ——3.2 V OTHERS ——1.4 V	
45	1HDL CONT	Outputs PAL/SECAM/NTSC identification result. Adjust to DC and connect output to 1H DL IC.	42) 500 Ω V 268 W 200 W 368	4.3 V; PAL 2.5 V; SECAM 0 V ; NTSC	

PIN No.	PIN NAME	FUNCTION	INTERFACE	INPUT / OUTPUT SIGNAL
46	SECAM CONT	I/O pin used to control SECAM demodulator IC. If 250 $\mu$ A or more flows from this pin, SECAM is determined.	42) 500 C) U NO C) U N	At PAL/ NTSC: 4.0 V At SECAM (Black and white): 0.75 V
47	B-Y / Cb output	Outputs B-Y (U) signal or Cb signal. Incorporates LPF to reject carrier.	400 µA	DC; 2.5 V Rainbow color bar; 360 mV <sub>p-p</sub>
48	R-Y/Cr output	Outputs R-Y (V) signal or Cr signal. Incorporates LPF to reject carrier. Pulling up the pin with 10 k $\Omega$ monitors CHROMA signal after ACC and TOF circuits (before demo input).	(2) (1) (2) (1) (2) (1) (1) (1) (1) (1) (1) (1) (1) (1) (1	DC; 2.5 V Rainbow color bar; 360 mV <sub>p-p</sub>

TOSHIBA TC90A49P/F

TOSHIBA CMOS DIGITAL INTEGRATED CIRCUIT SILICON MONOLITHIC


# TC90A49P,TC90A49F

# 3LINE DIGITAL Y / C SEPARATOR IC (MULTICOLOR TYPE)

The TC90A49P / F is a 3-line digital Y / C (luminance / chrominance) separation IC for PAL, NTSC, M-PAL and N-PAL format.

#### **FEATURES**

- TV format: NTSC (3.58), PAL, M-PAL, and N-PAL
- Dynamic comb filter
- Vertical edge enhancement circuit
- PLL 8 × multiplier circuit
- Internal 8-bit 4 fsc AD converter
- Internal 8-bit precision 8 fsc DA converter (2 ch)
- Sync tip clamp circuit
- Internal 4H-line memory
- I<sup>2</sup>C bus interface
- Package: DIP 20-pin and SOP 24-pin
- 5 V single power supply

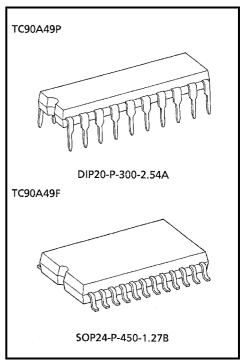


Weight


DIP20-P-300-2.54A : 1.11 g (Typ.) SOP24-P-450-1.27B : 0.44 g (Typ.)

TOSHIBA TC90A49P/F

#### **BLOCK DIAGRAM**

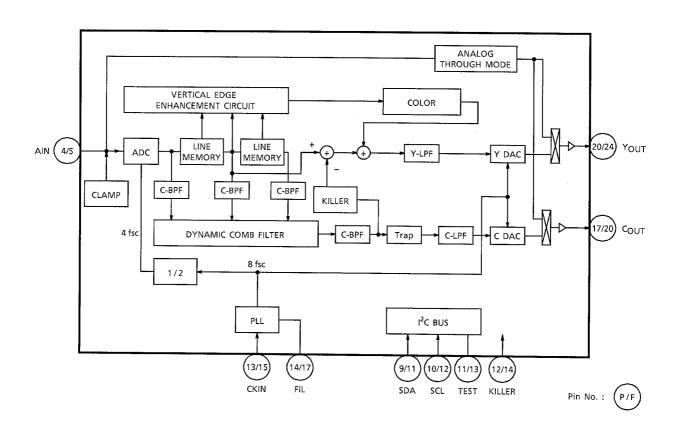

#### **PIN ASSIGNMENT**

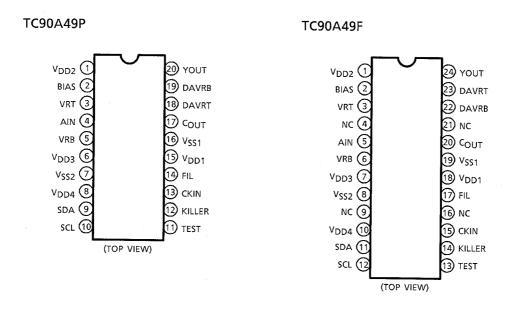

The NC which was writting in PIN ASSIGNMENT must use the open condition.

TOSHIBA TC90A49P/F

# **PIN DESCRIPTION**

no. before / indicates DIP package pin no. no. after / indicates SOP package pin no.

PIN No.	PIN NAME	FUNCTION	1/0	INTERFACE
1	V <sub>DD2</sub>	ADC and DAC analog power supply.	-	-
2	BIAS	ADC bias voltage. Stabilize by attaching a 0.01µF capacitor.	-	2 1.3 V
3	VRT	ADC input range D upper limit voltage. Stabilize by attaching a 0.01µF capacitor.	-	3 W
4/5	AIN	ADC input. Inputs 1.0 $V_{p-p}$ video signal. Sync tip clamp is performed.	I	CLAMP
5/6	VRB	ADC input range D lower limit voltage. Stabilize by attaching a 0.01µF capacitor.	-	5/6
6/7	V <sub>DD3</sub>	ADC and DAC logic power supply.	_	-
7/8	V <sub>SS2</sub>	Logic and internal DRAM GND (digital).	_	-
8 / 10	V <sub>DD4</sub>	Internal DRAM power supply.	_	-
9 / 11	SDA	I <sup>2</sup> C BUS SDA	1/0	9/11 ACK
10 / 12	SCL	I <sup>2</sup> C BUS SCL	I	10/12

TOSHIBA TC90A49P/F

PIN No.	PIN NAME	FUNCTION	1/0	INTERFACE
11 / 13	TEST	Shipment test mode switch or $I^2C$ bus setting reset pin. When High, test mode, setting all $I^2C$ bus settings to 0. Hold High for at least 100 $\mu$ s. Send $I^2C$ bus settings when this pin is Low.	-	11/13
12 / 14	KILLER	Y signal comb function ON / OFF switch. When High, comb OFF. When Low, comb ON. When [data 3 : bit 0] is 1, used as vertical edge enhancement circuit ON / OFF switch.	ı	12/14
13 / 15	CKIN	Clock input pin. Pin 13 put a sine wave which is locked to the frequency of the burst signal in the input video signal. Amplitude is 300 mV $_{\rm p-p}$ to 2 V $_{\rm p-p}$ . Input as high an amplitude as possible without affecting peripheral circuits.	I	13/15
14 / 17	FIL	Connect the APC filter in the 8 fsc PLL circuit.	1	14/17
15 / 18	V <sub>DD1</sub>	PLL power supply.	-	-
16 / 19	V <sub>SS1</sub>	ADC, DAC, and PLL GND (analog).	_	-
17 / 20	Соит	Outputs chrominance signal. External simple LPF for clock elimination recommended.	Ο	17/20

TOSHIBA TC90A49P/F

PIN No.	PIN NAME	FUNCTION	1/0	INTERFACE
18 / 22	DAVRT	DAC output range D upper limit voltage. Stabilize by attaching a 0.01µF capacitor.	-	18/22
19 / 23	DAVRB	DAC output range D lower limit voltage. Stabilize by attaching a 0.01µF capacitor.	-	19/23
20 / 24	Youт	Outputs luminance signal. External simple LPF for clock elimination recommended.	0	20/24 OP amp.

**BH7862FS** 

#### Multimedia ICs

# High-performance 6-channel video driver IC for progressive DVD

# **BH7862FS**

BH7862FS is a 6-channel video driver IC developed for progressive DVD player/recorder. Special filters adjusted to each band of various video signals are incorporated into a single chip. Extended definition, size reduction, and high cost performance can be achieved in DVD players.

#### Application

DVD players, DVD recorders

#### Features

- 1) Each high-performance filter, 6dB amplifier, and  $75\Omega$  driver for DVD are incorporated into a single chip.
- 2) Driver 6ch (Y, C, MIX, and PY, Pb, Pr for progressive)
- 3) Group delay difference between chroma signal and luminance signal is a small number of nsec.
- 4) Drive 2 lines of each signal
- 5) Operating by 5V single power supply
- 6) Built-in mute circuit

#### ● Absolute maximum ratings (Ta = 25°C)

Parameter	Symbol	Limits	Unit
Impressed voltage	Vcc max	6.0	V
Power dissipation	Pd	0.95*	W
Operating temperature range	Topr	<b>−10~+70</b>	°C
Storage temperature range	Tstg	<b>−55~+150</b>	°C

Reduced by -7.6mW for each increase in Ta of 1°C over 25°C.
 PCB (70mm×70mm, t=1.6mm) glass epoxy mounting.

#### ■ Recommended operating conditions (Ta = 25°C)


Parameter	Symbol	Min.	Тур.	Max.	Unit
Power supply voltage	Vcc	4.5	_	5.5	V

<sup>©</sup> Radiation resistance is not included in the design.

# **BH7862FS**

## Multimedia ICs

#### ●Block diagram

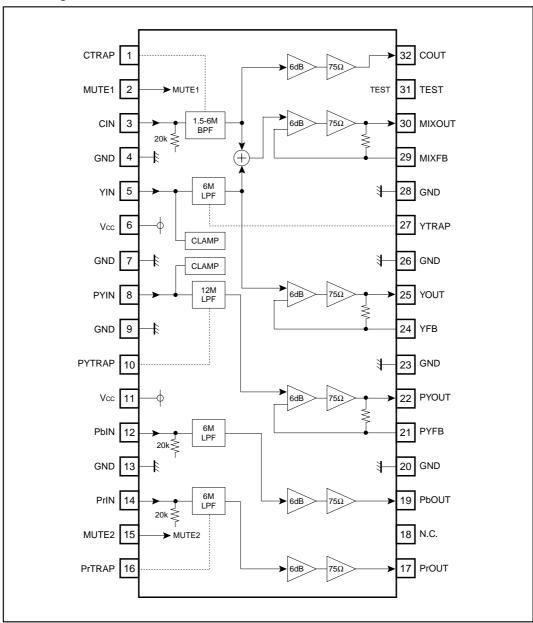

## BH7862FS

### Multimedia ICs

#### Pin descriptions and Input / output circuits

Pin No.	Pin name	Input/output equivalent circuit	Pin description
3 12 14	CIN PbIN PrIN	₹20k	Signal input terminal. Input terminal for chroma signal and color-difference signal. Bias type input. The input impedance is $20k\Omega$ .
5 8	YIN PYIN		Signal input terminal.  Input terminal for luminance signal. Di clamp input.
32	COUT	-W	Signal output terminal.  Output terminal for chroma signal.
29 30	MIXFB MIXOUT		Signal output terminal.  Output terminal for Y/C MIX signal.
24 25	YFB YOUT		Signal output terminal.  Output terminal for luminance signal (interlaced type).

## BH7862FS

## Multimedia ICs

Pin No.	Pin name	Input/output equivalent circuit	Pin description
21 22	PYFB PYOUT		Signal output terminal.  Output terminal for luminance signal (progressive type).
17 19	PrOUT PbOUT		Signal output terminal.  Output terminal for color-difference signal.
1 27 10 16	CTPAP YTRAP PYTRAP PrTRAP		Terminal for LC resonance.
6 11	Vcc		Power supply voltage.  Vcc is separated into 6 pin and 11 pin.  That is to say, C, MIX and Y are partitioned by 6 pin and PY, Pb and Pr by 11 pin.  They and not connected internally.  Connect them externally when using.
4 7 9 13 20 23 26 28	GND		Grounding terminal.
2	MUTE1		Mute control terminal.  C, MIX and Y are muted simultaneously by setting MUTE to "L".

## BH7862FS

## Multimedia ICs

Pin No.	Pin name	Input/output equivalent circuit	Pin description	
12	MUTE2		Mute control terminal.  PY, Pb and PR are muted simultaneously by setting MUTE to "L".	
31	TEST		Test terminal.  Usually, short-circuit this terminal to GND when using it	
18	N.C.		-	

Ordering number : X EN5039

CMOS IC

No. ¥ 5039

LC74763, 74763M

On-Screen Display LSI

### **Preliminary**

#### Overview

The LC74763 and LC74763M are on-screen display CMOS LSIs that superimpose text and low-level graphics onto a TV screen (video signal) under the control of a microcontroller. The display characters have a 12 by 18 dots structure, and 128 characters are provided.


#### **Features**

- Display structure: 12 lines by 24 characters (up to 288 characters)
- Maximum character display: Up to 288 characters
- Character configuration: 12 (W) by 18 (H) dots structure
- Number of characters: 128 characters (128 plus space 2 fonts)
- Character sizes: Three sizes (normal, double, and triple sizes)
- Display starting positions: 64 horizontal and 64 vertical locations
- Reverse video function: Characters can be inverted on a per character basis.
- Flashing types: Two types with periods of 0.5 and 1.0 second on a per character basis (duty fixed at 50%)
- Background color: One of eight colors (when internal synchronization used)
- External control input: Serial data input in 8-bit units
- Built-in horizontal/vertical sync separation circuit, AFC circuit, and synchronization detector
- Video output: Composite video signal output in NTSC, PAL, PAL-M, PAL-N, PAL60, NTSC4.43, or SECAM format


### Package Dimensions

unit: mm

#### 3196-DIP30SD

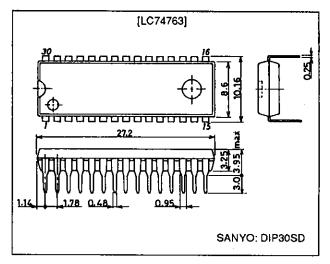

#### 3216A-MFP30S

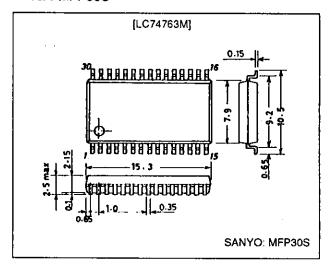

## O.S.D IC (74763M)


## Pin Functions (IC51)

Pin No.	Symbol	Function	Description	
1	V <sub>SS</sub>	Ground	Ground connection	
2	Xtal <sub>IN1</sub>	Country of the countr	Connection for the crystal and capacitor used to form the crystal oscillator that generates	
3	Xtal <sub>OUT1</sub>	Crystal oscillator connection	the internal synchronization signal. The oscillator can be selected with a command switch.	
4	HSYNC <sub>OUT</sub>	Horizontal synchronization output	Outputs the horizontal synchronization signal (AFC). The output polarity can be selected (metal option). Also functions as general output port (command switch).	
5	Xtal <sub>IN2</sub>	Crystal oscillator connection	Connection for the crystal and capacitor used to form the crystal oscillator that generates	
6	Xtal <sub>OUT2</sub>	Crystal oscillator confidention	the internal synchronization signal.	
7	VSYNC <sub>OUT</sub>	Vertical synchronization output	Outputs the vertical synchronization signal. The output polarity can be selected (metal option). Also functions as general output port (command switch).	
8	<u>cs</u>	Enable input	Enables/disables serial data input. Serial data is enabled when this pin is low (hysteresis input). Pull-up resistor built in (metal option).	
9	SIN	Data input	Serial data input (hysteresis input). Pull-up resistor built in (metal option).	
10	SCLK	Clock input	Clock input for serial data input (hysteresis input). Pull-up resistor built in (metal option).	
11	SECAM	SECAM mode switch input/ output (command switch)	During input, switches between SECAM and other modes.  During output, functions as general output port or internal V output (command switch).  Low = other modes, high = SECAM mode	
12	525/625	525/625 switch input/output (command switch)	During input, switches between 525 scan lines and 625 scan lines.  During output, functions as general output port or character data output (command switch).  Low = 525 lines, high = 625 lines	
13	NTSC/PAL	NTSC/PAL switch input/output (command switch)	Switches the color mode between NTSC and PAL.  During output, functions as general output port or frame data output (command switch).  Low = NTSC, high = PAL	
14	3.58/4.43	3.58/4.43 switch input/output (command switch)	Switch FSC between 3.58 MHz and 4.43 MHz.  During output, functions as general output port or halftone output (command switch).  Low = 3.58, high = 4.43	
15	RST	Reset input	System reset input pin, low is active (hysteresis input). Pull-up resistor built in (metal option).	
16	CV <sub>OUT</sub>	Video signal output	Composite video output	
17	V <sub>DD2</sub>	Power supply connection	Power supply connection for composite video signal level generation	
18	CVIN	Video signal input	Composite video input	
19	CV <sub>CR</sub>	Video signal input	SECAM chroma signal input	
20	SYNC <sub>IN</sub>	Sync separator circuit input	Built-in sync separator circuit video signal input	
21	SEP <sub>C</sub>	Sync separator circuit	Built-in sync separator circuit	
22	V <sub>SS</sub>	Ground	Ground connection	
23	PD <sub>OUT</sub>	Control voltage output	AFC control voltage output	
24	AMP <sub>IN</sub>	AFC filter connection	Filter connection	
25	AMP <sub>OUT</sub>	AFC filter connection	Filter connection	
26	FC	Control voltage input	AFC control voltage input	
27	VCO <sub>IN</sub>	LC oscillator connection	VCO LC oscillator circuit coil and capacitor connection	
28	VCO <sub>OUT</sub>	LO OSCINATO CONTIECTION	VOO LO OSOMATOI GITCUIT GOII AND CAPACITOI COTTITECTION	
29	SYNC <sub>DET</sub>	External synchronization signal detection output	Outputs the exclusive NOR of the horizontal synchronization signal (AFC) and CSYNC (sync separator). The output polarity can be selected (metal option). Also functions as general output port (command switch).	
30	V <sub>DD1</sub>	Power supply connection	Power supply connection (+5 V: digital system power supply)	


No. 5039-3/19

#### LC74763, 74763M

### **Pin Assignment**

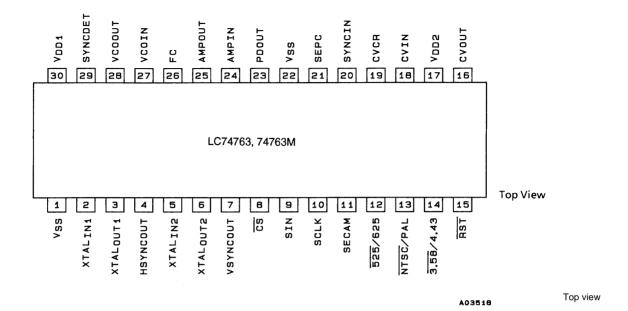


### **Serial Data Input Timing**

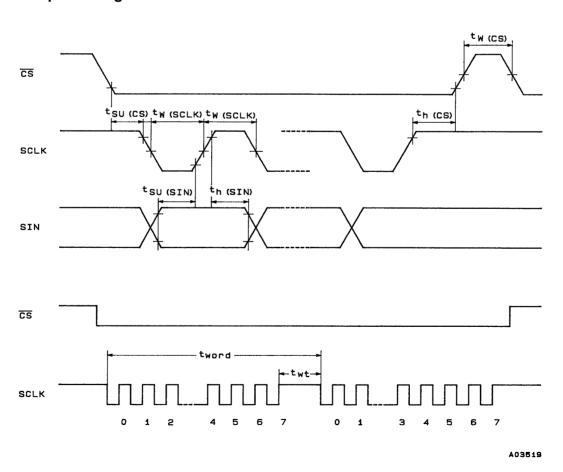


**AVR340** 

#### LC74763M BLOCK DIAGRAM

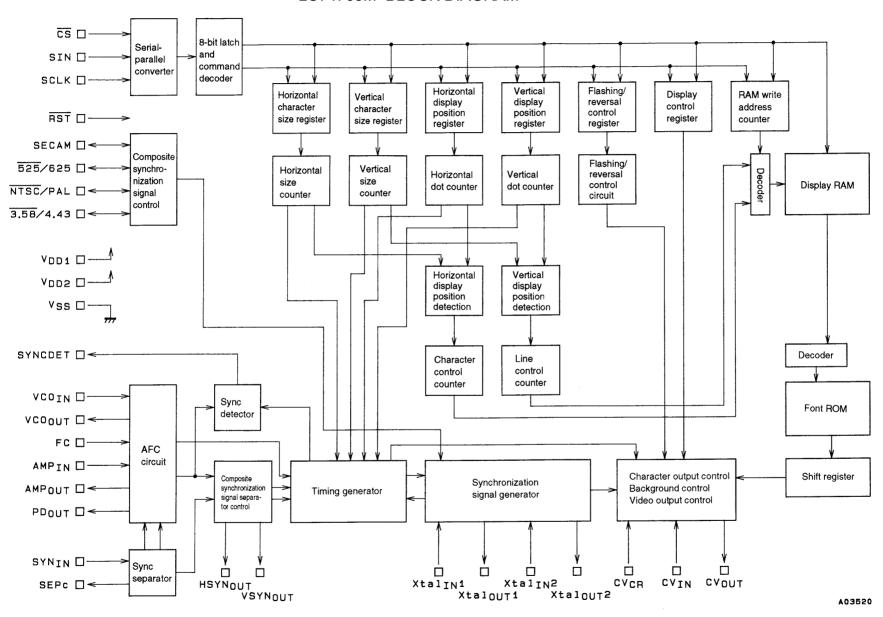

## **U-COM IC PIN ASSIGNMENT & DESCRIPTIONS**

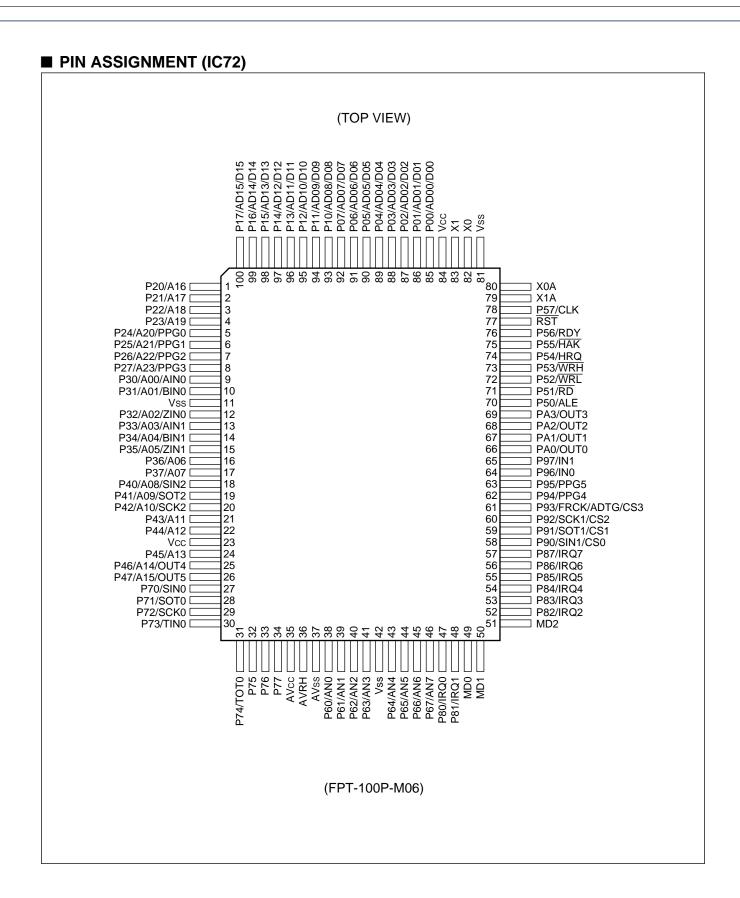

# MB90482

## ■ PIN DESCRIPTIONS (IC72)

Pin No.		<b>D</b> :	Circuit	Function
LQFP*1	QFP*2	Pin name	type	Function
80	82	X0	Α	Oscillator pin
81	83	X1	Α	Oscillator pin
78	80	X0A	Α	32 kHz oscillator pin
77	79	X1A	Α	32 kHz oscillator pin
75	77	RST	В	Reset input pin
	25.4 20	P00 to P07	С	This is a general purpose I/O port. A setting in the pull-up resistance setting register (RDR0) can be used to apply pull-up resistance (RD00-RD07 = "1") . (Disabled when pin is set for output.)
83 to 90	85 to 92	AD00 to AD07	(CMOS)	In multiplex mode, these pins function as the external address/data bus low I/O pins.
		D00 to D07		In non-multiplex mode, these pins function as the external data bus low output pins.
	93 to 100	P10 to P17	C (CMOS)	This is a general purpose I/O port. A setting in the pull-up resistance setting resister (RDR1) can be used to apply pull-up resistance (RD10-RD17 = "1") . (Disabled when pin is set for output.)
91 to 98		AD08 to AD15		In multiplex mode, these pins function as the external address/data bus high I/O pins.
		D08 to D15		In non-multiplex mode, these pins function as the external data bus high output pins.
	1 to 4	P20 to P23	E (CMOS/H)	This is a general purpose I/O port. When the bits of external address output control register (HACR) are set to "1" in external bus mode, these pins function as general purpose I/O ports.
99, 100, 1,2		A16 to A19		When the bits of external address output control register (HACR) are set to "0" in multiplex mode, these pins function as address high output pins (A16-A19).
		A16 to A19		When the bits of external address output control register (HACR) are set to "0" in non-multiplex mode, these pins function as address high output pins (A16-A19).
		P24 to P27		This is a general purpose I/O port. When the bits of external address output control register (HACR) are set to "1" in external bus mode, these pins function as general purpose I/O ports.
3 to 6	5 to 8	A20 to A23	E (CMOS/H)	When the bits of external address output control register (HACR) are set to "0" in multiplex mode, these pins function as address high output pins (A20-A23).
		A20 to A23		When the bits of external address output control register (HACR) are set to "0" in non-multiplex mode, these pins function as address high output pins (A20-A23).
		PPG0 to PPG3		PPG timer output pins.

# MB90482

Pin No.		Din name Circuit		
LQFP*1	QFP*2	Pin name type		Function
		P30	_	This is a general purpose I/O port.
7	9	A00	E (CMOS/H)	In non-multiplex mode, this pin functions as an external address pin.
		AIN0	(OMOO/11)	8/16-bit up/down timer input pin (channel 0) .
		P31		This is a general purpose I/O port.
8	10	A01	E (CMOS/H)	In non-multplex mode, this pin functions as an external address pin.
		BIN0		8/16-bit up/down counter input pin (channel0).
		P32		This is a general purpose I/O port.
10	12	A02	E (CMOS/H)	In non-multiplex mode, this pin functions as an external address pin.
		ZIN0		8/16-bit up/down counter input pin (channel 0)
		P33		This is a general purpose I/O port.
11	13	A03	E (CMOS/H)	In non-multiplex mode, this pin functions as an external address pin.
		AIN1		8/16-bit up/down counter input pin (channel 1).
	14	P34		This is a general purpose I/O port.
12		A04	E (CMOS/H)	In non-multiplex mode, this pin functions as an external address pin.
		BIN1		8/16-bit up/down counter input pin (channel 1).
	15	P35		This is a general purpose I/O port.
13		A05	E (CMOS/H)	In non-multiplex mode, this pin functions as an external address pin.
		ZIN1		8/16-bit up/down counter input pin (channel 1)
14	16	P36, P37	D*3	This is a general purpose I/O port.
15	17	A06, A07	(CMOS)	In non-multiplex mode, this pin functions as an external address pin.
		P40		This is a general purpose I/O port.
16	18	A08	G (CMOS/H)	In non-multiplex mode, this pin functions as an external address pin.
		SIN2		Simple serial I/O input pin.
		P41		This is a general purpose I/O port.
17	19	A09	F (CMOS)	In non-multiplex mode, this pin functions as an external address pin.
		SOT2		Simple serial I/O output pin.
		P42		This is a general purpose I/O port.
18	20	A10	G (CMOS/H)	In non-multiplex mode, this pin functions as an external address pin.
		SCK2		Simple serial I/O clock input/output pin.

# MB90482

Pin No.		Din Circuit			
LQFP*1	QFP*2	Pin name	type	Function	
19	21	P43, P44	F	This is a general purpose I/O port.	
20	22	A11, A12	(CMOS)	In non-multiplex mode, this pin functions as an external address pin.	
		P45	F*4	This is a general purpose I/O port.	
22	24	A13	(CMOS)	In non-multiplex mode, this pin functions as an external address pin.	
		P46, P47		This is a general purpose I/O port.	
23 24	25 26	A14, A15	F (CMOS)	In non-multiplex mode, this pin functions as an external address pin.	
		OUT4/OUT5		Output compare event output pins.	
68	70	P50	D	This is a general purpose I/O port. In external bus mode, this pin functions as the ALE pin.	
00	70	ALE	(CMOS)	In external bus mode, this pin functions as the address load enable (ALE) signal pin.	
69	71	P51	D	This is a general purpose I/O port. In external bus mode, this pin functions as the $\overline{\text{RD}}$ pin.	
09	71	RD	(CMOS)	In external bus mode, this pin functions as the read strobe output $(\overline{RD})$ signal pin.	
70	72	P52	D	This is a general purpose I/O port. In external bus mode, when the WRE pin in the EPCR register is set to "1", this pin functions as the WRL pin.	
70		WRL	(CMOS)	In external bus mode, this pin functions as the lower data write strobe output (WRL) pin. When the WRE bit in the EPCR register is set to "0", this pin functions as a general purpose I/O port.	
		P53	6	This is a general purpose I/O port. In external bus mode with 16-bit bus width, when the WRE bit in the EPCR register is set to "1", this pin functions as the WRH pin.	
71	73	WRH	D (CMOS)	In external bus mode with 16-bit bus width, this pin functions as the upper data write strobe output (WRH) pin. When the WRE bit in the EPCR register is set to "0", this pin functions as a general purpose I/O port.	
70	7.4	P54	D	This is a general purpose I/O port. In external bus mode, when the HDE bit in the EPCR register is set to "1", this pin functions as the HRQ pin.	
72	74	HRQ	(CMOS)	In external bus mode, this pin functions as the hold request input (HRQ) pin. When the HDE bit in the EPCR register is set to "0", this pin functions as a general purpose I/O port.	
72	75	P55	D	This is a general purpose I/O port. In external bus mode, when the HDE bit in the EPCR register is set to "1", this pin functions as the HAK pin.	
73		HAK	(CMOS)	In external bus mode, this pin functions as the hold acknowledge (HAK) pin. When the HDE bit in the EPCR register is set to "0", this pin functions as a general purpose I/O port.	

# MB90482

Pin No.		Din nome	Circuit	Function
LQFP*1	QFP*2	Pin name	type	Function
74	70	P56	D	This is a general purpose I/O port. In external bus mode, when the RYE bit in the EPCR register is set to "1", this pin functions as the RDY pin.
74	76	RDY	(CMOS)	In external bus mode, this pin functions as the external ready (RDY) input pin. When the RYE bit in the EPCR register is set to "0", this pin functions as a general purpose I/O port.
76	78	P57	D	This is a general purpose I/O port. In external bus mode, when the CKE bit in the EPCR register is set to "1", this pin functions as the CLK pin.
70	70	CLK	(CMOS)	In external bus mode, this pin functions as the machine cycle clock (CLK) output pin. When the CKE bit in the EPCR register is set to "0", this pin functions as a general purpose I/O port.
36 to 39	38 to 41	P60 to P63	Н	These are general purpose I/O ports.
30 10 39	30 10 41	AN0 to AN3	(CMOS)	These are the analog input pins.
41 to 44	43 to 46	P64 to P67	Н	These are general purpose I/O ports.
41 10 44	43 10 40	AN4 to AN7	(CMOS)	These are the analog input pins.
25	27	P70	G (CMOS/H)	This is a general purpose I/O port.
23		SIN0		This is the UART data input pin.
26	28	P71	F (CMOS)	This is a general purpose I/O port.
20		SOT0		This is the UART data output pin.
27	29	P72	G (CMOS/H)	This is a general purpose I/O port.
21		SCK0		This is the UART clock I/O pin.
28	30	P73	G	This is a general purpose I/O port.
20	30	TIN0	(CMOS/H)	This is the 16-bit reload timer event input pin.
29	31	P74	F	This is a general purpose I/O port.
29	31	ТОТ0	(CMOS)	This is the 16-bit reload timer output pin.
30	32	P75	F*4 (CMOS)	This is a general purpose I/O port.
31	33	P76	F*5 (CMOS)	This is a general purpose I/O port.
32	34	P77	F*5 (CMOS)	This is a general purpose I/O port.
45,	47,	P80, P81	Е	These are general purpose I/O ports.
46	48	IRQ0, IRQ1	(CMOS/H)	External interrupt input pins.
50 to 55	52 to 57	P82 to P87	Е	These are general purpose I/O ports.
50 10 55	JZ 10 J7	IRQ2 to IRQ7	(CMOS/H)	External interrupt input pins.

## MB90482

#### (Continued)

Pin No.		Dim record	Circuit	Eupotion	
LQFP*1	QFP*2	Pin name	type	Function	
		P90	_	This is a general purpose I/O port.	
56	58	SIN1	E (CMOS/H)	Simple serial I/O data input pin.	
		CS0	(01/100/11)	Chip select 0.	
		P91	_	This is a general purpose I/O port.	
57	59	SOT1	D (CMOS)	Simple serial I/O data output pin.	
		CS1	(011100)	Chip select 1.	
		P92	_	This is a general purpose I/O port.	
58	60	SCK1	E (CMOS/H)	Simple serial I/O data input/output pin.	
		CS2	(01/100/11)	Chip select 2.	
		P93		This is a general purpose I/O port.	
50	64	FRCK	E	When the free run timer is in use, this pin functions as the external clock input pin.	
59	61	ADTG	(CMOS/H)	When the A/D converter is in use, this pin functions as the external trigger input pin.	
		CS3		Chip select 3.	
60	62	P94	D (CMOS)	This is a general purpose I/O port.	
00		PPG4		PPG timer output pin.	
61	63	P95	D (CMOS)	This is a general purpose I/O port.	
01		PPG5		PPG timer output pin.	
62	64	P96	E	This is a general purpose I/O port.	
<u> </u>	04	IN0	(CMOS/H)	Input capture channel 0 trigger input pin.	
63	65	P97	E	This is a general purpose I/O port.	
00	05	IN1	(CMOS/H)	Input capture channel 1 trigger input pin.	
64 to 67	66 to 69	PA0 to PA3	D	These are general purpose I/O ports.	
04 10 07	00 10 09	OUT0 to OUT3	(CMOS)	Output compare event output pins.	
33	35	AVcc		A/D converter power supply pin.	
34	36	AVRH		A/D converter external reference voltage supply pin.	
35	37	AVss		A/D converter power supply pin.	
47 to 49	49 to 51	MD0 to MD2	J (CMOS/H)	Operating mode selection input pins.	
21, 82	23, 84	Vcc		$3.3~\text{V} \pm 0.3~\text{V}$ power supply pins (Vcc3) .	
9, 40, 79	11, 42, 81	Vss	_	Power supply input pins (GND) .	

\*1 : LQFP : FPT-100P-M05

\*2 : QFP : FPT-100P-M06

 $^{*}3$ : The circuit type of MB90V480 is E (CMOS/H).

\*4 : The circuit type of MB90V480 is G (CMOS/H).

\*5 : The circuit type of MB90V480 is I (NMOS/H)

## NJM2068M (OP - AMP)

JRC

NJM2068

### LOW-NOISE DUAL OPERATIONAL AMPLIFIER

#### **■** GENERAL DESCRIPTION

The NJM2068 is a high performance, low noise dual operational amplifier. This amplifier features popular pin-out, superior noise performance, and superior total harmonic distortion. This amplifier also features guaranteed noise performance with substantially higher gain-bandwidth product and slew rate which far exceeds that of the 4558 type amplifier. The specially designed low noise input transistors allow the NJM2068 to be used in very low noise signal processing applications such as audio preamplifiers and servo error amplifier.

#### FEATURES

Operating Voltage

Low Total Harmonic Distortion

Low Noise Voltage

High Slew Rate

Unity Gain Bandwidth

Package Outline

Bipolar Technology

 $(\pm 4V \sim \pm 18V)$ (0.001% typ.)

(FLAT+JISA, 0.56 μV typ.)

 $(6V/\mu s typ.)$ 

(27MHz @f=10kHz)

DIP8, DMP8, SIP8, SSOP8

#### **■ PACKAGE OUTLINE**





NJM2088D


NJM2068M




NJM2068V



#### PIN CONFIGURATION

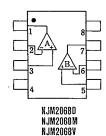

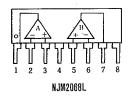

PIN FUNCITON

1. A OUTPUT

2. A-INPUT

3. A+INPUT


4. V
5. B+INPUT

6. B-INPUT

7. B OUTPUT

8. V'

#### ■ EQUIVALENT CIRCUIT (1/2 Shown)

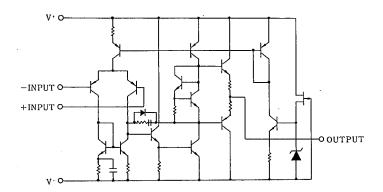

## NJM2296

### 5-INPUT 3PUTPUT VIDEO SW


#### **■GENERAL DESCRIPTION**

The NJM2296 is a 5-input 3-output video switch.

Its switches select one from five signals received from VTR, TV, TV GAME and others.

This IC is designed for audio items, such as AV amplifier and receivers, and others

#### **■PACKAGE OUTLINE**

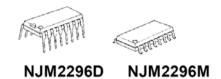

#### **■FEATURES**

●5-input 3-output

●Operating Voltage ±4.0 to ±6.5V

●Operating Current ±31mA typ. at Vcc=±5V

●Crosstalk -65dB typ.


●Internal 6dB Amplifier

●Internal 75Ω Driver

Bipolar Technology

●Package Outline DIP16,DMP16

#### **■BLOCK DIAGRAM**

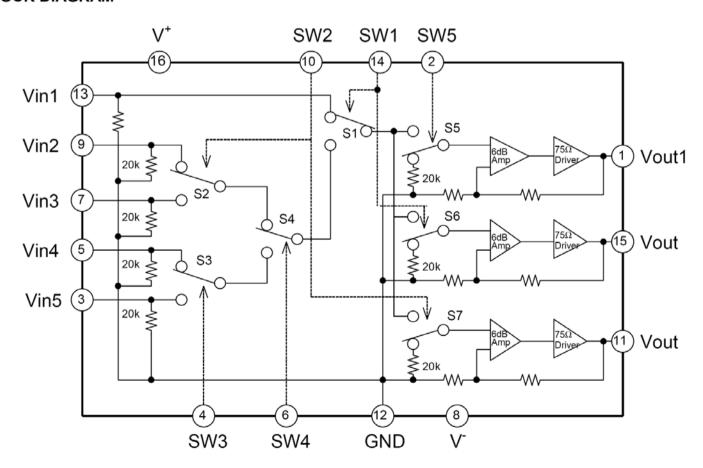



NJM2581

### **DUAL SUPPLY WIDE BAND 3ch VIDEO AMPLIFIER**

#### **■ GENERAL DESCRIPTION**

The **NJM2581** is a dual supply voltage wide band 3ch video amplifier. It is suitable for Y, Pb, and Pr signal because frequency range is 50MHz.

The **NJM2581** is suitable for Set Top Box, AV amplifier, and other high quality AV systems.

#### **■ PACKAGE OUTLINE**





NJM2581D

NJM2581M

#### **■ FEATURES**

Operating Voltage ±4.5 to ±5.5V
 Wide frequency range 50MHz at 0dB typ.


● Internal 6dB Amplifier

• Internal 75ΩDriver Circuit (2-system drive)

Power Save CircuitBipolar Technology

Package OutlineDIP14, DMP14

#### **■ BLOCK DIAGRAM**

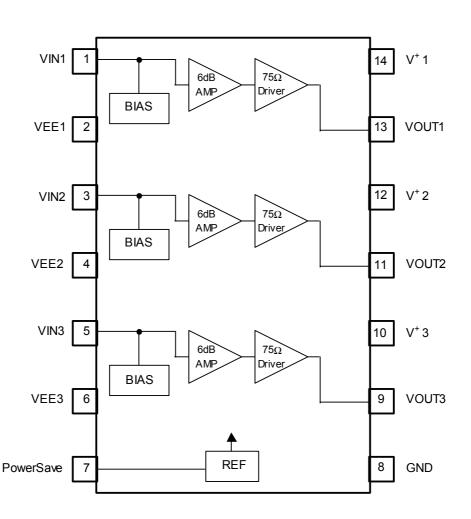

# NJM2581

### **■ EQUIVALENT CIRCUIT**

PIN No.	PIN NAME	FUNCTION	INSIDE EQUIVALENT CIRCUIT
1 3 5	VIN1 VIN2 VIN3	Input	VIN1 VIN2 VIN3 100Ω 20ΚΩ
13 11 9	VOUT1 VOUT2 VOUT3	Output	VOUT1 VOUT2 VOUT3 5.5KΩ
7	PowerSave	Power Save	PowerSave $30$ K $\Omega$ $50$ K $\Omega$
14 12 10	V <sup>+</sup> 1 V <sup>+</sup> 2 V <sup>+</sup> 3	V+	
2 4 6	VEE1 VEE2 VEE3	V-	
8	GND	GND	

IC86

NJM4556A

### DUAL HIGH CURRENT OPERATIONAL AMPLIFIER

#### **■ GENERAL DESCRIPTION**

The NJM4556A integrated circuit is a high-gain, high output current dual operational amplifier capable of driving ±70mA into 150  $\Omega$  loads ( $\pm 10.5$ V output voltage), and operating low supply voltage  $(V^{+}/V^{-}=\pm 2V^{\sim}).$ 

The NJM4556A combines many of the fetures of the popular NJM4558 as well as having the capability of driving 150  $\!\Omega$  loads. In addition, the wide band-width, low noise, high slew rate and low distortion of the NJM4556A make it ideal for many audio, telecommunications and instrumentation applications.

#### **FEATURES**

Operating Voltage

 $(\pm 2V \sim \pm 18V)$ 

High Output Current

(Io=70mA)

Slew Rate

 $(3V/\mu s typ.)$ (8MHz typ.)

Gain Band Width Product Package Outline

DIP8, DMP8, SIP8, SSOP8

Bipolar Technology

#### **■ PACKAGE OUTLINE**





NJM4556AD


NJM4556AM






NJM4556AL

#### PIN CONFIGURATION

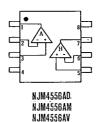

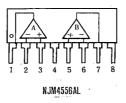

PIN FUNCTION 1. A OUTPUT


2. A-INPUT

3. A+INPUT

5. B+INPUT

6. B-INPUT 7. B OUTPUT

#### **■ EQUIVALENT CIRCUIT** (1/2 Shown)

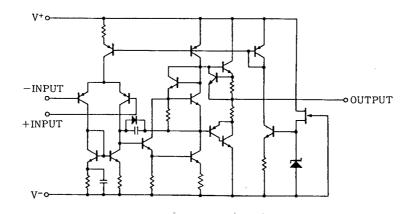

## **PIN CONFIGURATION**


# IC87 RE5VL28CATZ IC85 RH5VT18C


# IC , RESET I.C , RESET


• TO-92



• SOT-23-5

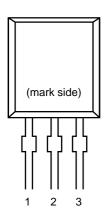

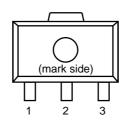

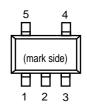

## **PIN DESCRIPTION**

• TO-92

Pin No	Symbol
1	OUT
2	Vdd
3	GND

• SOT-89


Pin No	Symbol
1	OUT
2	Vdd
3	GND

• SOT-23-5


Pin No	Symbol
1	OUT
2	Vdd
3	GND
4	NC
5	NC

## **BLOCK DIAGRAMS**

· Nch Open Drain Output (R>5VL>A)

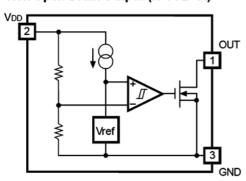


#### · CMOS Output (R>5VL>C)

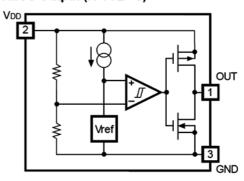


## TC9162AF (FUNCTION/INPUT:

### **■ BLOCK DIAGRAM**

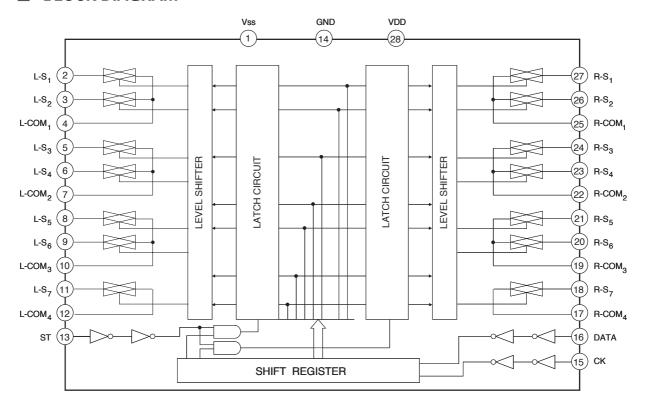


## TC9164AF (FUNCTION/INPUT): IC23

#### **■ BLOCK DIAGRAM**

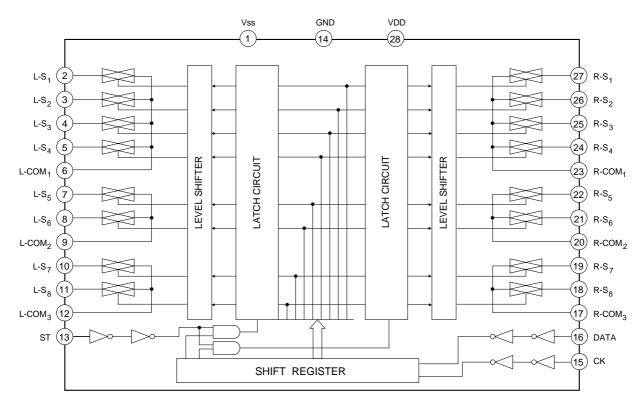

## TC9163AF (FUNCTION/INPUT): IC24

### **■ BLOCK DIAGRAM**

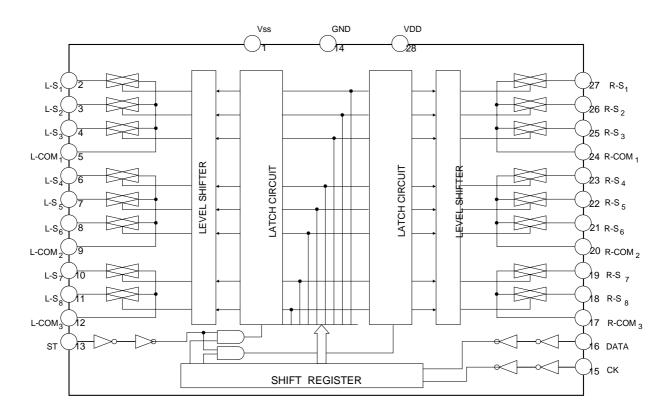

**TOSHIBA** 

TC9214,15AP/AF

TOSHIBA CMOS DIGITAL INTEGRATED CIRCUIT SILICON MONOLITHIC

## TC9214AP, TC9214AF, TC9215AP, TC9215AF


#### HIGH VOLTAGE ANALOG SWITCH

TC9214AP/AF, TC9215AP/AF are Analog Switch for high voltage audio application.

#### **FEATURES**

- Analog Switch Circuit Formation TC9214AP, TC9214AF: 5 circuits TC9215AP, TC9215AF: 6 circuits
- Dual Power Supply of (+) and (-) can be used.
- Including Level Shift Circuit, this IC can be operated by (+) power supply only under dual power supply operating.
- Setting Low Input-threshold-voltage in control signal input terminal. 5V CPU application can control this IC directly.
- Package : DIP-16 PIN


SOP-16 PIN

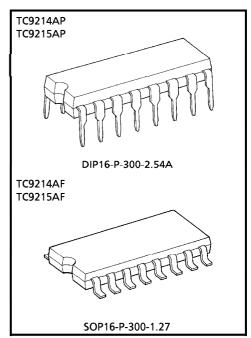



Weight

DIP16-P-300-2.54A : 1.0g (Typ.) SOP16-P-300-1.27 : 0.16g (Typ.)

#### PIN CONNECTION (TOP VIEW)

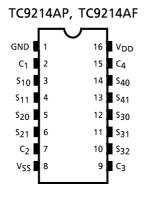

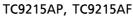


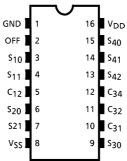

980508EBA2

## TOSHIBA TC9214,15AP/AF

#### **BLOCK DIAGRAM**

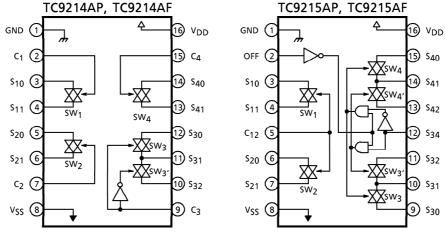

# PIN FUNCTION 1. TC9214AP, TC9214AF

PIN No.	SYMBOL	PIN NAME	FUNCTION			NOTE	
1	GND	Ground Terminal	Dual power su	Dual power supplying : +B →V <sub>DD</sub>			
8	VSS	(-) Power Supply Terminal		0V →GND -B →VSS			
16	V <sub>DD</sub>	(+) Power Supply Terminal	Single power s	0V	→V <sub>DD</sub> →GND, V <sub>SS</sub>		
2	C <sub>1</sub>	Switch (1) Control Terminal	SWITCH CONN	SWITCH CONNECTION			
3	S <sub>10</sub>	Switch (1) Input/	s <sub>10</sub>				
4	S <sub>11</sub>	Output Terminal	C <sub>1</sub> (	± \$\su_1 =			
5	S <sub>20</sub>	Switch (2) Input/	$\begin{array}{c c} S_{20} & & & \\ \hline C_2 & & & \\ \end{array}$				
6	S <sub>21</sub>	Output Terminal					
7	c <sub>2</sub>	Switch (2) Control Terminal	S <sub>40</sub> (				
9	C <sub>3</sub>	Switch (3) Control Terminal	s <sub>31</sub> (				
10	S <sub>32</sub>		C <sub>3</sub> (	S <sub>SM3</sub> ,		_	
11	S <sub>31</sub>	Switch (3) Input/ Output Terminal	TRUTH TABLE  C <sub>1</sub> , C <sub>2</sub> , C <sub>4</sub>	SW <sub>1</sub> , SW <sub>2</sub> ,	SW <sub>2</sub>		
12	s <sub>30</sub>		Н	ON	5113		
13	S <sub>41</sub>	Switch (4) Input/		OFF			
14	s <sub>40</sub>	Output Terminal	C <sub>3</sub>	S <sub>30</sub> -S <sub>31</sub>	S <sub>31</sub> -S <sub>32</sub>		
15	C <sub>4</sub>	Switch (4) Control Terminal	H	ON OFF	OFF ON		

## **TOSHIBA**

## TC9214,15AP/AF

## 2. TC9215AP, TC9215AF


PIN No.	SYMBOL	PIN NAME	FUNCTION	NOTE		
1	GND	Ground Terminal	Dual power supplying : +B →V <sub>DD</sub>			
8	VSS	(-) Power Supply Terminal	0V →GND -B →V <sub>SS</sub>	_		
16	V <sub>DD</sub>	(+) Power Supply Terminal	Single power supplying: $+B \rightarrow V_{DD}$ 0V $\rightarrow GND$ , $V_{SS}$			
2	OFF	Switch (3), (4) OFF Input Terminal	SWITCH CONNECTION  SW1 SW2	_		
3	S <sub>10</sub>	Switch (1) Input/	\$ <sub>10</sub> () -			
4	S <sub>11</sub>	Output Terminal	$s_{11} \bigcirc \longrightarrow s_{21}$			
5	C <sub>12</sub>	Switch (1), (2) Control Terminal	C <sub>12</sub> SW <sub>3</sub> SW <sub>4</sub> C			
6	s <sub>20</sub>	Switch (2) Input/	ζνν <sub>2</sub> ,			
7	S <sub>21</sub>	Output Terminal				
9	s <sub>30</sub>		C <sub>34</sub> OFF			
10	S <sub>31</sub>	Switch (3) Input/ Output Terminal	TRUTH TABLE  C <sub>12</sub> SW <sub>1</sub> , SW <sub>2</sub>			
11	S <sub>32</sub>		H ON			
12	C <sub>34</sub>	Switch (3), (4) Control Terminal	L OFF			
13	S <sub>42</sub>		OFF C <sub>34</sub> S <sub>30</sub> -S <sub>31</sub> S <sub>31</sub> -S <sub>32</sub> S <sub>40</sub> -S <sub>41</sub> S <sub>41</sub> -S <sub>42</sub>			
14	S <sub>41</sub>	Switch (4) Input/ Output Terminal	L L ON OFF H OFF ON			
15	S <sub>40</sub>		H   ※   OFF   OFF   (※ H or L)			

## **TOSHIBA**

ELECTRONIC VOLUME CONTROL IC(IC42)

TC9459N/F

#### **BLOCK DIAGRAM** (TC9459F)

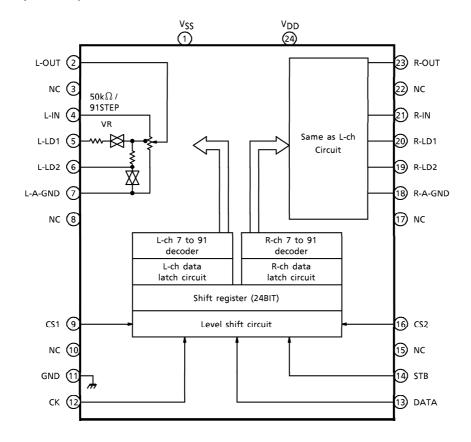

TOSHIBA TC9459N/F

#### PIN DESCRIPTION

Numeral in ( ) means the pin No. of TC9459F.

PIN No.	SYMBOL	PIN NAME	FUNCTION	REMARK
1 (1)	VSS	Negative power supply pin	When using $V_{DD} = 6.0 \sim 17V$ dual power $GND = 0V$	
28 (24)	V <sub>DD</sub>	Positive power supply pin	supplies $V_{SS} = -6.0 \sim -17V$	_
13 (11)	GND	Digital GND pin	single power $V_{DD} = 6.0 \sim 18V$ supply $V_{DD} = 0.0 \sim 18V$	
3 (2)	L-OUT	Volume output	Volume circuit	
26 (23)	R-OUT	pin	оит О	
5 (4)	L-IN	Volume input nin	IN O VR 7.4kΩ LA1 26.3kΩ ξ VR	
24 (21)	R-IN	Volume input pin	LD1 0	
6 (5)	L-LD1		LD2 O 18.7kΩ	
23 (20)	R-LD1	Loudness tap	A-GND O	_
7 (6)	L-LD2	output pin		
22 (19)	R-LD2		LA1 LA2	
8 (7)	L-A-GND	A selection CNID with	LOUDNESS "ON" ON OFF LOUDNESS "OFF" OFF ON	
21 (18)	R-A-GND	Analog GND pin	LOODNESS OFF OFF ON	
10 (9)	CS1	Chip select input	Up to 4 chips on the same bus can	
19 (16)	CS2	pin	be used by switching over chip select code.	_
14 (12)	СК	Clock input pin	Data transfer clock input	Low
15 (13)	DATA	Data input pin	Volume setup serial data input	threshold value
16 (14)	STB	Strobe input pin	Data write strobe input	input pin
2 (3) 27 (22)				
4 25				
9 (8)	١			
20 (17)	NC	No connection	_	_
11				
18				
12 (10)				
17 (15)				

## TOSHIBA

TC9482BNG/BFG

TOSHIBA CMOS DIGITAL INTEGRATED CIRCUIT SILICON MONOLITHIC


# TC948BNG, TC9482BFG

# SYSTEM ELECTRONIC VOLUME CONTROL

The TC9482BNG and TC9482BFG are six-channel electronic volume control ICs developed for Hi-Fi audio equipment. Since all six channels can be individually controlled, the devices are optimum for audio equipment with multiple outputs.

#### **FEATURES**


- Sound volume can be controlled in 97 steps from 0 to -95dB or up to an infinite level in 1dB increments.
- Incorporating six channels of volume control circuits, the device allows independent volume control.
- Can operate with a single or dual power supplies.
- Can control up to 4 chips on the same bus by using chip select input.
- Built-in interface for 3-V microcomputers.
- Thanks to its polysilicon resistor, the device allows you to configure a low-distortion, high-performance volume control system.
- Two packages supported: 28-pin shrink DIP and 28-pin flat package.

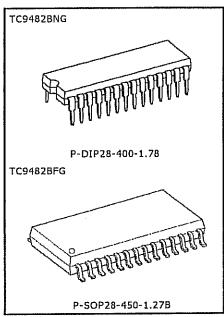


Weight P-SDIP28-400-1.78 : 2.2 g (Typ.) P-SOP28-450-1.27B : 0.8 g (Typ.)

## TC9482BNG/BFG

#### PIN CONNECTIONS

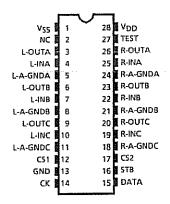

#### **BLOCK DIAGRAM**

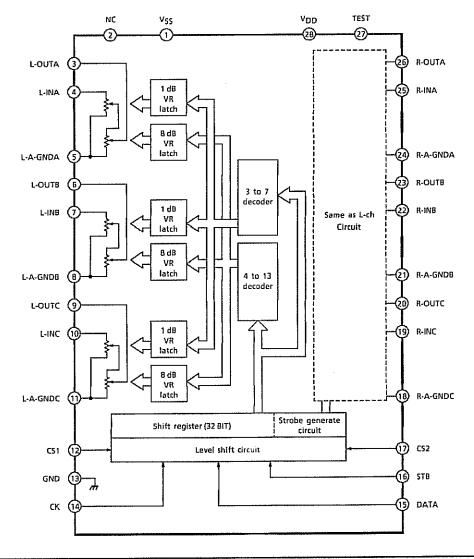

## TOSHIBA

## TC9482BNG/BFG

#### PIN DESCRIPTION

PIN No.	SYMBOL	PIN NAME	FUNCTION	REMARK	
1	V <sub>SS</sub>	Negative power supply pin			
28	V <sub>DD</sub>	Positive power supply pin	Power Supply Pins		
3	L-OUTA				
26	R-OUTA				
6	L-OUTB	Values to t			
22	R-OUTB	Volume output pin			
9	L-OUTC		Volume circuit		
19	R-OUTC		voidine circuit		
4	L-INA		1		
25	R-INA		оитх О		
7	L-INB	Valuma !	INX (VR1)		
22	R-INB	Volume input pin	"" G		
10	L-INC		(VR2)		
19	R-INC		O C C C C C C C C C C C C C C C C C C C		
5	L-A-GNDA		A-GNDX O ISI		
24	R-A-GNDA	7			
8	L-A-GNDB	Analas CNID ata			
21	R-A-GNDB	Analog GND pin			
11	L-A-GNDC				
18	R-A-GNDC				
12	CS1	Chip select input pin	Up to 4 chips on the same bus can be used by switching over chip select		
17	CS2	Cinp sciect input pin	code.		
14	СК	Clock input pin	Inputs clock for serial data transfer.	Low	
15	DATA	Data input pin	Data input pin Inputs control data for setting volume.		
16	STB	Strobe input pin	Strobe input pin Inputs strobe for writing data.		
13	GND	Digital GND pin	Digital ground pin	input pin	
27	TEST	Test Pin	Normally connect to V <sub>DD</sub> pin.	_	
2	NC	No connection	— — — — — — — — — — — — — — — — — — —		




## M29W800DT M29W800DB

8 Mbit (1Mb x8 or 512Kb x16, Boot Block) 3V Supply Flash Memory

#### **FEATURES SUMMARY**

- SUPPLY VOLTAGE
  - V<sub>CC</sub> = 2.7V to 3.6V for Program, Erase and Read
- ACCESS TIME: 70, 90ns
- PROGRAMMING TIME
  - 10µs per Byte/Word typical
- 19 MEMORY BLOCKS
  - 1 Boot Block (Top or Bottom Location)
  - 2 Parameter and 16 Main Blocks
- PROGRAM/ERASE CONTROLLER
  - Embedded Byte/Word Program algorithms
- ERASE SUSPEND and RESUME MODES
  - Read and Program another Block during Erase Suspend
- UNLOCK BYPASS PROGRAM COMMAND
  - Faster Production/Batch Programming
- TEMPORARY BLOCK UNPROTECTION MODE
- COMMON FLASH INTERFACE
  - 64 bit Security Code
- LOW POWER CONSUMPTION
  - Standby and Automatic Standby
- 100,000 PROGRAM/ERASE CYCLES per BLOCK
- ELECTRONIC SIGNATURE
  - Manufacturer Code: 0020h
  - Top Device Code M29W800DT: 22D7h
  - Bottom Device Code M29W800DB: 225Bh


Figure 1. Packages

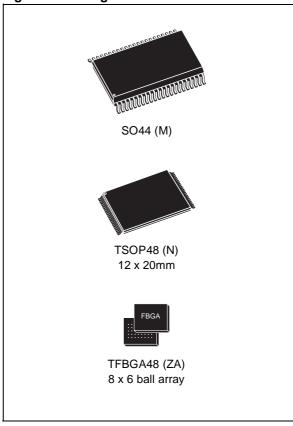


April 2002 1/41

#### M29W800DT, M29W800DB

Figure 3. SO Connections

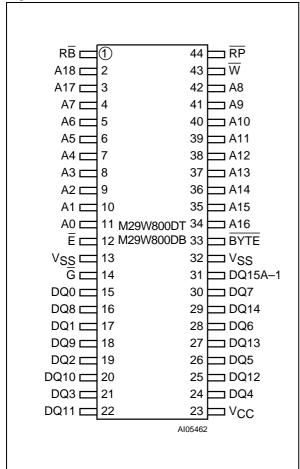

**Figure 4. TSOP Connections** 

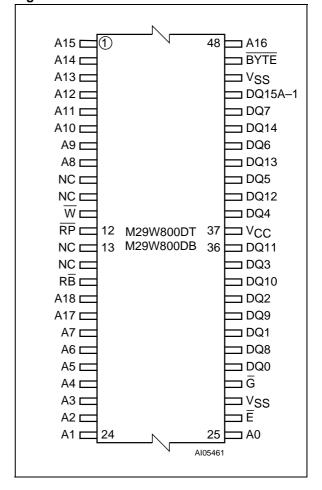

6/41

### NJM2586AM [WIDE BAND 3-INPUT 1-OUTPUT 3-CIRCUIT VIDEO AMPLIFIER]

[STRUCTURE] Bipolar
[CATEGORIES] TV-Video
[PACKAGE OUTLINE] DMP-24
[SOLDERING METHOD] For this device, soldering method is recommended Reflow.
[NOTE] —


#### ■ABSOLUTE MAXIMUM RATINGS Ta=25°C

BAE-38461-000-01

Supply Voltage · · · · · ±6.0 [V]	Operating Temperature Range · · · · · · · · 40 to +85 [°C]
Power Dissipation · · · · · 500 [mW]	Storage Temperature Range ··········· -40 to +125 [℃]


#### **■BLOCK DIAGRAM**

BDE-33546-000-00

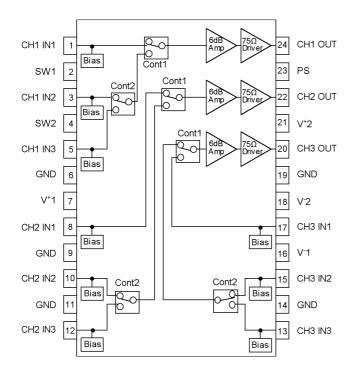

#### **■PIN CONFIGURATION**


BEE-33546-000-01

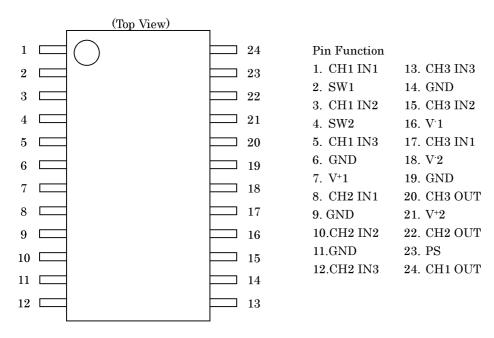

### TRANSISTOR, REGULATOR IC BLOCK DIAGRAM

TO-92M		TO-92		TO-220		TO-92L	
123	<ol> <li>Emitter</li> <li>Collector</li> <li>Base</li> </ol>	123	<ol> <li>Emitter</li> <li>Collector</li> <li>Base</li> </ol>	123	1. GND 2. INPUT 3. OUTPUT	123	<ol> <li>Emitter</li> <li>Collector</li> <li>Base</li> </ol>
KTC2874B KRA107M KRA104MT	KSC2785Y KRC107M KRC104M	KTD1302T KTC3200GR KTA1271Y	KTA1268GR KTC3198Y KSA1175YT	MCNJM7905	MC7915C L7905 L7915	KTA1024Y	KSC2316Y
TO-126		TO-92		TO-220		TO-3P	
123	<ol> <li>Emitter</li> <li>Collector</li> <li>Base</li> </ol>	123	<ol> <li>Emitter</li> <li>Base</li> <li>Collector</li> </ol>	123	1. INPUT 2. GND 3. OUTPUT	1 2 3	1. Base 2. Collector 3. Emitter
2SA13600 KTD600KG	2SC3423O	KSA733CYT		MC7815C MC7809 NJM7824	MC7805C L7805 L7815	2SB1560 2SD2390 2SA1360 2SB1647	

NJM2391DL1-25 NJM2391DL1-33 LOW DROPOUT VOLTAGE REGULATOR

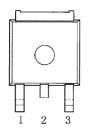


PIN FUNCTION 1. IN


2. GND


3. OUT


KRC102S PNP 3 1) Emitter 2) Base 3) Collector 2 1 KTC4075GR NPN KTA2014GR PNP


KP1010 photocoupler 1. Anode 1 [ 2. Cathode 3. Emitter 4. Collector

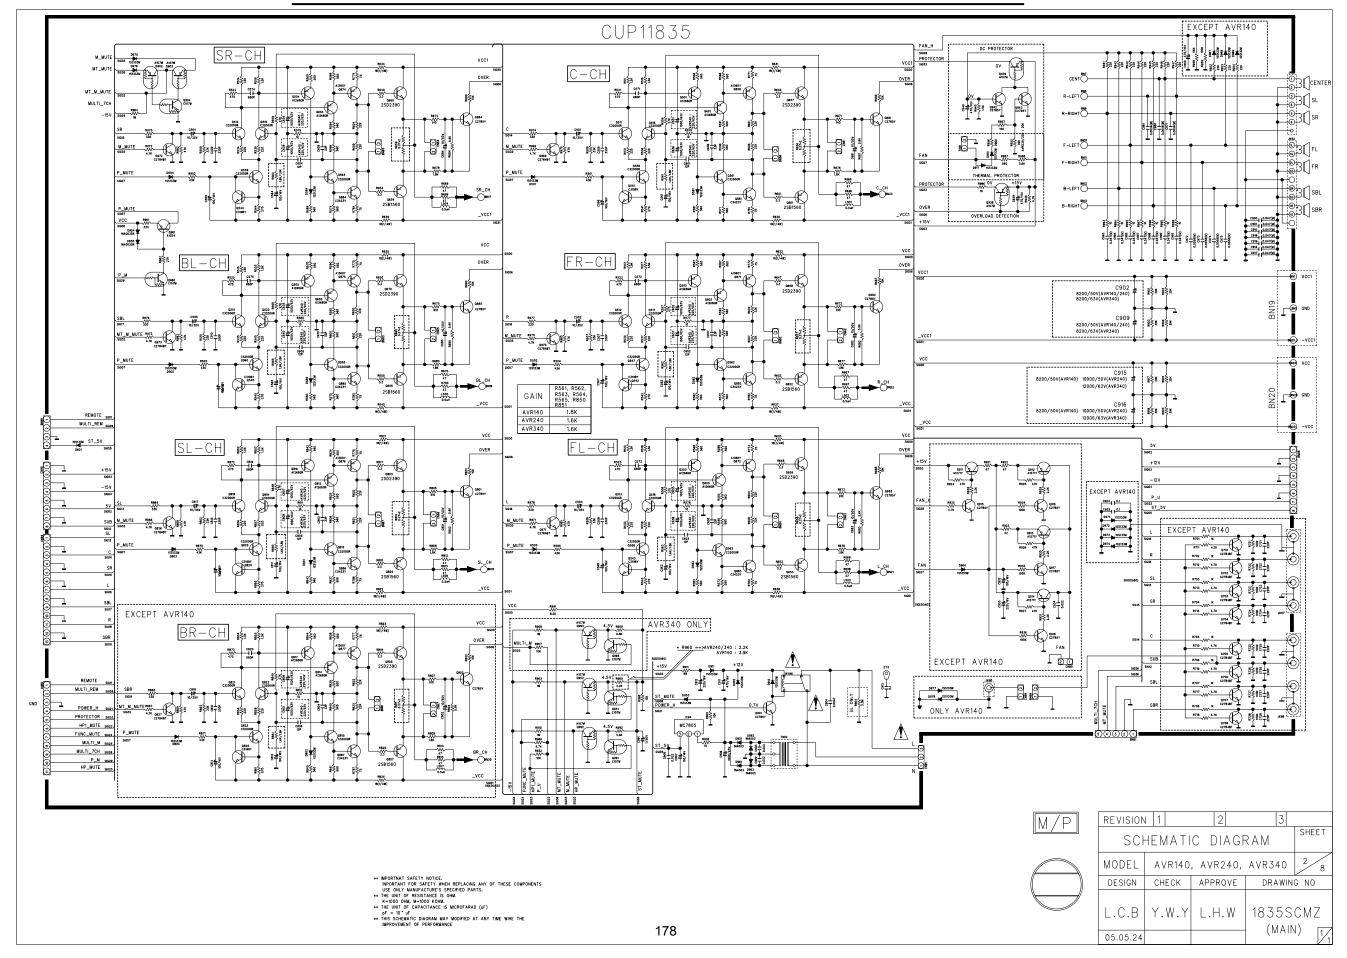


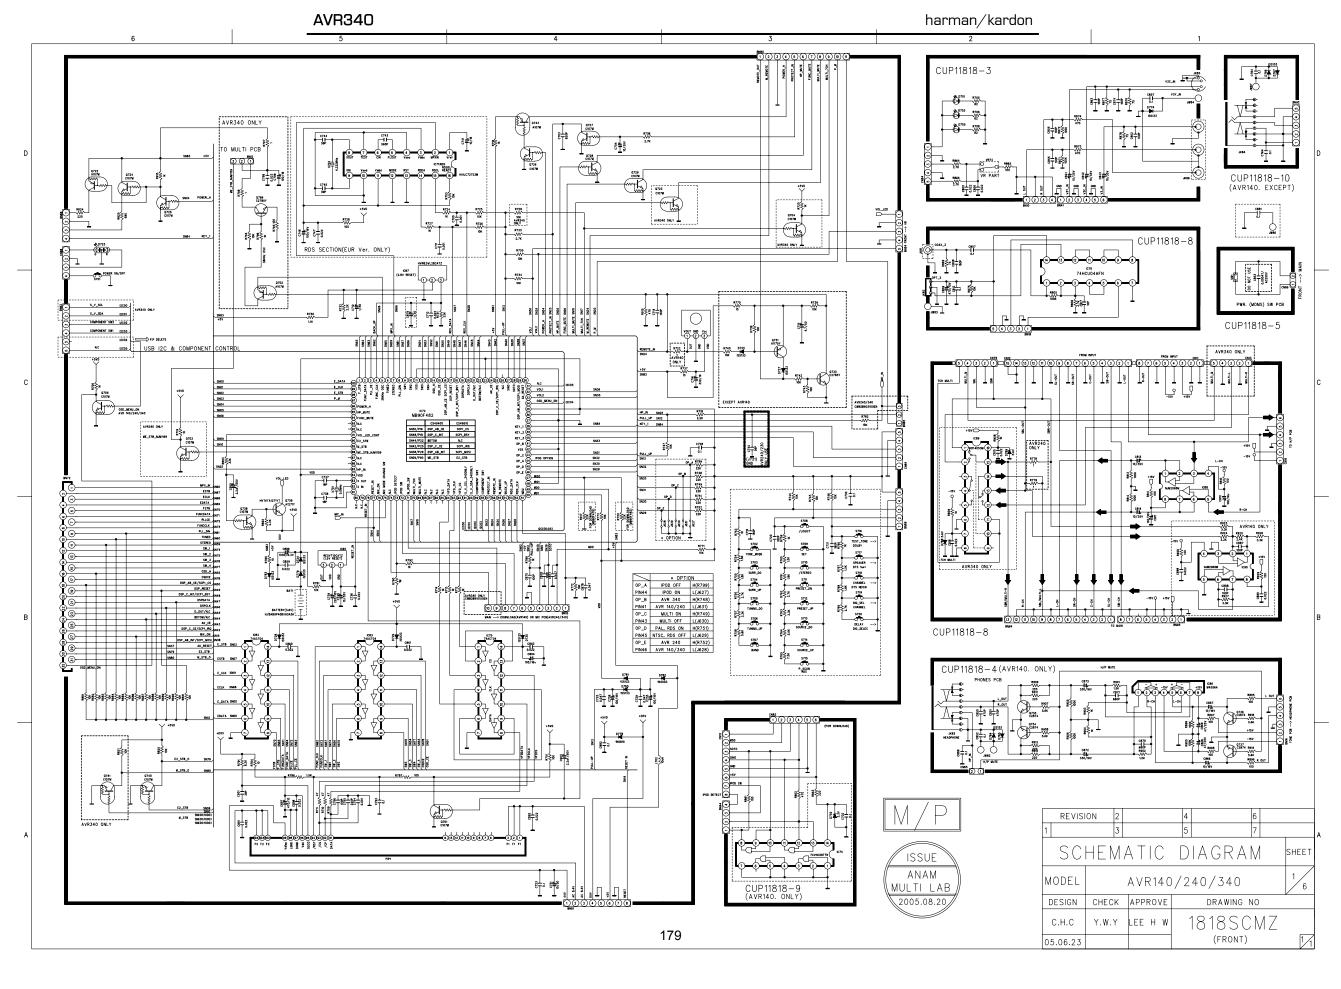

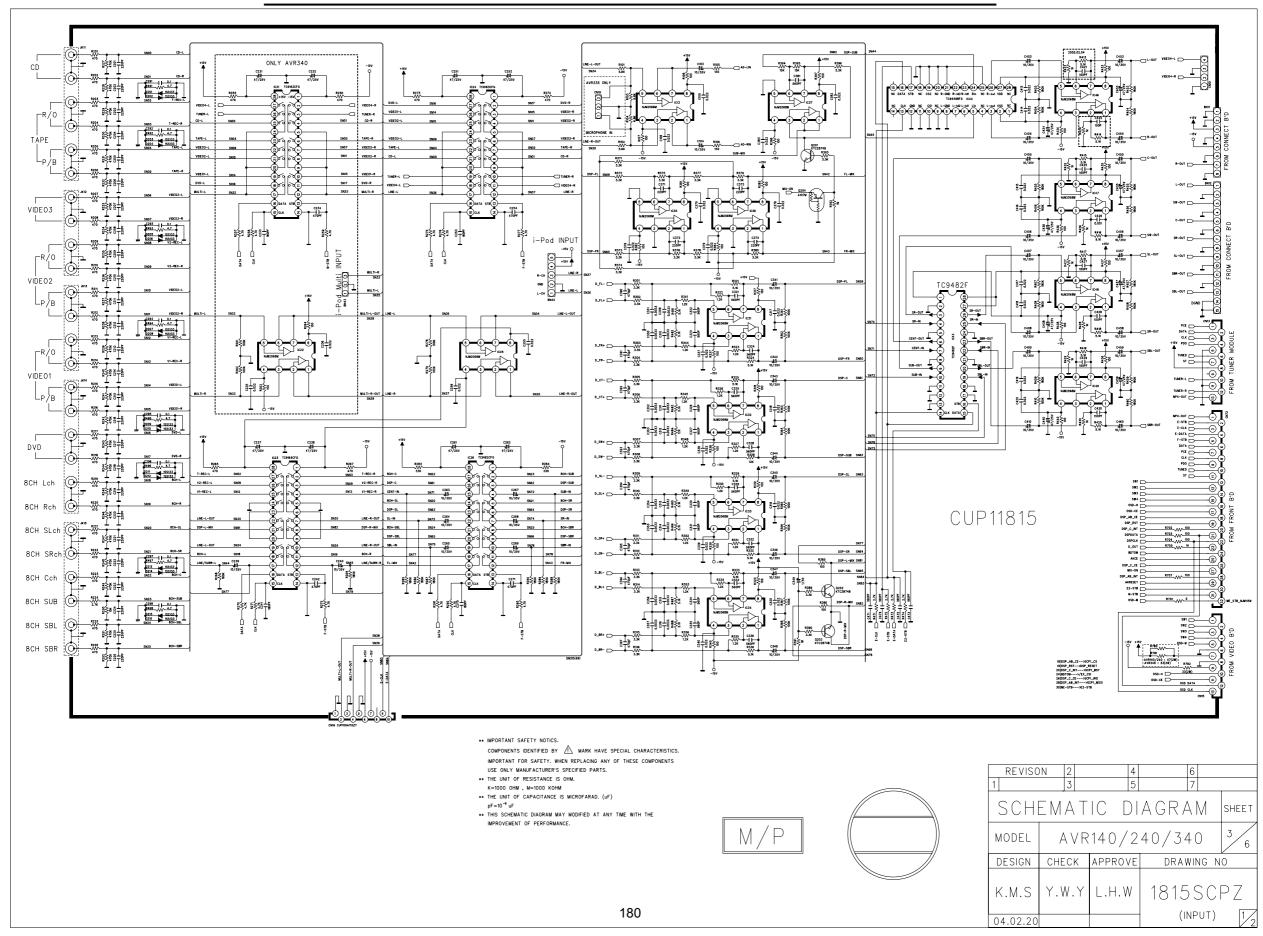

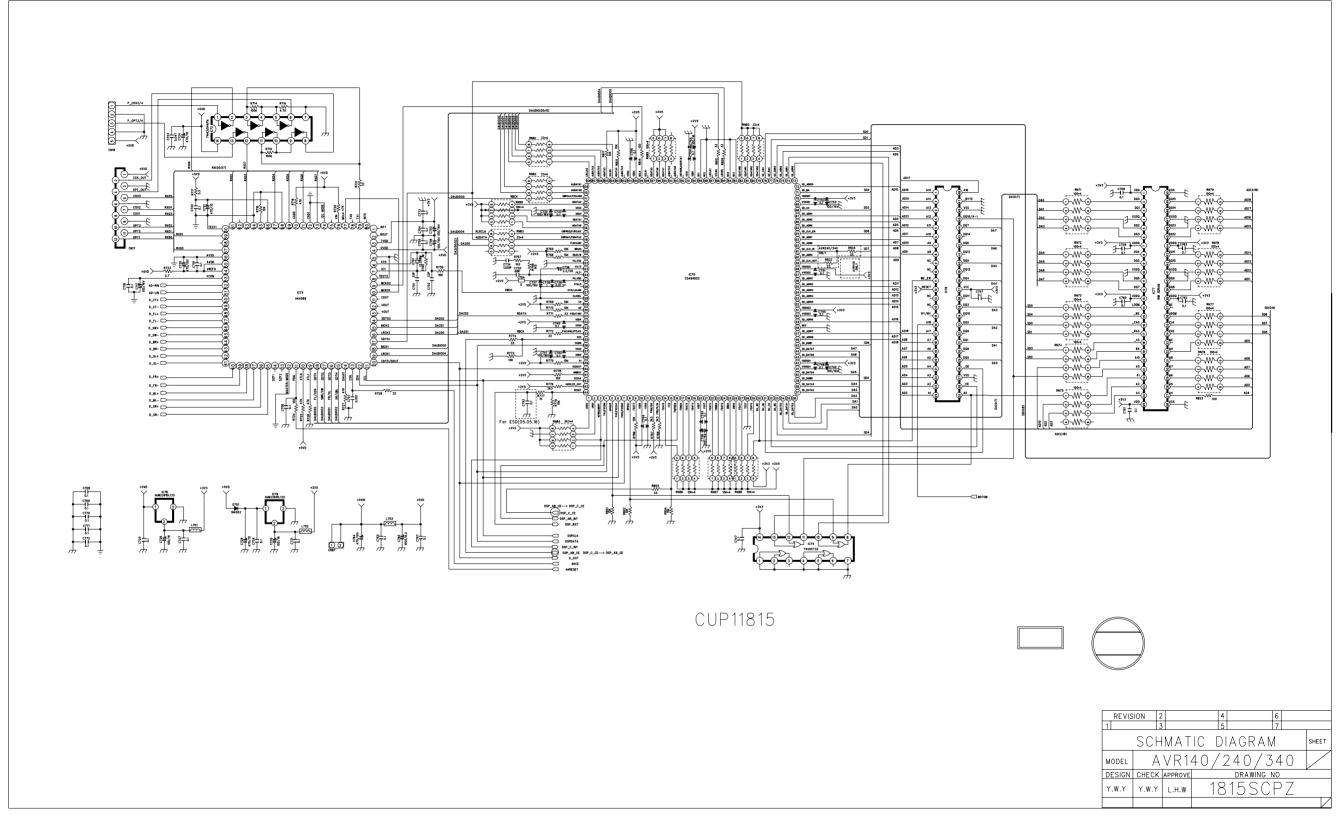

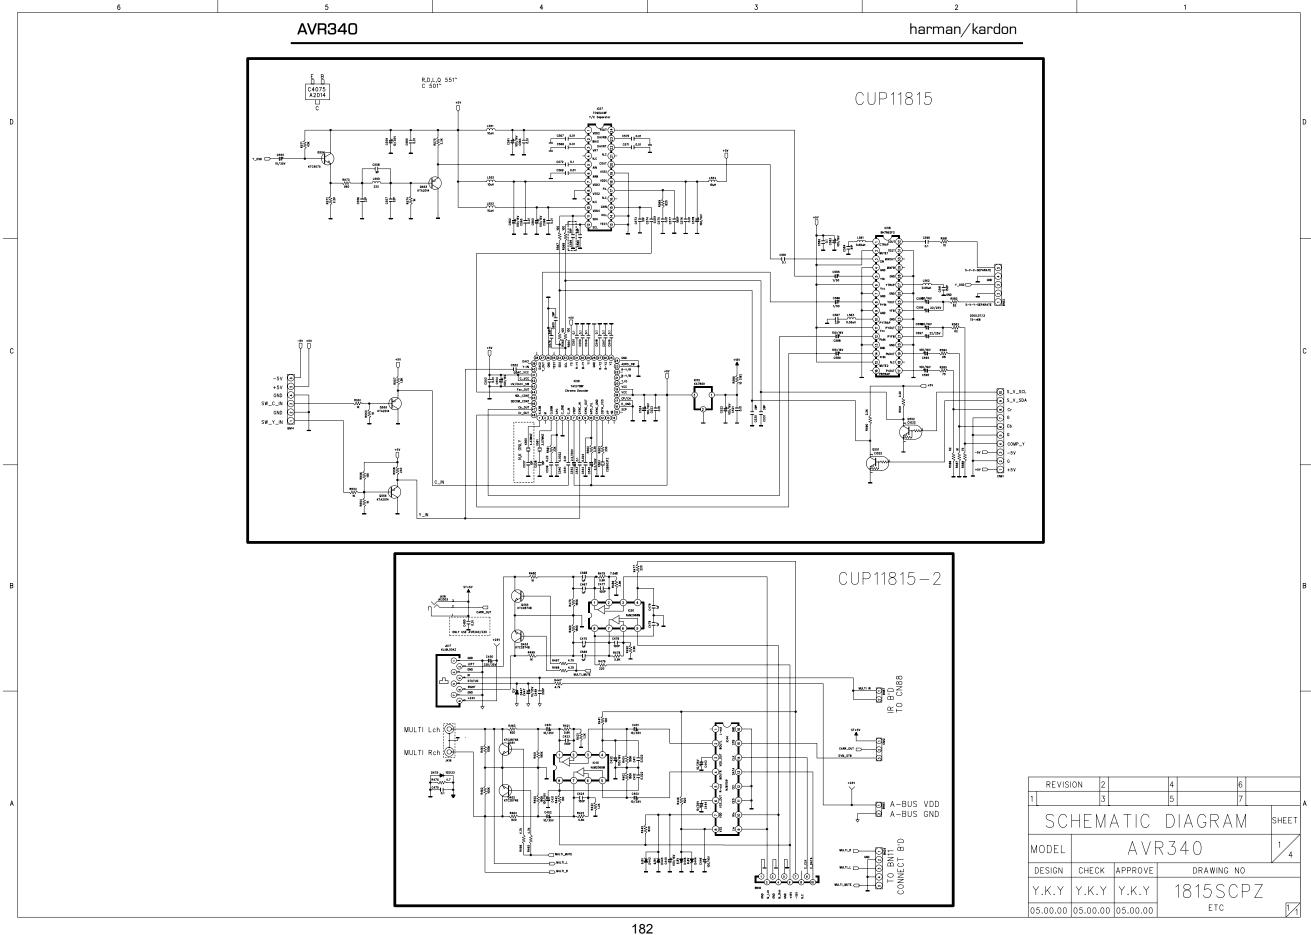

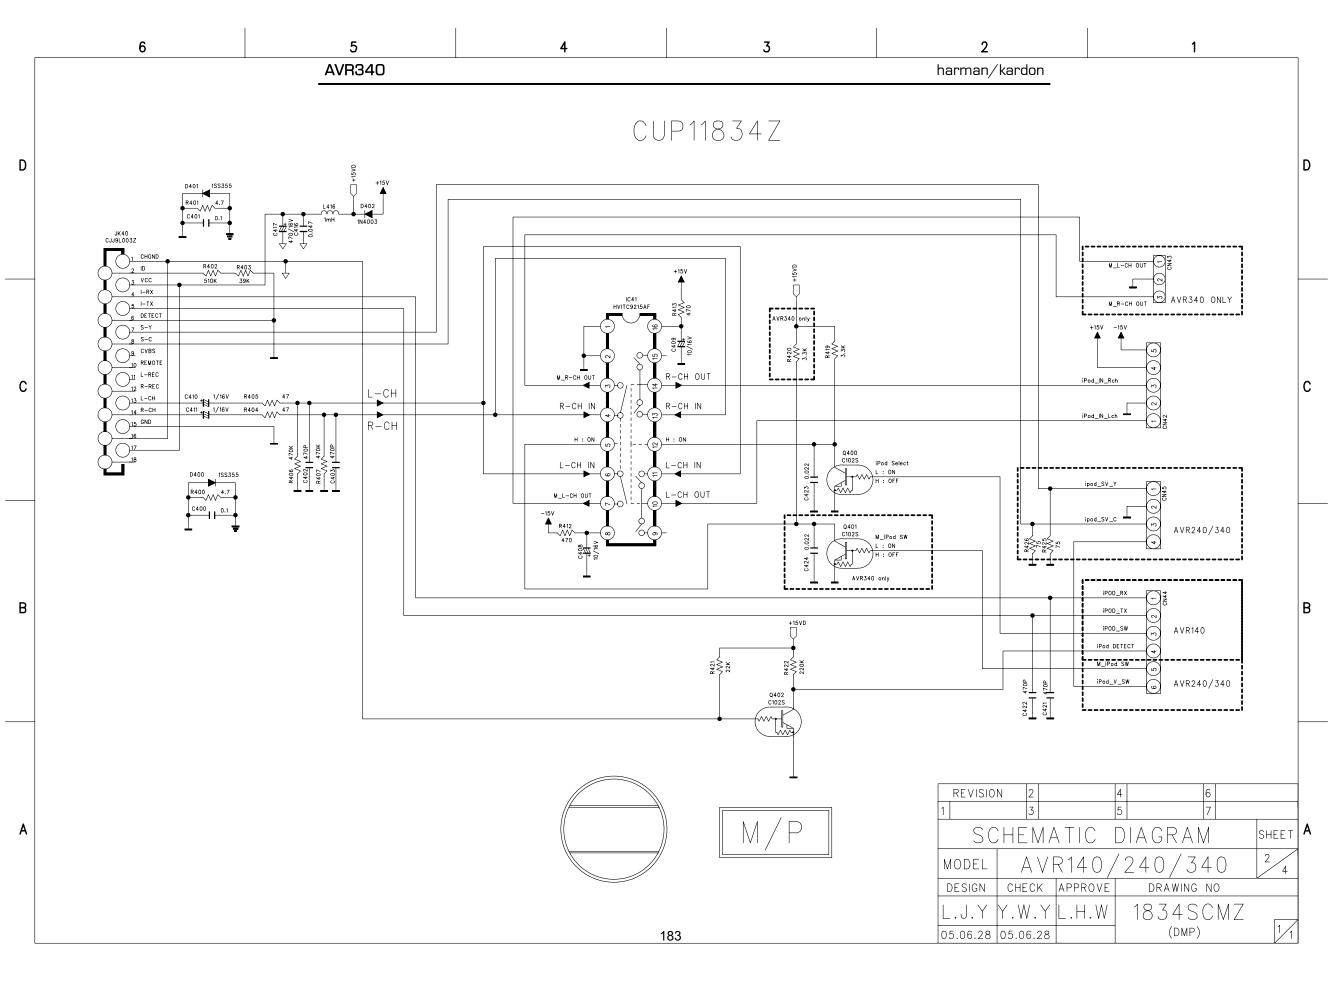

AVR340

